

Intel® Server Board SE7501BR2 Product Guide

**A Guide for Technically Qualified Assemblers of Intel® Identified
Subassemblies/Products**

Order Number: A97020-002

Disclaimer

Information in this document is provided in connection with Intel® products. No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted by this document. Except as provided in Intel's Terms and Conditions of Sale for such products, Intel assumes no liability whatsoever, and Intel disclaims any express or implied warranty, relating to sale and/or use of Intel products including liability or warranties relating to fitness for a particular purpose, merchantability, or infringement of any patent, copyright or other intellectual property right. Intel products are not designed, intended or authorized for use in any medical, life saving, or life sustaining applications or for any other application in which the failure of the Intel product could create a situation where personal injury or death may occur. Intel may make changes to specifications and product descriptions at any time, without notice.

Intel and Xeon are trademarks or registered trademarks of Intel Corporation or its subsidiaries in the United States and other countries.

† Other names and brands may be claimed as the property of others.

Copyright © 2002, Intel Corporation. All Rights Reserved.

Contents

1	Description.....	9
	Server Board Features	9
	Server Board Connector and Component Locations	11
	Back Panel Connectors	12
	Intel® Chipset.....	12
	Processor(s)	14
	Memory	15
	PCI I/O Subsystem	15
	Video Controller.....	17
	Network Interface Controllers (NICs)	18
	ACPI	20
	Wakeup Events	20
	System Management	21
	Baseboard Management Controller	21
	Field Replaceable Units and Sensor Data Records	22
	System Event Log	22
	Platform Event Management	22
	Emergency Management Port	23
	Intel® Server Management.....	24
	Security	25
	Secure Mode	26
	Password Protection.....	27
	Intrusion Switch Monitoring.....	28
	Floppy Write Protection	28
	Fixed Disk Boot Sector Write Protect.....	28
	Power Switch Mask	28
2	Server Board Installations and Upgrades.....	29
	Tools and Supplies Needed	29
	Before You Begin	29
	Emissions Disclaimer.....	29
	Safety Cautions	29
	Safety and Regulatory Compliance	30
	Minimum Hardware Requirements	31
	Installation Notes.....	31
	Installation Procedures.....	32
	Installing the I/O Gasket and Shield.....	32
	Installing Chassis Standoffs.....	34
	Installing the Rubber Bumper	35
	Installing the Server Board	36
	Making Connections to the Server Board.....	37
	Cable Routing.....	38
	Installing or Replacing Processor(s)	39
	Installing Memory	52
	Finishing Up	53
	Replacing the Back up Battery.....	54

3	POST and the BIOS Setup Utility	57
	Power-On Self-Test (POST)	57
	Temporarily Changing the Boot Device Priority.....	57
	BIOS Setup	58
	If BIOS Setup Is Inaccessible	58
	Starting Setup.....	58
	Setup Menus	59
	Menu Selection Bar	60
	Main Menu.....	60
	Advanced Menu.....	62
	Security Menu	66
	Server Menu.....	67
	Boot Menu	71
	Exit Menu	72
	Upgrading the BIOS	73
	Preparing for the Upgrade	73
	Performing the BIOS Upgrade	74
	Changing the BIOS Language	75
	Hot Keys	75
4	Configuration Software and Utilities	77
	System Software Update Sequence	77
	Server Configuration Wizard	78
	Direct Platform Control (DPC) Console	79
	DPC Console Modes of Operation.....	80
	Running the DPC Console.....	80
	Using the System Setup Utility	81
	Creating SSU Diskettes	81
	Running the SSU.....	82
	Setting Boot Device Priority	83
	Setting Passwords and Security Options	83
	Viewing the System Event Log	85
	Viewing FRU Information.....	85
	Viewing Sensor Data Records	86
	Updating System Firmware and BIOS	86
	Managing the Server Remotely	87
	How to Set Up Remote LAN Access.....	87
	How to Set Up Remote Modem or Serial Access.....	89
	How to Set Up Paging Alerts	91
	How Set Up LAN Alerts	93
	Firmware Update Utility Description	95
	How to Run the Firmware Update Utility	95
	FRU/SDR Load Utility Description	95
	How to Use the FRU/SDR Load Utility.....	96
	Setting a System Asset Tag	98
	Creating Diskettes.....	98
	Installing a Service Partition (Optional).....	99
	Saving and Restoring the System Configuration	100
	Using the Intel Server Management and Intel [®] SMaRT Tool (Optional)	102

Installing Intel Server Management.....	103
Installing Intel SMaRT Tool.....	103
5 Solving Problems	105
Resetting the System	105
Initial System Startup	105
Checklist.....	105
Running New Application Software	106
Checklist.....	106
After the System Has Been Running Correctly	106
Checklist.....	106
More Problem Solving Procedures	107
Preparing the System for Diagnostic Testing	107
Monitoring POST	107
Verifying Proper Operation of Key System Lights	107
Confirming Loading of the Operating System	107
Specific Problems and Corrective Actions	108
Power Light Does Not Light	108
No Characters Appear on Screen	108
Characters Are Distorted or Incorrect	109
System Cooling Fans Do Not Rotate Properly	109
Diskette Drive Activity Light Does Not Light	110
Hard Disk Drive Activity Light Does Not Light	110
CD-ROM Drive Activity Light Does Not Light	110
Cannot Connect to a Server	110
Problems with Network	111
PCI Installation Tips.....	111
Problems with Application Software	111
Bootable CD-ROM Is Not Detected.....	111
Recovering the BIOS.....	112
Clearing the Password with the Password Jumper.....	114
Clearing CMOS with the CMOS Jumper.....	115
6 Getting Help	117
7 Technical Reference	119
Configuration Jumpers	119
Front Panel Header	120
8 Regulatory and Integration Information.....	121
Product Regulatory Compliance	121
Product Safety Compliance	121
Product EMC Compliance	121
Product Regulatory Compliance Markings.....	122
Electromagnetic Compatibility Notices	123
FCC (USA)	123
Industry Canada (ICES-003).....	124
Europe (CE Declaration of Conformity).....	124
Taiwan Declaration of Conformity	124
Korean RRL Compliance	124

Australia / New Zealand.....	124
Index	125
Figures	
Figure 1. Server Board Connector and Component Locations.....	11
Figure 2. Back Panel Connectors	12
Figure 3. Attaching the Gasket to the I/O Shield.....	32
Figure 4. Attaching the Label to the I/O Shield	33
Figure 5. Installing the I/O Shield.....	33
Figure 6. Configuring Chassis Standoffs	34
Figure 7. Installing the Rubber Bumper	35
Figure 8. Attaching the Server Board	36
Figure 9. Making Connections to the Server Board	37
Figure 10. Routing the SCSI and Floppy Drive Cable.....	38
Figure 11. Opening Socket Lever and Attaching Processor.....	40
Figure 12. Attaching Retention Mechanism	41
Figure 13. Applying Thermal Grease	41
Figure 14. Attaching the Heat Sink and Retention Clip	42
Figure 15. Attaching the Wind Tunnel Fan	43
Figure 16. Attaching the Heat Sink Fan to the Top of the PWT	44
Figure 17. Attaching the Top Assembly to the Retention Mechanism	45
Figure 18. Processor and Wind Tunnel Installed	46
Figure 19. Installing the Processor Retention Brackets	47
Figure 20. Raising the Locking Bar.....	48
Figure 21. Installing Processors	48
Figure 22. Lower Locking Bar.....	49
Figure 23. Applying Thermal Grease	49
Figure 24. Installing the Heat Sink.....	50
Figure 25. Installing the Heat Sink Clip.....	51
Figure 26. Installing Memory	52
Figure 27. Making Back Panel Connections	53
Figure 28. Replacing the Backup Battery	55
Figure 29. BIOS Recovery Jumper.....	112
Figure 30. Password Recovery Jumper.....	114
Figure 31. CMOS Recovery Jumper.....	115
Figure 32. Configuration Jumper Location.....	119
Figure 33. Front Panel Header Connection Location	120

Tables

Table 1.	Server Board Features	9
Table 2.	64-bit PCI Segment Configuration	15
Table 3.	10/100 Megabit LEDs (NIC1)	19
Table 4.	Gigabit LEDs (NIC2)	19
Table 5.	Security Operation Summary	25
Table 6.	Keyboard Commands.....	59
Table 7.	On-Screen Options	60
Table 8.	Menu Selection Bar	60
Table 9.	Main Menu Selections	60
Table 10.	Primary/Secondary, Master/Slave Submenu	61
Table 11.	Processor Settings Submenu	62
Table 12.	Advanced Menu	62
Table 13.	PCI Configuration Submenu	63
Table 14.	PCI Configuration, Embedded Devices Submenu	63
Table 15.	Peripheral Configuration Submenu.....	64
Table 16.	Memory Configuration Submenu.....	65
Table 17.	Advanced Chipset Control Submenu.....	65
Table 18.	Security Menu	66
Table 19.	Server Menu	67
Table 20.	System Management Submenu	68
Table 21.	Console Redirection Submenu	69
Table 22.	Event Log Configuration Submenu.....	70
Table 23.	Fault Resilient Booting Submenu	70
Table 24.	Boot Menu.....	71
Table 25.	Boot Device Priority Submenu.....	71
Table 26.	Hard Drive Selection Submenu	71
Table 27.	Removable Devices Submenu	72
Table 28.	ATAPI CD-ROM Devices Submenu	72
Table 29.	Exit Menu	72
Table 30.	Hot Keys	75
Table 31.	Configuration Utilities	77
Table 32.	Command Line Format.....	97
Table 33.	Configuration Jumper (J1H1)	119
Table 34.	Front Panel Header Connection Descriptions.....	120
Table 35.	Product Certification Markings.....	122

1 Description

Server Board Features

The Intel® Server Board SE7501BR2 offers a “flat” design, with the processors and memory subsystems residing on the board. The server board supports dual-processor operation with the Intel® E7501 chipset and the Intel® Xeon™ processors with 512KB L2 Cache in the Flip-chip-micro Pin Grid Array2 (FC-mPGA2) or in the Interposer micro Pin Grid Array (INT-mPGA) package. The board contains embedded devices for video, network, and IDE, and it provides basic monitoring hardware and interrupt control for dual-processors and PC/AT compatible operation.

Table 1. Server Board Features

Feature	Description
Processor	Dual 533 or 400 FSB Intel® Xeon™ processors with 512KB L2 Cache
Chipset	Intel chipset: <ul style="list-style-type: none">• Supports 533 MHz Front Side Bus (FSB), backwards compatible with 400 MHz• Intel® E7501 Chipset Memory Controller Hub (MCH) (North Bridge)• Intel® 82801CA I/O Controller Hub3 (ICH3) (South Bridge)• Intel® 82870P2 PCI/PCI-X 64-bit Hub2 (P64H2) I/O hub
Memory	<ul style="list-style-type: none">• Registered DDR266 compliant ECC DIMMs providing up to 8 GB of memory• DIMM Sockets: Four 72-bit, 184-pin, gold contact• Supported DIMM sizes: 128 MB, 256 MB, 512 MB, 1 GB, and 2 GB
Video	<ul style="list-style-type: none">• Integrated onboard ATI Rage† XL 64-bit SVGA video controller• 8 MB SDRAM video memory• SVGA video port
PCI bus	Six PCI expansion slots support full or half-length boards: <ul style="list-style-type: none">• Two 64-bit, PCI-X 100 MHz expansion slots. This segment will run at 133 MHz when only one slot is populated• Two 64-bit, PCI-X 100 MHz expansion slots. Modular RAID on motherboard (M-ROMB) support provided via one of these slots.• Two 32-bit, 33 MHz, PCI expansion slots
Network	Dual integrated on-board Ethernet connections: <ul style="list-style-type: none">• Intel® PRO 10/100 Fast Ethernet Controller (Intel® 82550PM)• Intel® PRO Gigabit Ethernet Controller (Intel® 82540EM)
Integrated SCSI	Adaptec† AIC-7901 single-channel U320 SCSI controller (Single ended mode not supported)


continued

Table 1. Server Board Features (continued)

Feature	Description
System I/O	<p>National Semiconductor[†] PC87417 Super I/O Controller (LPC bus) that provides the following:</p> <ul style="list-style-type: none"> • Floppy Disk Controller • PS/2-compatible keyboard and mouse ports, 6-pin DIN connectors • Advanced parallel port, supporting Enhanced Parallel Port (EPP) level 1.7 and 1.9, ECP, compatible 25-pin connector • Two serial ports: One a-synch 9-pin RS-232C, one via 10-pin internal connector <p>Two Ethernet controllers via RJ45 connectors: one Intel Fast Ethernet 82550PM, one Intel Gigabit 82540EM</p> <p>Five USB ports: three stacked USB connectors in I/O rear panel, two via 10-pin internal header</p>
Power	<ul style="list-style-type: none"> • SSI-EEB 3.0 compliant • Power/Sleep Switch with LED Indicator • Wake on LAN[†] (WOL) • Wake on Ring (WOR)
Security	<ul style="list-style-type: none"> • BIOS password • Keyboard password protection • Floppy write-protect
Form Factor	<ul style="list-style-type: none"> • SSI-EEB 3.0 compliant form factor
Server Management ¹ IPMI 1.5 compliant	<p>Intel® Baseboard Management Controller (BMC)</p> <p>Intel® Server Management (ISM) software Version 5.5, including support for:</p> <ul style="list-style-type: none"> • Hardware health monitoring through system sensors • Proactive, alert notification through email, LAN and paging devices • Remote access and diagnostics • System Event Log manager • Sensor Data Records manager • Field Replaceable Unit manager • Remote Sensor Access manager • BIOS Console redirection • Remote Configuration/Setup • Serial over LAN • Command Line Interface over LAN • Server Configuration Wizard (SCW) • Intel® SMaRT Tool Integration • Online Rolling BIOS & Firmware Upgrade • Command Line Interface over LAN • ID LED Server Management Support

¹ For additional information refer to the Intel® Server Management ver 5.5 Installation & User's Guide available on the ISM CD.

Server Board Connector and Component Locations

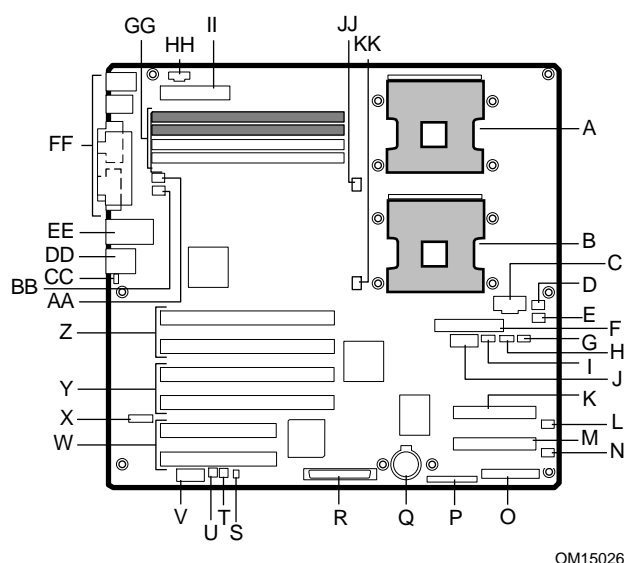

OM15026

A	Primary Processor (CPU1)	N	System Fan 3	AA	System Fan 1
B	Secondary Processor (CPU2)	O	Front Panel Connector	BB	System Fan 2
C	CPU Power	P	Jumper Block	CC	ID LED
D	System Fan 6	Q	Battery	DD	NIC 1 (10/100)
E	System Fan 5	R	LVD SCSI Connector	EE	NIC 2 (1 gigabit)
F	Floppy Disk Drive Connector	S	HDD LED Connector	FF	System I/O Connectors
G	IPMB Connector	T	Chassis Intrusion	GG	DIMM Sockets
H	HSBP B	U	EMP in Use	HH	Aux Power
I	HSBP A	V	Serial B	II	Main Power
J	USB Connector	W	32/33 PCI, Slots 5 & 6	JJ	CPU1 Fan Connector
K	Primary IDE (ATA 100)	X	ICMB	KK	CPU2 Fan Connector
L	System Fan 4	Y	64/100 PCI-X, Slots 3 & 4 ²		
M	Secondary IDE (ATA 100)	Z	64/100 PCI-X, Slots 1 & 2		

Figure 1. Server Board Connector and Component Locations

² M-ROMB support provided via Slot4

Back Panel Connectors

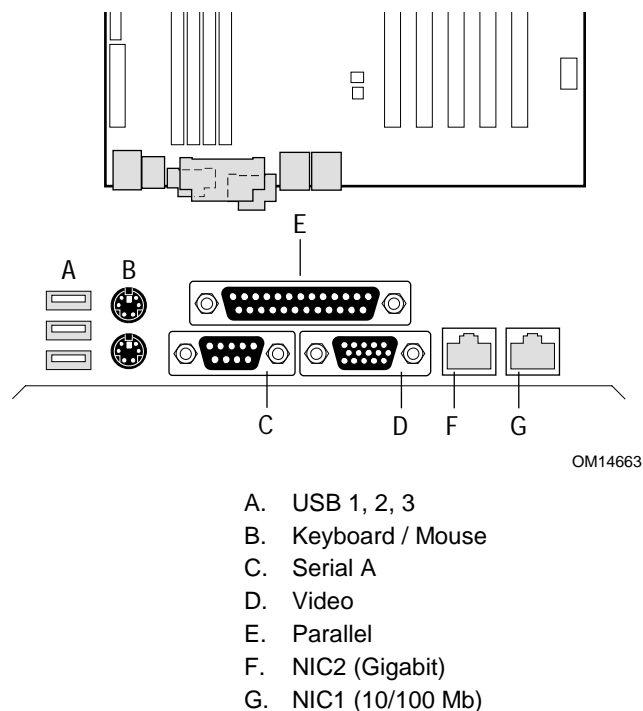


Figure 2. Back Panel Connectors

Intel® Chipset

The Intel® Server Board SE7501BR2 includes the Intel E7501 chipset (MCH, ICH3, P64H2), which provides an integrated I/O bridge and memory controller, and a flexible I/O subsystem core (PCI).

E7501 MCH

The E7501 MCH North Bridge (MCH) integrates three main functions:

- An integrated high performance main memory subsystem
- An HI 2.0 bus interface that provides a high-performance data flow path to the P64H2 (I/O Bridge)
- An HI 1.5 bus that provides an interface to the ICH3-S (South Bridge)

Other features provided by the MCH include the following:

- Full support of registered ECC on the memory bus
- Full support of Intel® x4 Single Device Data Correction on the memory interface with x4 DIMMs
- Twelve deep in-order queue
- Full support of registered DDR266 ECC DIMMs
- Support for up to 8 GB of DDR memory
- Memory scrubbing

P64H2 I/O Hub

The primary role of the P64H2 is to provide an integrated I/O bridge to the 64-bit PCI-X segments. This subsystem supports two independent 64-bit PCI-X segments, each with two 64-bit/100MHz PCI-X slots. The Adaptec AIC-7901 embedded controller is enabled via one of the PCI-X segments of the P64H2.

ICH3 I/O Controller Hub

The primary role of the ICH3 is to provide the gateway to all PC-compatible I/O devices and features. The SE7501BR2 uses the following ICH3 features:

- 32-bit/33 MHz PCI bus interface
- Low Pin Count (LPC) bus interface
- IDE interface, with Ultra DMA 100 capability
- Universal Serial Bus (USB) interface
- PC-compatible timer/counter and DMA controllers
- APIC and 8259 interrupt controller
- Power management
- General purpose I/O
- System RTC

Super I/O

The National Semiconductor[†] PC87417 Super I/O Plug-and-Play Compatible with ACPI-Compliant Controller/Extender is used on the SE7501BR2 server board. This device provides the system with:

- Two serial ports
- One parallel port
- Floppy disk controller (FDC)
- PS/2[†]-compatible keyboard and mouse controller
- Wake event control

Serial Ports

One DB9 connector is provided on the back panel for the Serial A port. The Serial A port is compatible with 16550A and 16450 modes. This port can be set to one of four different COM ports, each of which can be enabled separately. When enabled, each port can be programmed to generate edge- or level-sensitive interrupts. When disabled, the serial port interrupts are available for add-in cards.

A DH10 10-pin serial header is available on the baseboard for an optional Serial B port. The Serial B port can be used as an Emergency Management Port.

Parallel Port

The SE7501BR2 baseboard provides a 25-pin parallel port back panel connector. The Super I/O provides an IEEE 1284-compliant 25-pin bi-directional parallel port. BIOS programming of the Super I/O registers enables the parallel port and determines the port address and interrupt. When disabled, the interrupt is available to add-in cards.

Floppy Disk Connector

The floppy disk connector on the server board provides the interface to the floppy disk drive from the floppy disk controller.

Keyboard and Mouse Connectors

The separate keyboard and mouse connectors, found on the back panel of the server board, are PS/2-compatible. The keyboard and mouse connectors are interchangeable.

Processor(s)

The Intel® Server Board SE7501BR2 accommodates one or two Intel Xeon processors with 512KB L2 Cache via two SKT604 604-pin zero-insertion force (ZIF) sockets. The processors interface with the system bus at 533 MHz, backwards compatible with 400 MHz. When only one processor is installed, it should be in the socket labeled CPU1 and the other socket must be empty.

For a complete list of supported processors, see:

<http://support.intel.com/support/motherboards/server/SE7501BR2>

Dual Processor Operation

The Intel Xeon processor interface is dual-processor (DP)-ready. The processor subsystem includes a single VR (Voltage Regulator) to support both processors. Interrupt generation and notification for the processors is done by the Advanced Programmable Interrupt Controllers (APICs) in the ICH3 and P64H2. When two processors are installed, both processors must be of identical revision, core voltage, and bus/core speeds.

Boxed Processor Fan Heat Sink

Complete thermal solution including a processor wind tunnel (PWT), fan, and heatsink is supplied with each boxed Intel Xeon processor.

⇒ NOTE

Do not install the Processor Wind Tunnel when using the Intel® Server Chassis SC5200 with hot swap redundant power. To install the heat sink you must use the Retention Mechanisms supplied with the SC5200 chassis. For this chassis, see the installation instructions beginning on page 47.

Otherwise, install the processor wind tunnels according to the instructions provided in this document or in the *SE7501BR2 Quick Start User's Guide*. These instructions are different than those included with the boxed processor. For proper processor cooling, the fan inlet air temperature should be below 45 °C.

CAUTION

Clearance is required at each end of the fan heat sink to ensure unimpeded airflow for proper cooling. Restricting the airflow through the processor heat sink can cause overheating and subsequent failure of the processor.

Memory

The Intel® Server Board SE7501BR2 contains four 184-pin DIMM sockets and provides support for up to 8 GB of DDR266 memory. The memory subsystem provides dual memory bus architecture; the memory on the board is partitioned into two banks of DDR DIMMs. DIMMs must be installed in pairs, providing a 144-bit wide data path via two separate memory buses.

The server board supports up to four ECC DDR DIMMs that are compliant with the JEDEC DDR266 specification. A wide range of DIMM sizes are supported, including:

- 128 MB
- 256 MB
- 512 MB
- 1 GB
- 2 GB

The minimum supported memory configuration is 256 MB, using two 128 MB DIMMs. The maximum configurable memory size is 8 GB using four 2 GB DIMMs.

⇒ NOTE

DIMMs must be installed in pairs and must be populated by bank starting with DIMM 1A and 1B (contiguous sockets). Although the SE7501BR2 server board architecture allows the user to mix various sizes of DIMMs between banks, DIMMs must be identical within the banks. For a list of tested memory, see:

<http://support.intel.com/support/motherboards/server/SE7501BR2>

PCI I/O Subsystem

The SE7501BR2 server board provides three PCI bus segments:

- Segment C with two PCI-X 64-bit / 100 MHz slots (Slot 1 and 2)³
- Segment B with two PCI-X 64-bit / 100 MHz slots (Slot 3 and 4)⁴
- Segment A with two PCI 32-bit / 33 MHz slots (Slot 5 and 6)

The following table outlines the capabilities of each 64-bit bus segment. The least capable card installed on that bus determines the bus mode/speed. In other words, the bus will run at the speed of the slowest installed card.

Table 2. 64-bit PCI Segment Configuration

# of slots populated per segment	Segment B (mode, speed)	Segment C (mode, speed)
0	PCI-X, 100 MHz	PCI-X, 133 MHz
1	PCI-X, 100 MHz	PCI-X, 133 MHz
2	PCI-X, 100 MHz	PCI-X, 100 MHz

³ This segment will operate at 133 MHz when only one slot is populated.

⁴ Modular RAID on Motherboard (M-ROMB) support is provided via Slot 4.

Segment C: 64-bit / 100 MHz PCI-X Capable Subsystem

The 64-bit/100 MHz PCI-X segment includes:

- Two 3.3 V keyed full-length, full height PCI expansion slots that can support PCI-X add in cards up to 133 MHz (PCI-X Slots 1 and 2). These slots are backward compatible to 64-bit/100 MHz, 64-bit/66 MHz, 64-bit/33 MHz, and universal keyed 32-bit/33 MHz PCI cards.

The PCI-X features include:

- Bus speed up to 133 MHz
- 3.3 V signaling environment
- Burst transfers up to a peak of 1000 Megabytes per second (MB/s)
- 8-, 16-, 32-, or 64-bit data transfers
- Plug-and-Play ready
- Parity enabled

⇒ NOTES

Speed on the PCI-X will be programmed by the BIOS according to loading on the segment. When a segment is configured with a single PCI-X 64/133 card the bus will work at 133 MHz; with two PCI-X 64/133 cards the bus will work at 100 MHz.

If you install a slower card into one of the PCI-X 64/100 connectors, the bus speed for both connectors will be lowered to the speed of the slowest adapter.

Segment B: 64-bit / 100 MHz PCI-X Capable Subsystem

The 64-bit/100 MHz PCI-X segment includes the following embedded device and connectors:

- Two 3.3 V keyed full-length, full height PCI expansion slots that can support PCI-X add in cards running at 100 MHz (PCI-X Slots 3 and 4). These slots are backward compatible to 64-bit/66 MHz, 64-bit/33 MHz and universal keyed 32-bit/33 MHz PCI cards.
- Integrated Adaptec AIC-7901 U320 Single Channel SCSI Controller

The PCI-X features include:

- Bus speed up to 100 MHz
- 3.3 V signaling environment
- Burst transfers up to a peak of 800 Megabytes per second (MB/s)
- 8-, 16-, 32-, or 64-bit data transfers
- Plug-and-Play ready
- Parity enabled

⇒ NOTE

If you install a slower card into one of the PCI-X 64/100 connectors, the bus speed for both connectors will be lowered to the speed of the slowest adapter.

Modular RAID on Motherboard

The SE7501BR2 server board supports M-ROMB or Zero Channel RAID (ZCR) that allows the on-board SCSI controller to be “hidden” from the system and used by the RAID processor on the add-in card. This support is provided via hardware and BIOS support on PCI-X Slot 4. This PCI segment may operate as PCI 64-bit/66 MHz with some ROMB RAID controllers.

Segment A: 32-bit/33 MHz PCI Subsystem

The 32-bit / 33 MHz PCI segment includes the following embedded devices and connectors:

- Two 5 V keyed full-length, full height PCI expansion slots (PCI Slots 5 and 6)
- Integrated Intel 10/100 Fast Ethernet Controller (Intel 82550PM)
- Integrated Intel Gigabit Ethernet Controller (Intel 82540EM)
- Integrated ATI Rage XL video controller with 8 MB of on-board SDRAM

32-bit/33 MHz PCI features include:

- Bus speed up to 33 MHz
- 5 V signaling environment
- Burst transfers up to a peak of 132 MB/s
- 8-, 16-, or 32-bit data transfers
- Plug-and-Play ready
- Parity enabled

Video Controller

The Intel® Server Board SE7501BR2 includes an ATI Rage XL video controller, 8 MB video SDRAM, and support circuitry for an embedded SVGA video subsystem.

The SVGA subsystem supports a variety of modes: up to 1600 X 1200 resolution for CRT displays, up to 1024 x 768 resolution for TFT displays, and up to 16.7 million colors with a refresh rate of up to 100Hz. The SE7501BR2 server board provides a standard 15-pin VGA connector, and external video blanking logic for server management console redirection support.

Network Interface Controllers (NICs)

The Intel® Server Board SE7501BR2 includes one 10/100Base-TX network connection, based on the Intel 82550PM Fast Ethernet Controller (NIC1)⁵, and one 10/100/1000Base-TX network connection, based on Intel 82540EM Gigabit Ethernet Controller (NIC2). Facing the rear of the system, the gigabit controller is on the left, next to the video connector.

You can disable the embedded NICs in BIOS Setup Utility. When disabled, the controller(s) are not visible to the operating system.

⇒ NOTE

To ensure EMC (Electromagnetic Compatibility) product regulation compliance, the system must be used with a shielded LAN cable.

Supported Network Features

The SE7501BR2 supports the following features of the 82550PM and 82540EM controllers:

- Glueless 32-bit PCI Bus Master Interface (Direct Drive of Bus), compatible with PCI Bus Specification, revision 2.1 / 2.2
- Chained memory structure, with improved dynamic transmit chaining for enhanced performance
- Programmable transmit threshold for improved bus utilization
- Early receive interrupt for concurrent processing of receive data
- On-chip counters for network management
- Autodetect and autoswitching for 10 or 100 MB/s network speeds (82550 only)
- Support for 10 Mb/s, 100 Mb/s, and 1000 Mb/s networks, full or half duplex-capable, with back-to-back transmit at 100 MB/s
- Integrated physical interface to TX magnetics
- The magnetics component terminates the 100Base-TX connector interface. A flash device stores the network ID
- Support for Wake on LAN (WOL)
- Advanced Networking Service Features (Teaming, Load balancing)

⁵ NIC1 is the designated Intel Server Management NIC.

NIC Connector and Status LEDs

The Intel® Server Board SE7501BR2 supports two RJ45 connectors, one for the 10/100-Megabit Fast Ethernet controller (NIC1), and the other for the Gigabit Ethernet controller (NIC2).

NIC1 drives two LEDs on its RJ45 connector. These LEDs indicate link/activity on the LAN and the speed of operation. This connector is on the right side when looking at the I/O area at the back of the board. The green LED to the right of the connector indicates a network connection is in place when it is on and transmit/receive activity when it is blinking. The green LED to the left of the connector indicates 10 Mbps operation when it is off and 100 Mbps operation when it is lit and. See the following table for an overview.

Table 3. 10/100 Megabit LEDs (NIC1)

LED Color	LED State	NIC1 State
Green (left)	Off	10-Mbps
	On	100-Mbps
Green (right)	On	On
	Blinking	Transmit / Receive activity

NIC2 drives two LEDs located on its RJ45 connector; this connector is on left side when looking at the I/O area in the back of the board. The green LED to the right of the connector indicates a network connection is in place when it is on, and transmit/receive activity when it is blinking. The bi-color LED to the left of the connector indicates 10-Mbps when it is off, 100-Mbps operation when it is green, and 1000-Mbps operation when it is yellow. See the following table for an overview.

Table 4. Gigabit LEDs (NIC2)

LED Color	LED State	NIC2 State
Green/Yellow (left)	Off	10-Mbps
	Green	100-Mbps
	Yellow	1000-Mbps
Green (right)	On	On
	Blinking	Transmit / Receive activity

ACPI

By using Advanced Configuration and Power Interface (ACPI), an ACPI-aware operating system can place the system into a state in which the hard drives spin-down, the system fans stop, and all processing is halted. In this state the power supply is still on and the processors still dissipate some power, so the power supply fan and processor fans are still running.

⇒ NOTE

ACPI requires an operating system that supports this feature.

The server board supports sleep states S0, S1, S4, and S5. When the server board is operating in ACPI mode, the operating system retains control of the system and the OS policy determines the entry methods and wake-up sources for each sleep state – sleep entry and wake-up event capabilities are provided by the hardware but are enabled by the operating system.

- S0: Normal running state.
- S1: DC Power remains on. The operating system saves the context and enters a low-power state. The system can wake from the S1 state using a PS/2 keyboard, mouse, or USB device, by pressing the power button press, or from a wakeup event.
- S4: Hibernate or Save to Disk. The memory and machine state are saved to disk. Pressing the power button or another wakeup event restores the system state from the disk and resumes normal operation. This assumes that no hardware changes were made to the system while it was off.
- S5: Soft off. Only the RTC section of the chip set is running in this state.



CAUTION

The system is off only when the AC power is disconnected.

Wakeup Events

The SE7501BR2 system supports several wakeup events.

Wake on LAN

Wake on LAN allows system power to be activated through the network. If the system is in the S1 or S4 state, it can be turned on remotely by sending a specific packet to the remote system. The system contains a configuration option that allows the on-board NICs to be enabled to wake the system from a S4 or S5 sleep state, even if the operating system disabled Wake on LAN when it powered down the system. This provides an option for users who want to use standard, but non-secure, Wake on LAN capability for operations such as after-hours maintenance. Server management features provide a secure system power-up, plus the ability to provide BIOS boot option.

Wake on Ring

Wake on Ring allows system power to be activated through the serial ports when this option is enabled in Setup. If the system is in the S1 or S4 state, it can be turned on remotely by the Ring Indicate RI signals from the serial ports.

⇒ NOTE

Wake on Ring is disabled in Serial B if this port is enabled as a server management port.

Wake on RTC Alarm

Wake on RTC alarm allows system power to be activated through a real-time clock alarm when this option is enabled in Setup. If the system is in the S1 or S4 state, it can be turned on by an RTC trigger event.

System Management

Intel integrates system management features into the hardware and provides additional features through Intel® Server Management (ISM) software version 5.5. A brief description of the features is provided below. For instructions on using the features described, refer to the Configuration Software and Utilities chapter, beginning on page 77.

Baseboard Management Controller

Intel server boards incorporate a baseboard management controller (BMC), which is a dedicated microcontroller for system management activities. The BMC performs the following functions:

- Monitors system components and sensors, including processors, memory, fans, power supplies, temperature sensors, and chassis intrusion sensors.
- Manages nonvolatile storage for the system event log (SEL), sensor data records (SDRs), and baseboard field-replaceable unit (FRU) inventory.
- Interfaces with the emergency management port (EMP) and LAN1 port to send alerts and interact with remote management systems.
- Provides the main front panel control functions (power on/off, reset, and so on).

Field Replaceable Units and Sensor Data Records

Field replaceable units (FRUs) are major modules in the chassis that contain active electronic circuitry. FRUs can store information-such as board serial number, part number, name, and asset tag-that can be read using the System Setup Utility. The BMC stores FRU information for the baseboard in a nonvolatile storage component on the board.

The BMC uses Sensor Data Records (SDRs) to identify the sensors in the system for monitoring. SDRs provide a list of the sensors, their characteristics, location, type, and type-specific information, such as default threshold values, factors for converting a sensor reading into the appropriate units (mV, rpm, degrees Celsius), and information on the types of events that a sensor can generate. The BMC stores SDR information in a nonvolatile storage component on the baseboard.

You can use the FRU/SDR Load Utility to initialize or update the FRU and SDR information. Intel® server boards are shipped from the factory with some sensors disabled because the actual configuration of the chassis is only determined when the user completes the system configuration. For example, chassis-specific FRU information, such as chassis part number, must be configured when the system is configured. For these reasons, it is important to run the FRU/SDR Load Utility as part of the system setup process. You should also run the FRU/SDR Load Utility whenever you change the number of fans, processors, or power supplies in the server.

System Event Log

The BMC manages a system event log (SEL), where it records significant or critical system events. These events include temperatures and voltages out of range, fan failures, and other sensor-related events. The BIOS, software, and other devices can also log events by sending messages to the BMC. The SEL is stored in nonvolatile storage.

You can view the current contents of the SEL by using the System Setup Utility.

Platform Event Management

Events can trigger alerts and other actions by the BMC. The server is configured with the following set of standard events:

- Temperature sensor out of range
- Voltage sensor out of range
- Fan failure
- Chassis intrusion
- Power supply failure
- Memory error
- POST error
- Processor fault resilient booting (FRB) failure
- Fatal nonmaskable interrupt (NMI) from a source other than the front panel switch
- Watchdog timer reset, power down, or power cycle
- System restart (reboot)

Alerts can take either of these forms:

- **Platform Event Pages** – the BMC dials a paging service and sends a predefined paging string. To use platform event paging (PEP), you must attach an external modem to the emergency management port (Serial B). Use the Server Configuration Wizard to configure the pager and emergency management port information.
- **BMC LAN alerts** – the BMC sends an alert to a predefined destination on the LAN.

You can configure PEP and BMC LAN alerts by using the Server Configuration Wizard or the System Setup Utility.


Emergency Management Port

The emergency management port (EMP) refers to the use of the Serial B port, with either an external modem or direct serial connection, for remote management. The BMC controls the port and interfaces with remote access software, such as the Direct Platform Control or the Client System Setup Utility applications in Intel Server Management.

You can configure the EMP by using the Server Configuration Wizard or the System Setup Utility.

EMP and Serial Over LAN

The Serial B port 10-pin header on the board can be configured in several different ways: as a standard serial port, as an Emergency Management Port, or for serial output redirection over a LAN. You can configure these settings using either the System Setup Utility or the Server Configuration Wizard.

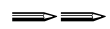

NOTES

SC5200 Server Chassis considerations: If you have configured the Serial B port for use as an emergency management port and set it to be “always available”, the Serial B port will be accessible only by remote server management software. The operating system will never be able to access the port.

If you have configured the Serial B port for Serial Over LAN, the port’s functionality will be impacted only when there is an active Serial Over LAN session from a remote console. At all other times either the operating system or the EMP will control the port, depending on your configuration.

Intel® Server Management

Intel Server Management (ISM) version 5.5 is a system management package that is included on the ISM CD. ISM applications interact with the integrated hardware system management features of the server to allow you to monitor and manage a server. Version 5.5 provides integrated in-band (operating system up) and out-of-band (operating system down) remote management, event alerting and logging, including e-mail notification, and proactive fault management. Some of the features provided are:

- The ability to connect to the server from a Windows[†]-based client workstation over a LAN over a modem, or over a direct serial connection to the server, permitting you to manage the server from a remote location.
- Real-time monitoring and alerting for server hardware sensors.
- Emergency management when the server is off (but still connected to AC power) lets you verify the state of the server, diagnose hardware problems, and power on/off or reset the server.
- The ability to run the Client System Setup Utility to change the configuration of the managed server.

ISM can use an optional service partition on the managed server. The service partition is a special disk partition on the system drive that contains a ROM-DOS[†] operating system and DOS-based utilities, including the System Setup Utility, FRU/SDR Load Utility, and other diagnostics packages you might choose to install. The server can be booted to the service partition, either locally or remotely, to provide access to the utilities.

The service partition must be installed before the operating system is installed. Instructions for creating a service partition are available on the Quick Start Users guide.

For more information on Intel Server Management and the individual ISM applications, see the Intel Server Management Installation and User's Guide on the ISM CD.

Security

The SE7501BR2 BIOS provides a number of security features. This section describes the security features and their operation.

Table 5. Security Operation Summary

Mode	Entry Method/ Event	Entry Criteria	Behavior	Exit Criteria	After Exit
Secure Mode	Keyboard inactivity timer or runtime activation of hot key	User password enabled in Setup	On-board video goes blank if selected in Setup. Floppy writes are disabled if selected in Setup. Except for the password, no mouse or keyboard input is accepted. Keyboard LEDs flash Front panel buttons are disabled, except for NMI.	User or administrator password followed by [Enter]	Video is restored. Floppy writes are enabled. Keyboard and mouse inputs are accepted. Front panel buttons are enabled.
Secure Boot	Power On/Reset	User password and Secure Boot enabled in Setup	User is prompted for password if booting from drive A. System enters Secure Mode just before scanning option ROMs. See above for other Secure Mode behavior.	User or administrator password followed by [Enter]	See above for Secure Mode behavior.
Password on boot	Power On/Reset	User password set and password on boot enabled	System halts for User Password before scanning option ROMs. The system is not in secure mode. Except for the password, no mouse or keyboard input is accepted.	User or administrator password followed by [Enter]	Power and Reset switches are enabled. PS/2 keyboard and mouse inputs are accepted. The system boots normally. Boot sequence is determined by setup options.
Fixed disk boot sector	Power On/Reset	Set feature to Write Protect in Setup	Write protects the master record of the IDE hard drives if the system boots from a floppy. The BIOS will also write-protect the boot sector of the C: drive if it is an IDE drive.	Set feature to Normal in Setup	Hard drive will behave normally.

Secure Mode

Secure mode refers to a system state where many of the external inputs and outputs are disabled to prevent tampering. These include PS/2 ports, floppy and on-board video. When secure mode is in effect, you must enter a password before the system will accept any keyboard or mouse input, except for the password entry. When secure mode is in effect, you cannot turn off the system power or reset the server from the front panel switches.

Secure mode has no effect on functions enabled via remote server management or power control via the watchdog timer.

Taking the system out of secure mode does not change the state of system power. In other words, if you press and release the power button while secure mode is in effect, the system will not be powered down when secure mode is later removed. However, if the front panel power button remains depressed while secure mode is removed, the server will be powered off.

Secure mode is configured through the BIOS setup options or through the System Setup Utility.

Hot Key Activation

A hot key combination allows the user to activate secure mode immediately instead of waiting for the configured inactivity time-out to expire. The hot key combination is configured through Setup. Either Ctrl-Alt-L or Ctrl-Alt-Z can be configured as valid hot keys.

⇒ NOTE

Hot keys work only with PS/2 keyboards.

Secure Boot Mode (Unattended Start)

The Secure Boot mode allows the system to boot and run the operating system without requiring the user password, even if the user password is set. However, until the user password is entered, mouse and keyboard input is not accepted (except for password entry). If Secure Boot is enabled, secure mode is enabled shortly before boot. To prevent unauthorized tampering with any option ROM based setup utilities, enable the “Option ROM Menu Mask” setting in the security menu.

Using Secure Boot

When secure mode is in effect:

- You can boot the server and the operating system will run, but you must enter the user password to use the keyboard or mouse.
- You cannot turn off system power or reset the server from the front panel switches.

Secure mode has no effect on functions enabled via the Server Manager Module or power control via the real time clock.

Password Protection

The BIOS uses passwords to prevent unauthorized tampering with the system.

Entering the user password permits the modification of the time, date, language, user password, and password on boot setup fields. When a user password is configured, the server can be booted into secure mode. See the Secure Boot Mode (Unattended Start) section above. Other setup fields can be modified only if the administrator password is entered.

If a wrong password is entered three times in a row, the BIOS stops validating passwords and the BIOS security engine returns a failure for any further password validation attempt. If the user enters three wrong passwords in a row during the boot sequence (i.e., when entering Setup), the system is placed into a halt state. This feature makes it difficult to break the password by the “trial and error” method. When entering a password, the backspace key is accepted as a character of the password. Pressing the backspace key to replace a mistyped character will result in a wrong password.

If the user or administrator password is lost or forgotten, the password clear jumper can be used to clear both passwords. See Chapter 5 under “Clearing the Passwords with the Password Clear Jumper.”

If only the administrator password is set, you:

- Must enter the administrator password to enter BIOS Setup.
- Must enter the administrator password to boot the server if Password on Boot is enabled in the BIOS Setup.
- Must enter the administrator password to exit secure mode.

If both passwords are set, you:

- May enter the user password to enter BIOS Setup. However, you will not be able to change many of the options.
- Must enter the administrator password if you want to enter BIOS Setup and have access to all of the options.
- May enter either password to boot the server if Password on Boot is enabled in the BIOS Setup.
- May enter either password to exit secure mode.

Setting Passwords

Each password can be independently set or cleared in the BIOS setup utility or in the System Setup Utility. The passwords can be up to seven characters long and can contain only alphanumeric characters (a-z, 0-9). Numbers from the NumLock pad are recognized as different characters than the numbers in the top row of a standard PS/2 keyboard. The passwords are not case-sensitive.

When set, a password can be cleared by changing it to a null string.

Intrusion Switch Monitoring

To help prevent unauthorized entry or use of the server, the Intel Server Management software monitors the chassis intrusion switch if one is installed in the chassis. Opening an access cover will transmit an alarm signal to the server board, where BMC firmware and server management software process the signal. The system can be configured through ISM to respond to an intrusion a number of ways, including powering down or locking the keyboard.

Floppy Write Protection

When selected in Setup, the option for floppy write protection prevents writes to the floppy disk while the system is in secure mode. Floppy write protection is in effect only while the system is in secure mode. When not in secure mode, write protection is disabled and the floppy diskette drive operates normally.

Fixed Disk Boot Sector Write Protect

The fixed disk write-protect switch is set to “Write Protect” to prevent writes to the fixed IDE disk boot sector. This feature works only with IDE drives and only the boot sector is write protected.

Power Switch Mask

The power switch mask enables and disables the power button feature. If it set to masked, the system power cannot be turned off with the power button after booting the operating system. Termination is also disabled. Termination is a feature that terminates system power when the power switch is held down for more than four seconds.

2 Server Board Installations and Upgrades

Tools and Supplies Needed

- Phillips[†] (cross head) screwdriver (#1 bit and #2 bit)
- Needle nosed pliers
- A ruler
- Pen or pencil
- Antistatic wrist strap and conductive foam pad (recommended)

Before You Begin

Emissions Disclaimer

To ensure EMC compliance with your local regional rules and regulations, the final configuration of your end system product may require additional EMC compliance testing. For more information please contact your local Intel Representative.

See “Regulatory and Integration Information” on page 121 for product Safety and EMC regulatory compliance information. This is an FCC Class A device. Integration of it into a Class B chassis does not result in a Class B device.

Safety Cautions

These warnings and cautions apply throughout this chapter. Only a technically qualified person should configure the server board.



CAUTIONS

System power on/off: The power button DOES NOT turn off the system AC power. To remove power from system, you must unplug the AC power cord from the wall outlet. Make sure the AC power cord is unplugged before you open the chassis, add, or remove any components.

Hazardous conditions, devices & cables: Hazardous electrical conditions may be present on power, telephone, and communication cables. Turn off the server and disconnect the power cord, telecommunications systems, networks, and modems attached to the server before opening it. Otherwise, personal injury or equipment damage can result.

Risk of burn: If the server has been running, any installed processor and heat sink on the processor will be hot. To avoid the possibility of a burn, be careful when removing or installing server board components that are located near processors.

Electrostatic discharge (ESD) & ESD protection: ESD can damage disk drives, boards, and other parts. We recommend that you perform all procedures in this chapter only at an ESD workstation. If one is not available, provide some ESD protection by wearing an antistatic wrist strap attached to chassis ground—any unpainted metal surface—on your server when handling parts.

ESD and handling boards: Always handle boards carefully. They can be extremely sensitive to ESD. Hold boards only by their edges. After removing a board from its protective wrapper or from the server, place the board component side up on a grounded, static free surface. Use a conductive foam pad if available but not the board wrapper. Do not slide board over any surface.

Installing or removing jumpers: A jumper is a small plastic encased conductor that slips over two jumper pins. Some jumpers have a small tab on top that you can grip with your fingertips or with a pair of fine needle nosed pliers. If your jumpers do not have such a tab, take care when using needle nosed pliers to remove or install a jumper; grip the narrow sides of the jumper with the pliers, never the wide sides. Gripping the wide sides can damage the contacts inside the jumper, causing intermittent problems with the function controlled by that jumper. Take care to grip with, but not squeeze, the pliers or other tool you use to remove a jumper, or you may bend or break the stake pins on the board.

Safety and Regulatory Compliance

See “Regulatory and Integration Information” on page 121 for product Safety and EMC regulatory compliance information.

Intended uses: This product was evaluated for use in servers that will be installed in offices, computer rooms, and similar locations. Other uses require further evaluation.

EMC testing: Before computer integration, make sure that the chassis, power supply, and other modules have passed EMC testing using a server board with a microprocessor from the same family (or higher) and operating at the same (or higher) speed as the microprocessor used on this server board.

Server board diagram label provided: Place the label inside the chassis in an easy-to-see location, preferably oriented similarly to the server board.

Minimum Hardware Requirements

To avoid integration difficulties and possible board damage, your system must meet the following minimum requirements. For a list of qualified memory and chassis components see:

<http://support.intel.com/support/motherboards/server/SE7501BR2>

Processor

Minimum of one Intel Xeon processor with 512K cache support. For a complete list of supported processors, see:

<http://support.intel.com/support/motherboards/server/SE7501BR2>

Memory

Minimum of two 128 MB ECC, DDR266 compliant registered DIMMs on 184-pin gold DIMMs.

Power Supply

Minimum of 450 W. Your supply must provide a minimum of 1.2 A of 5 V standby current or the board will not boot.

Installation Notes

Installation Process Quick Reference

Step	Where the information is located
Remove the access cover	Your chassis manual
Install the I/O shield	Page 32
Install the standoffs	Page 34
Install the rubber bumper	Page 35
Install the server board	Page 36
Connect cables to the server board	Page 37. Refer also to your chassis manual
Install the processor and processor wind tunnel in the Intel® Server Chassis SC5200 base chassis or in a reference chassis	Page 40
Install the processor in the Intel® Server Chassis SC5200 with Hot Swap Redundant Power	Page 47
Install memory	Page 52

Installation Procedures


Installing the I/O Gasket and Shield

⇒ NOTE

An ATX 2.03-compliant I/O shield is provided with the server board. The shield is required by Electromagnetic Interference (EMI) regulations to minimize EMI. If the shield does not fit the chassis, obtain a properly sized shield from the chassis supplier.

Attaching the Gasket to the I/O Shield

1. Remove the backing strip from the gasket.
2. Press the gasket onto the inside face of the I/O shield as shown.

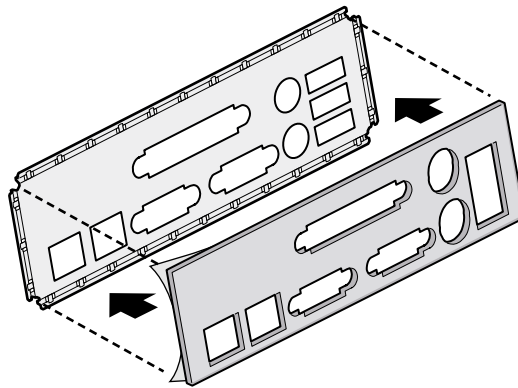

OM14074

Figure 3. Attaching the Gasket to the I/O Shield

Attaching the Label to the I/O Shield

1. Remove the backing from the label included with your server board.
2. Press the label onto the outside face of the I/O shield.

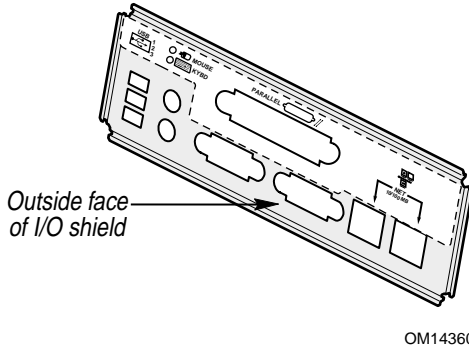


Figure 4. Attaching the Label to the I/O Shield

Installing the I/O Shield

The shield fits the rectangular opening in the back of a chassis. The shield has cutouts that match the I/O ports on the server board. Install the shield from inside the chassis before installing the server board.

1. Position one edge so that the dotted groove is outside the chassis wall, and the lip of the shield rests on the inner chassis wall.
2. Hold the shield in place, and push it into the opening until it is seated. Make sure the I/O shield snaps into place all the way around.

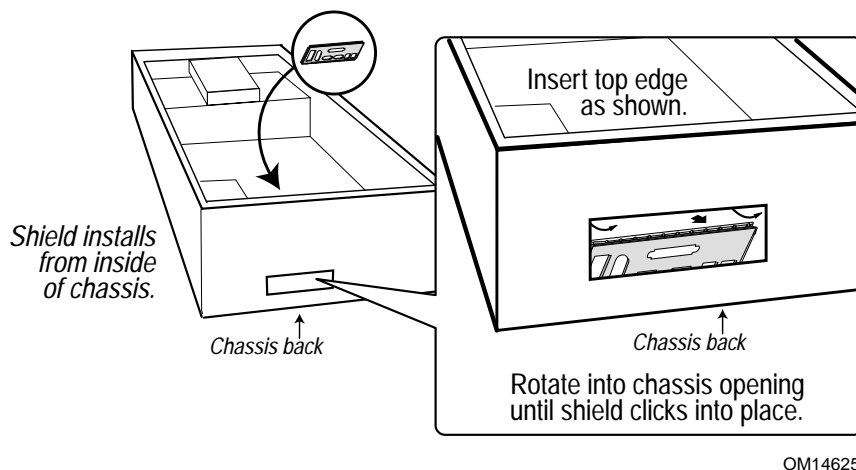


Figure 5. Installing the I/O Shield

Installing Chassis Standoffs

If your chassis does not have standoffs placed as shown below, you must rearrange them so they match the holes in the server board. Failure to properly rearrange the metal standoffs may cause the server board to malfunction and may permanently damage it.

➡ NOTE

The Intel SC5200 chassis comes with positions 1, 4, 5, 6, 18, 20, 23, and 26 preinstalled. Install standoffs in the remaining positions (16, 19, and the eight marked P). Install standoffs in the eight positions marked P, regardless of whether one or two processors will be installed. Standoffs are included with your chassis. Your chassis may be different from the illustration.


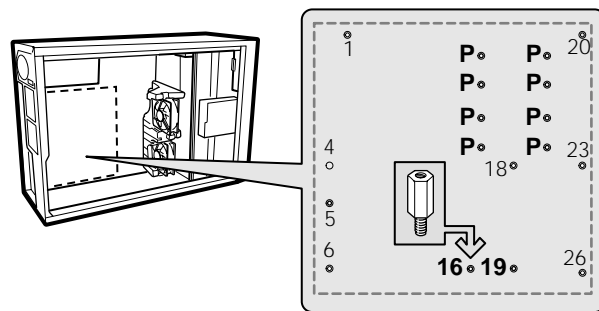


Figure 6. Configuring Chassis Standoffs

Installing the Rubber Bumper

1. Measure and mark the bumper placement location in your chassis by placing your ruler against the standoffs as shown below.
2. Remove the backing from the bumper and press it firmly into position in the chassis.

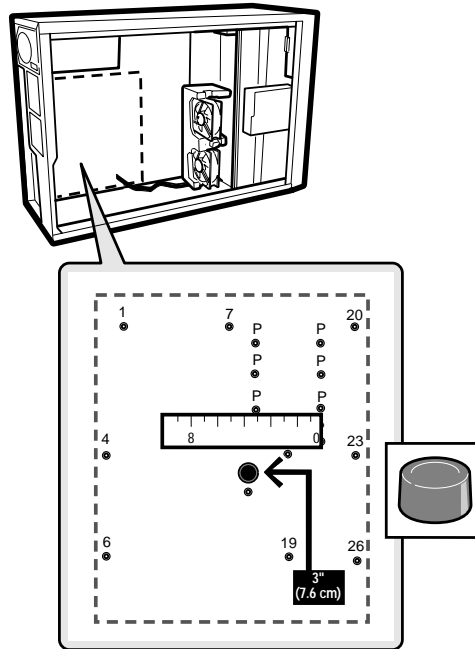

OM14835

Figure 7. Installing the Rubber Bumper


Installing the Server Board

Placing the Server Board into the Chassis

When placing the board into the chassis, carefully position the board's I/O connectors into the openings in the I/O shield on the back of the chassis.

Attaching the Server Board

Using the screws that came with your chassis, mount the board to the chassis.

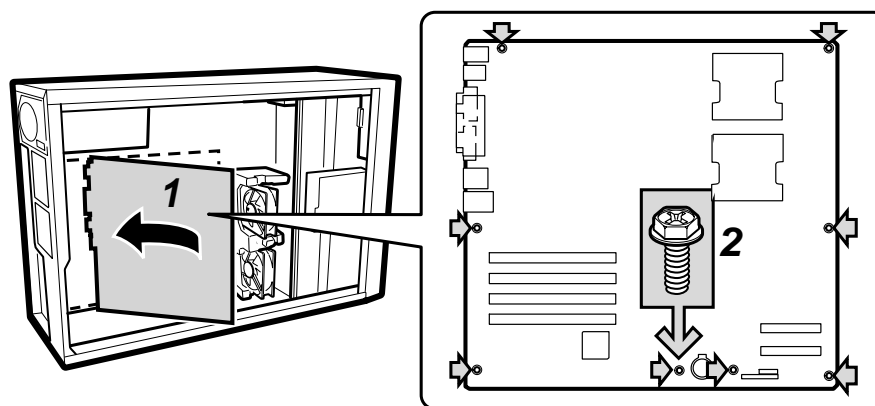


OM14836

Figure 8. Attaching the Server Board

⇒ NOTE

If a single processor is to be used, insert the screws provided into the four standoffs that border the empty processor socket (CPU2).

Making Connections to the Server Board

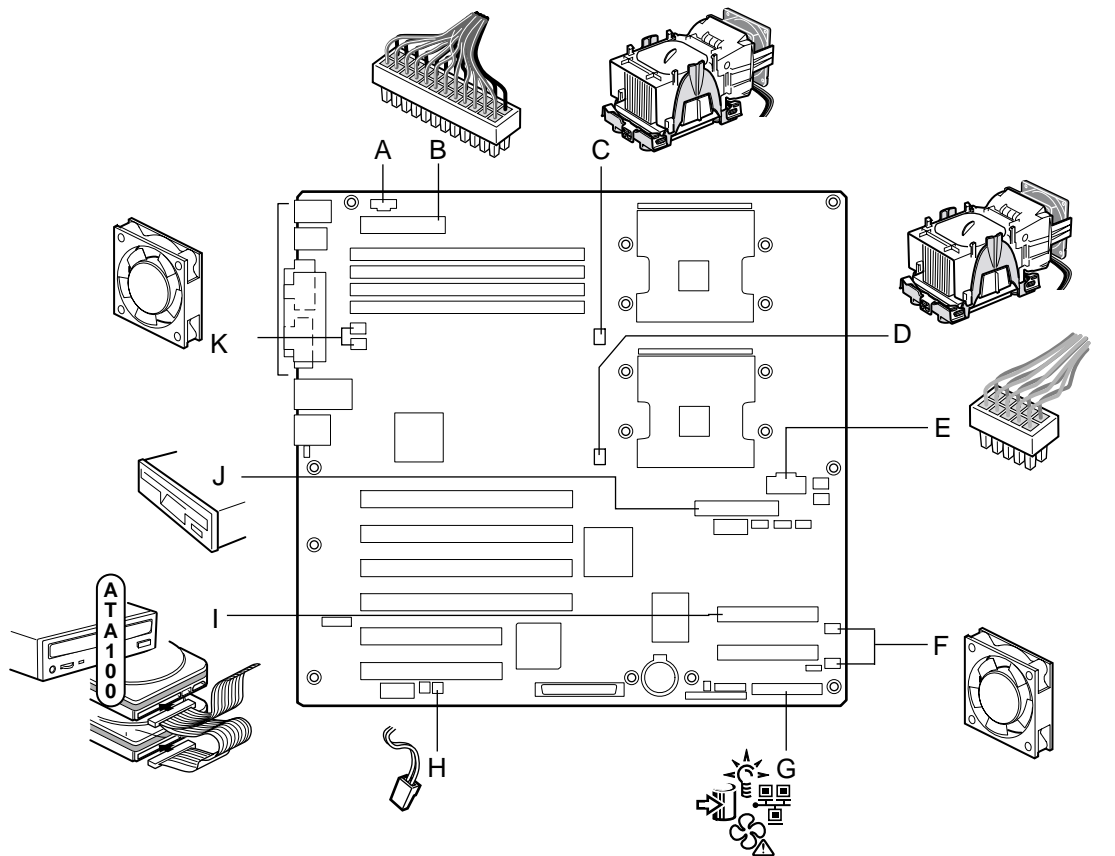

OM14422

- | | |
|--|--|
| A. Auxiliary Power | G. Front Panel |
| B. Main Power | H. Chassis Intrusion |
| C. CPU1 Fan | I. ATA 100 IDE |
| D. CPU2 Fan | J. Floppy Disk Drive Connector |
| E. Processor Power | K. System Fans 1, 2 (reading from top to bottom) |
| F. System Fans 6, 5, 4, 3 (reading from top to bottom) | |

Figure 9. Making Connections to the Server Board

Cable Routing


To ensure proper airflow within the chassis, follow the cable routing guidelines below.

SCSI Cables

SCSI cables that connect to devices in the lower device bays should be routed around the fan housing and ducts as shown below.

Floppy Drive Cable

Route the floppy drive cable as shown.

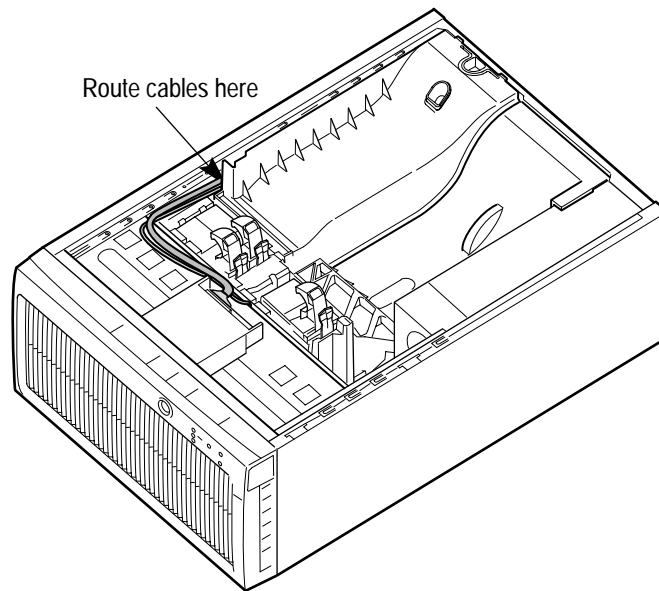

OM14641

Figure 10. Routing the SCSI and Floppy Drive Cable

Installing or Replacing Processor(s)

⇒ NOTES

Use the instructions provided below to install or replace a processor. Processor installation instructions provided with the boxed processor may be different; the instructions in this document take precedence. If a single processor is to be used, it must be installed in the processor socket labeled CPU1. This socket is located closest to the corner of the server board.

When installing a second processor, verify that the processors are identical and of the same voltage and speed. Do not mix processors of different types or frequencies.



CAUTIONS

Processor must be appropriate: You may damage the server board if you install a processor that is inappropriate for your server. Make sure your server can handle a newer, faster processor (thermal and power considerations). For exact information about processor interchangeability, contact your customer service representative or visit the Intel Customer Support website:

<http://support.intel.com/support/motherboards/server/SE7501BR2>

ESD and handling processors: Reduce the risk of electrostatic discharge (ESD) damage to the processor by doing the following: (1) Touch the metal chassis before touching the processor or server board. Keep part of your body in contact with the metal chassis to dissipate the static charge while handling the processor. (2) Avoid moving around unnecessarily.

If you are adding a second processor to your system, you must verify that the second processor is identical to the first processor, same voltage and speed. Using non-identical processors could cause system failure.

Installing the Processor and the Processor Wind Tunnel in the SC5200 Chassis or in a Reference Chassis


Use these instructions if you are installing a processor and the Processor Wind Tunnel (PWT) in the SC5200 chassis or in a reference chassis. If you are installing the Server Board SE7501BR2 in the Intel® Server Chassis SC5200 Hot Swap Redundant Power, disregard this section and instead follow the instructions provided in the section titled, “Installing the Processor in the SC5200 Hot Swap Redundant Power Chassis” on page 47.

If you are replacing a processor for which the PWT has already been installed, follow the instructions provided on page 51 titled, “Replacing a Processor.”

1. Observe the safety and ESD precautions at the beginning of this chapter and the additional precautions given here.
2. Remove power from your system by unplugging the AC power cord.
3. Remove the chassis cover (see your system or chassis documentation for instructions).
4. Lift the socket lever for the processor.
5. Align the pins of the processor with the socket, and insert the processor into the socket. Lower the socket lever completely.

➡ NOTE


Make sure the alignment triangle mark and the alignment triangle cutout align correctly. See Figure 11.

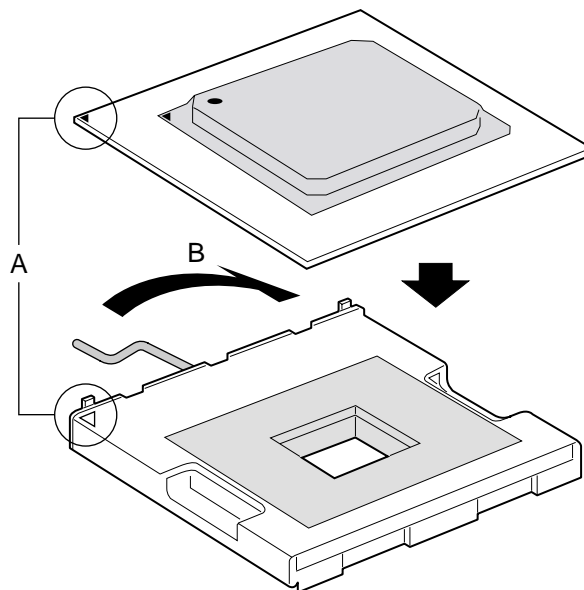

OM15042

Figure 11. Opening Socket Lever and Attaching Processor


6. Install the PWT retention mechanism over the top of the processor with the screws provided, as shown in Figure 12.

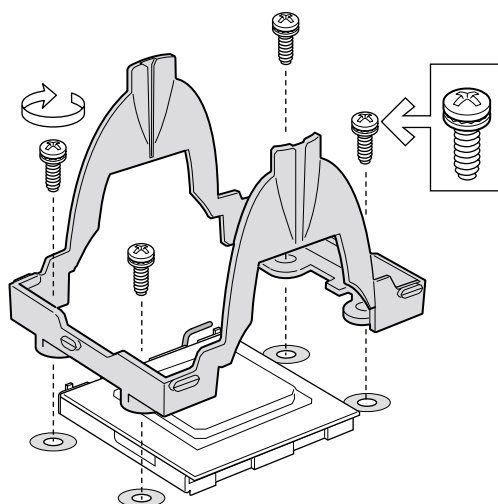

OM15037

Figure 12. Attaching Retention Mechanism

7. Apply thermal grease to the top of the processor as shown in Figure 13.

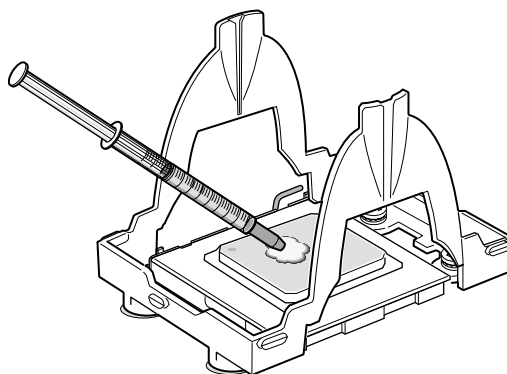


OM15040

Figure 13. Applying Thermal Grease

8. Align the heat sink over the processor and set it into place.
9. Position the retention clips over the plastic tabs at the center of the retention mechanism. Note that the slot in the clip provides room for side-to-side motion. Push down on the top of each retention clip while sliding it to over. (Figure 14, 1).
10. Engage each end of the retention clips over the plastic tabs at the sides of the retention mechanism (Figure 14, 2).
11. Press downward on the ends of the retention clips to lock them into place over the plastic tabs (Figure 14, 3 and 4).

⇒ NOTE


Make sure the center tab engages in the heat sink base.

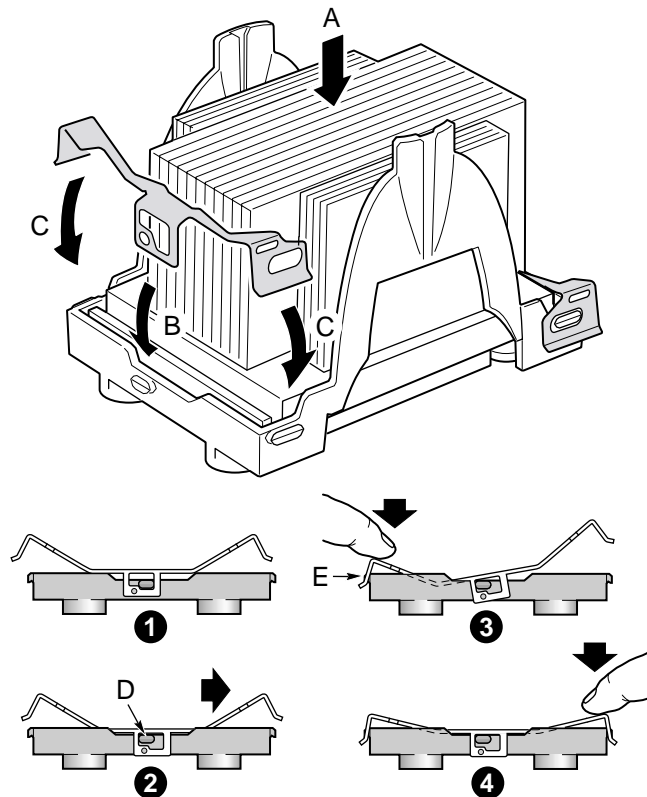

OM15039A

Figure 14. Attaching the Heat Sink and Retention Clip


12. Attach the fan between the two large plastic tabs at each side of the fan assembly component of the PWT (Figure 15, B). To ensure that the airflow direction is correct, insert the fan so that the label shows through the assembled unit (Figure 15, A).

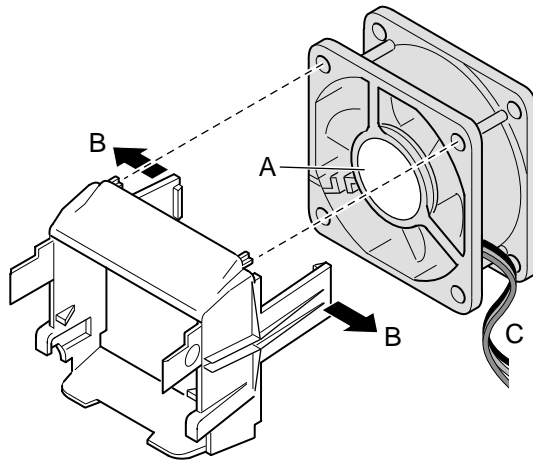

OM15041

Figure 15. Attaching the Wind Tunnel Fan


13. Attach the fan assembly to the top of the PWT. Position the fan assembly at approximately a 45° angle and engage the clip as shown in Figure 16, 1. Gently squeeze the tabs at the side of the fan assembly (Figure 16, 2) and insert them into the corresponding slots (Figure 16, 3). Rotate the fan assembly downward to engage the clips at the bottom (Figure 16, 4).

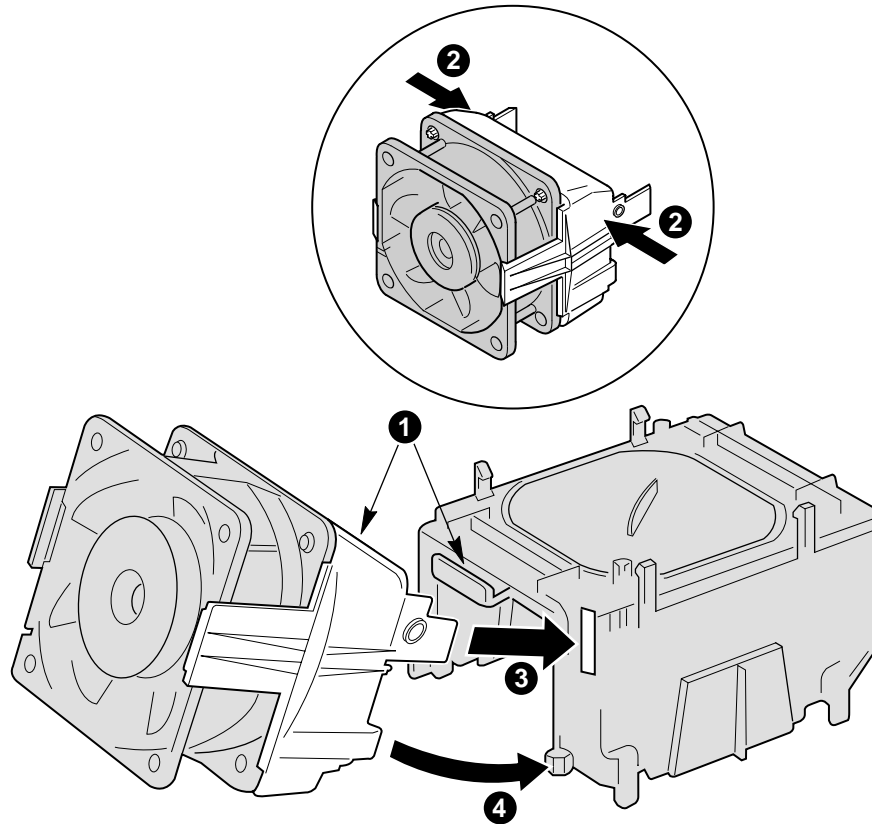

OM15044

Figure 16. Attaching the Heat Sink Fan to the Top of the PWT

14. Attach the fan assembly to the retention mechanism. Pull the tabs at the sides of the retention mechanism apart slightly. See Figure 17, 1. Lower the fan assembly into the retention mechanism. The tabs on the fan assembly (Figure 17, 3) will fit into the slots of the retention mechanism (Figure 17, 1). Pull out on the tabs located at the bottom of the fan assembly to snap them into place on the OUTSIDE of the retention mechanism (Figure 17, 2).
15. Attach CPU Fan 1 cable to the server board at location J7F21 and/or attach CPU Fan 2 cable at location J5F1. (Figure 17, 4.)

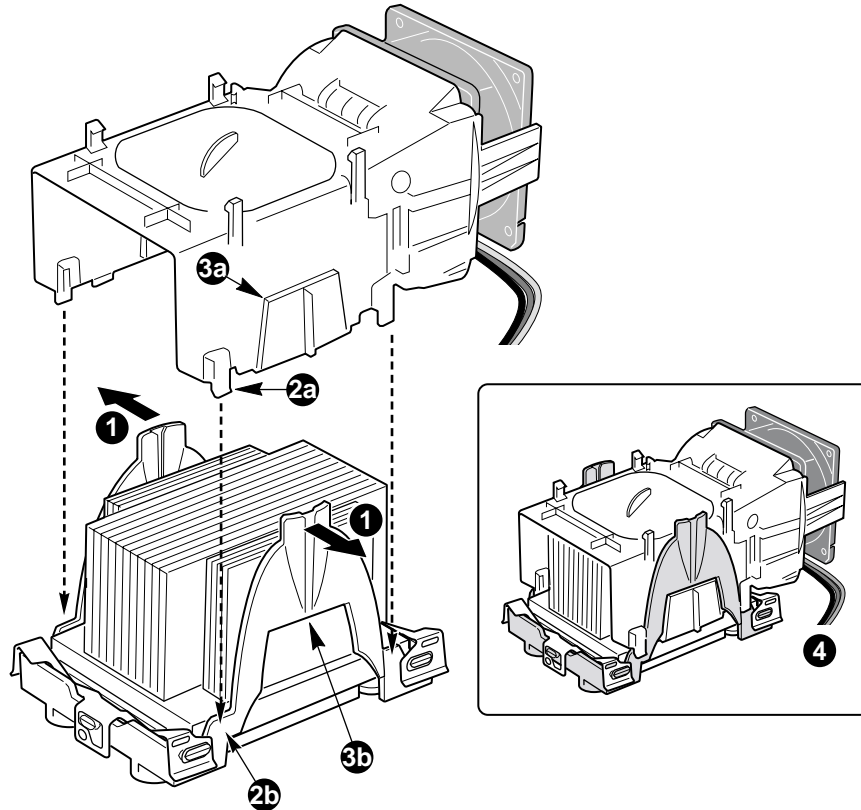


OM15045

Figure 17. Attaching the Top Assembly to the Retention Mechanism

NOTE

System airflow should be from front to back. Make sure the PWT is aligned so the fan is toward the front of the chassis and the airflow is toward the I/O shield. If two processors are installed, the fans should be side by side.

When assembled, the Processor Wind Tunnel will look similar to the figure below. The dashed lines over CPU2 (Figure 18, B) indicate that this processor assembly is only required when configuring the server with two processors. The direction of the airflow is indicated by the arrow at (Figure 18, C).

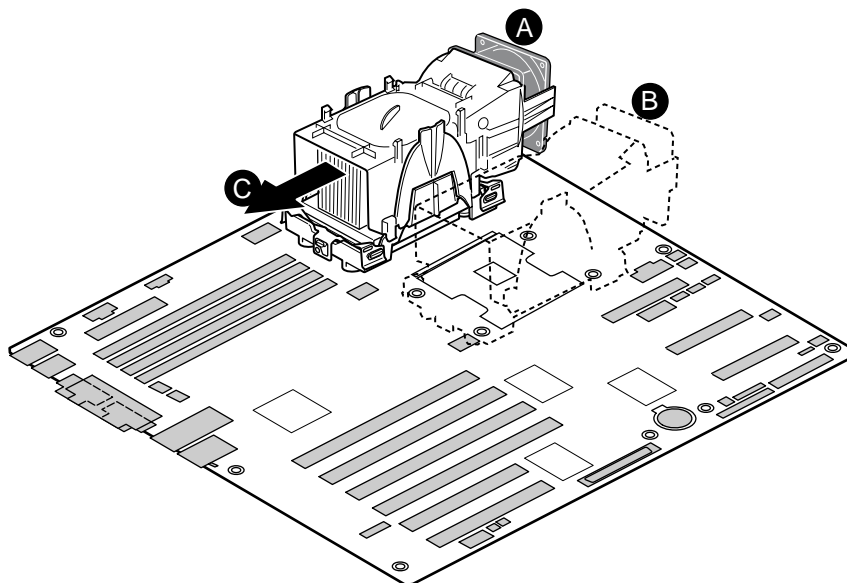

OM15038

Figure 18. Processor and Wind Tunnel Installed


Installing the Processor in the SC5200 Hot Swap Redundant Power Chassis

⇒ NOTE

Use these instructions if you are installing a processor in the Intel® Chassis SC5200 HSRP. When using this chassis, do not install the Processor Wind Tunnel. When installing the processor in any chassis other than the HSRP, disregard this section and follow the instructions in the section titled “Installing the Processor and the Processor Wind Tunnel in the SC5200 Chassis or in a Reference Chassis” on page 40.

Two sets of RM (Retention Mechanism) brackets are included with each SC5200 HSRP chassis. For each bracket, do the following:


1. Place the bracket (letter A in the following diagram) on the server board.
2. Insert and tighten two screws (letter B in the diagram) to secure the bracket to the board.

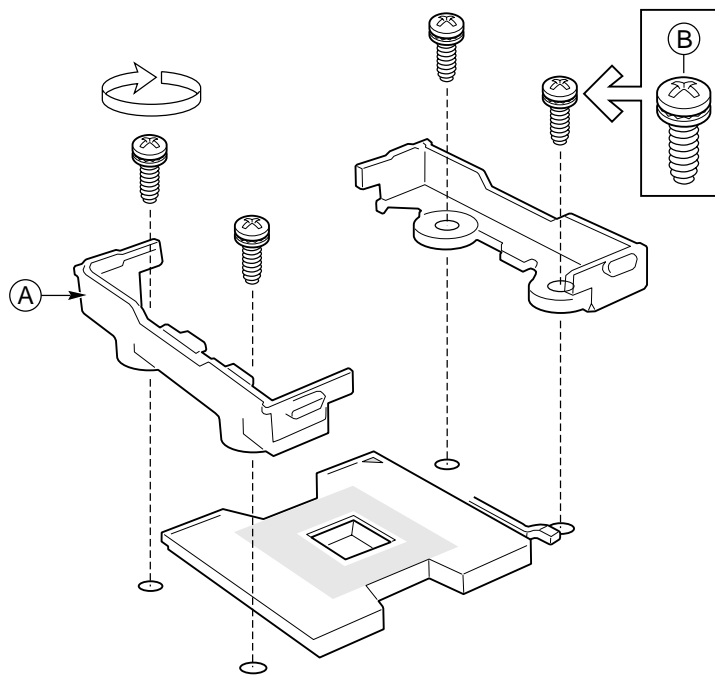

OM14144

Figure 19. Installing the Processor Retention Brackets

3. Raise the locking bar on the processor socket.

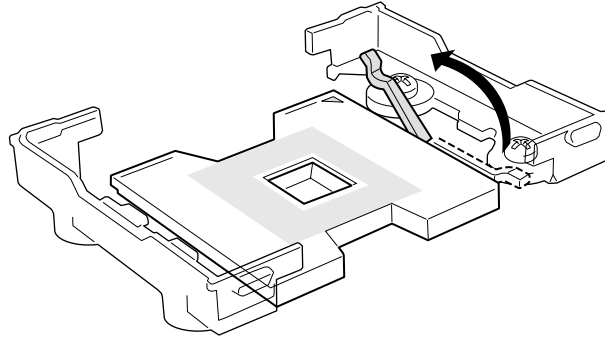


OM14132

Figure 20. Raising the Locking Bar

4. Aligning the pins of the processor with the socket, insert the processor into the socket.

⇒ **NOTE**

Make sure the alignment triangle mark and the alignment triangle cutout align correctly.

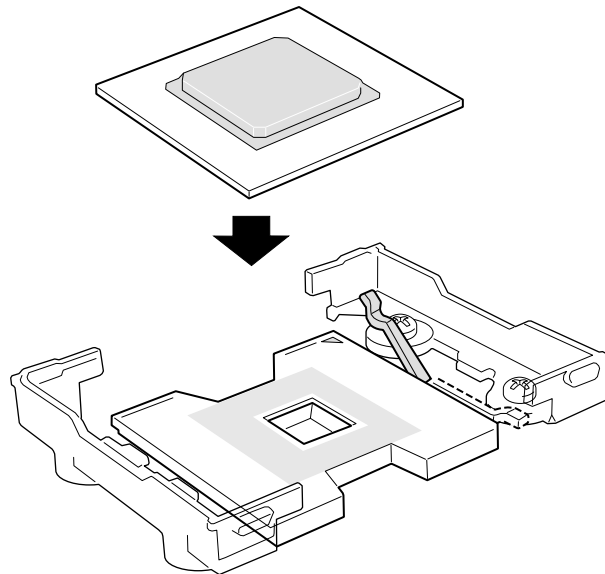

OM14133

Figure 21. Installing Processors

5. Lower the locking bar completely.

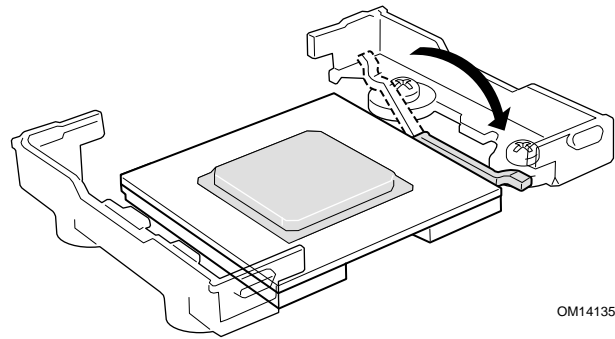


Figure 22. Lower Locking Bar

6. Apply thermal grease to the top of the processor as shown.


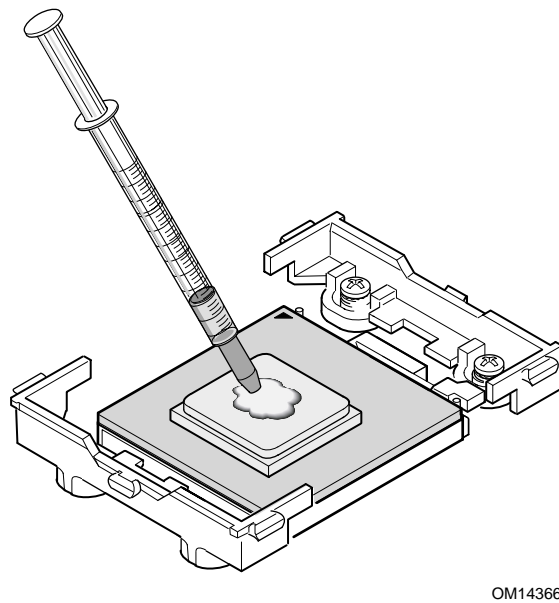


Figure 23. Applying Thermal Grease


7. Position the heat sink above the processor
8. Aligning the raised metal surfaces, place the heat sink on top of the processor.

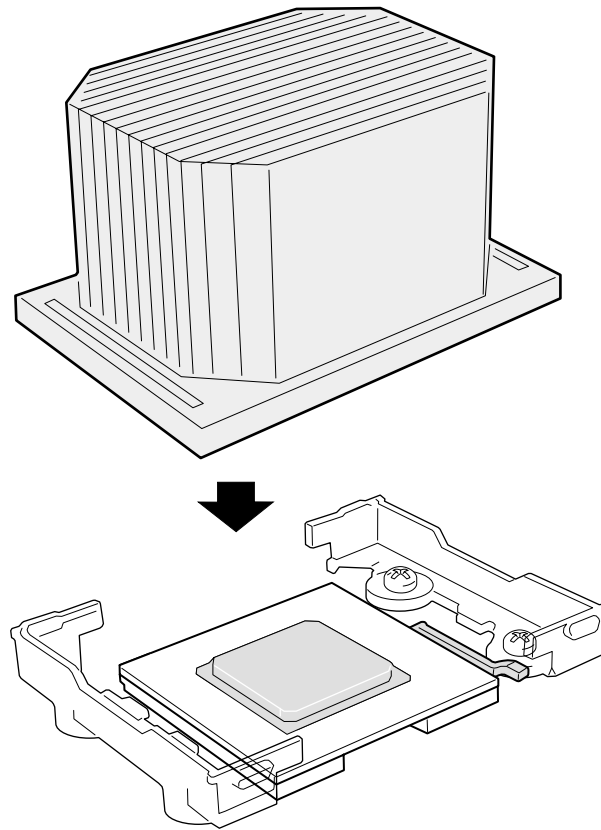

OM14134

Figure 24. Installing the Heat Sink

9. Place the heat sink clip (1) so the tab on the clip engages the slot on the heat sink (A).
10. Press one end of the clip down (2).
11. Press the other end of the clip down (3).

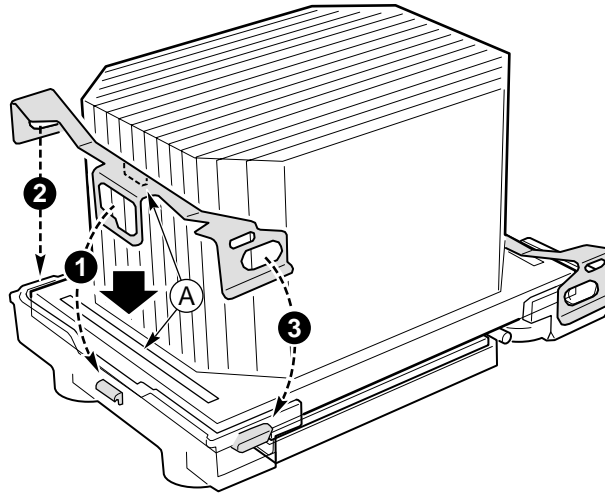

OM14140

Figure 25. Installing the Heat Sink Clip

Replacing a Processor

1. Observe the safety and ESD precautions at the beginning of this chapter and the additional cautions given here.
2. Unplug the processor fan cable from the server board.
3. For a chassis in which a PWT assembly is used, detach the fan assembly from the PWT retention mechanism by unlatching the clips at the bottom of the fan assembly and then lifting up on the fan assembly.
4. Remove the metal retention clips from the bottom of the retention mechanism. Unhook each side of each clip and disengage the center latch.
5. Remove the heat sink by slightly spreading the sides of the retention mechanism and lifting straight up on the heat sink.
6. Raise the socket lever on the processor socket.
7. Remove the processor from the socket.
8. Align the pins of the replacement processor with the socket, and insert the processor into the socket. Lower the socket lever completely.

⇒ NOTE

Make sure the alignment triangle mark and the alignment triangle cutout align correctly.

9. Re-insert the heat sink over the top of the processor.
10. Install new retention clips. Use the retention clips that shipped with the new processor or use a new set. Retention clips may differ from one processor to processor and should not be reused. See Figure 14.

⇒ NOTE

When the SC5200 Hot Swap Redundant Chassis is used, disregard steps 11 and 12.

11. For chassis that require the PWT assembly, reattach the fan assembly to the retention mechanism. Pull the tabs at the sides of the retention mechanism apart slightly. See Figure 17, 1. Lower the fan assembly into the retention mechanism. The tabs on the fan assembly (Figure 17, 3) will fit into the slots of the retention mechanism (Figure 17, 1). Pull out on the tabs located at the bottom of the fan assembly to snap them into place on the retention mechanism.
12. For chassis that require the PWT assembly, reattach the CPU fan.

Installing Memory

The server board supports only DDR266 compliant DIMMs. The minimum supported memory configuration is 256 MB, using two 128 MB DIMMs. The maximum configurable memory size is 8 GB using four 2 GB DIMMs.

DIMMs must be installed in pairs and must be populated per bank starting with DIMM 1A and 1B (contiguous sockets). Although the SE7501BR2 server board architecture allows the user to mix various sizes of DIMMs between banks, DIMMs must be identical within the banks. For a list of tested memory, see:

<http://support.intel.com/support/motherboards/server/SE7501BR2>

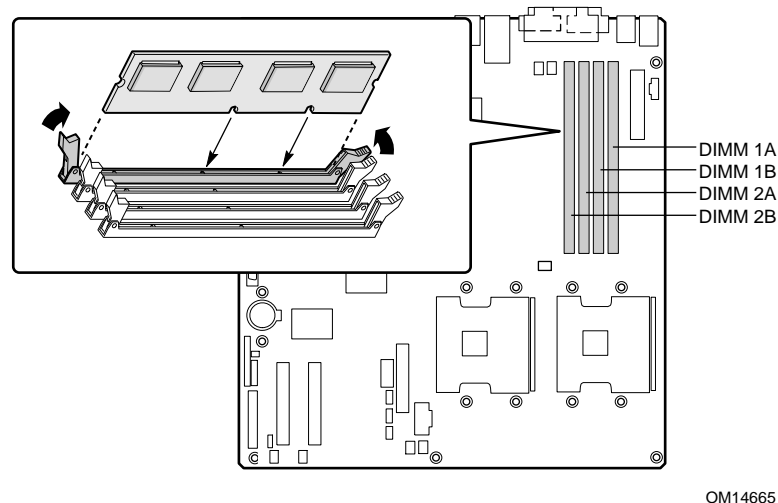



Figure 26. Installing Memory

Finishing Up

WARNING

An electrical shock hazard exists if the chassis cover is not replaced before connecting the chassis to the main power.

1. Install the chassis cover according to the instructions for your chassis.
2. See your chassis documentation to complete rack or pedestal installation.
3. Connect the keyboard, mouse and monitor cables to the back panel.
4. Connect the power cable to the back panel and to an AC outlet.

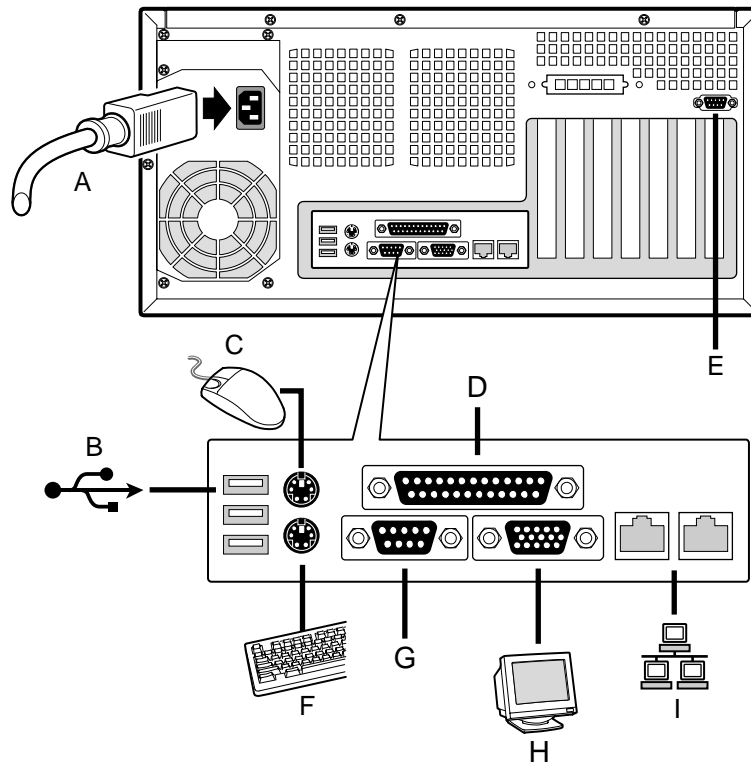

OM14669

Figure 27. Making Back Panel Connections

Replacing the Back up Battery

The lithium battery on the server board powers the real time clock (RTC) for at least three years in the absence of power. When the battery starts to weaken, it loses voltage, and the server settings stored in CMOS RAM in the RTC (for example, the date and time) may be wrong. If you are using Intel Server Management you can set it to provide a warning prior to the battery failing. Contact your customer service representative or dealer for a list of approved devices.



WARNING

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the equipment manufacturer. Discard used batteries according to manufacturer's instructions.



ADVARSEL!

Lithiumbatteri - Eksplosjonsfare ved feilagtig håndtering. Utskiftning må kun ske med batteri af samme fabrikat og type. Levér det brugte batteri tilbage til leverandøren.



ADVARSEL

Lithiumbatteri - Eksplosjonsfare. Ved utskifting benyttes kun batteri som anbefalt av apparatfabrikanten. Brukt batteri returneres apparatleverandøren.



VARNING

Explosionsfara vid felaktigt batteribyte. Använd samma batterityp eller en ekvivalent typ som rekommenderas av apparattillverkaren. Kassera använt batteri enligt fabrikantens instruktion.



VAROITUS

Paristo voi räjähtää, jos se on virheellisesti asennettu. Vaihda paristo ainoastaan laitevalmistajan suosittelemaan tyyppiin. Hävitä käytetty paristo valmistajan ohjeiden mukaisesti.

1. Observe the safety and ESD precautions at the beginning of this chapter.
2. Open the chassis.
3. Insert the tip of a small flat bladed screwdriver, or equivalent, under the tab in the plastic retainer. Gently push down on the screwdriver to lift the battery.
4. Remove the battery from its socket.

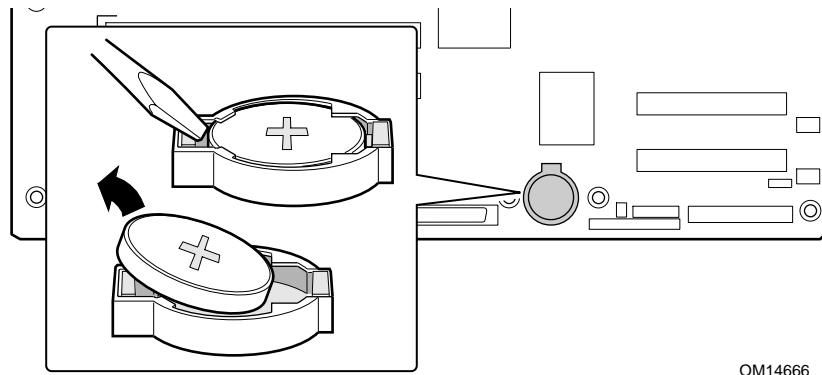


Figure 28. Replacing the Backup Battery

5. Dispose of the battery according to local ordinance.
6. Remove the new lithium battery from its package, and, being careful to observe the correct polarity, insert it in the battery socket.
7. Close the chassis.
8. Run Setup to restore the configuration settings to the RTC.

3 POST and the BIOS Setup Utility

This chapter describes the Power-On Self-Test (POST) and the BIOS Setup utility.

Power-On Self-Test (POST)

Each time you turn on the system, the BIOS begins executing the Power-On Self-Test (POST), which is stored in flash memory. POST discovers, configures, and tests the processors, memory, keyboard, and most installed peripheral devices. During the memory test, POST displays the amount of memory that it is able to access and test. The time needed to test memory depends on the amount of memory installed.

1. Turn on your server and monitor. After a few seconds, POST begins to run and displays a splash screen.
2. While the splash screen is displayed do one of the following:
 - Press <F2> to enter the BIOS Setup
 - Press <Esc> to view POST diagnostic messages and change the boot device priority for this boot only (see “Temporarily Changing the Boot Device Priority” below).
3. If you do not press <F2> or <Esc> and do NOT have a device with an operating system loaded, the boot process continues and the system beeps once. The following message is displayed:

Operating System not found

What appears on the screen after this depends on whether you have an operating system loaded and if so, which one.


If the system halts before POST completes running, it emits a beep code indicating a fatal system error that requires immediate attention. If POST can display a message on the video display screen, it causes the speaker to beep twice as the message appears.

Write down both the screen display and the beep code you hear; this information is useful for your service representative. For a listing of common beep codes and error messages that POST can generate, see the “Solving Problems” chapter in this manual.

Temporarily Changing the Boot Device Priority

During POST, you can change the boot device priority for the current boot process. The changes are not saved for the next boot process.

1. Boot the server.
2. At any time during POST, press <Esc>. When POST completes, a popup Boot menu displays.
3. Use the arrow keys to highlight the device you want the server system to boot from first. For example, if you want the server system to boot from the CD-ROM first, you select “ATAPI CD-ROM Drive.”

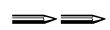

NOTE

One of the selections on the popup Boot menu is “Enter Setup.” Selecting this option brings you into the BIOS Setup.

4. Press <Enter> and the boot process continues.

BIOS Setup

You can run BIOS Setup with or without an operating system being present. BIOS Setup stores most of the configuration values in battery-backed CMOS; the rest of the values are stored in flash memory. The values take effect when the system is booted. POST uses these values to configure the hardware. If the values and the actual hardware do not agree, POST generates an error message.

Record your BIOS Setup settings. If default values ever need restoring (after a CMOS clear, for example), you must run BIOS Setup again. Your record will make this much easier.

If BIOS Setup Is Inaccessible

If you are not able to access BIOS Setup, you might need to clear the CMOS memory. To clear CMOS, either of two methods can be used:

- Press the reset button and hold it down for four seconds or more, and then, while holding the reset button down, press the power button. Release both buttons at the same time
OR
- Move the Clear CMOS jumper found on the configuration jumper block on the baseboard.

Starting Setup

You can enter and start Setup under several conditions:

- When you turn on the server, after POST completes the memory test
- When you have moved the CMOS jumper on the server board to the “Clear CMOS” position (enabled). For instructions on moving the jumper, see Chapter 5, under the heading “Clearing CMOS with the CMOS Jumper”

In these two conditions, after rebooting, you will see this prompt:

```
Press <F2> to enter SETUP
```

- In a third condition, when CMOS/NVRAM has been corrupted, you will see other messages but not the <F2> prompt:

```
Warning: CMOS checksum invalid
```

```
Warning: CMOS time and date not set
```

In this condition, the BIOS will load default values for CMOS and attempt to boot.

Setup Menus

Each Setup menu page contains a number of features. Except those used for information purposes, each feature is associated with a value field that contains user-selectable parameters. Parameters may be changed depending upon the security option chosen. If a value is not changeable due to insufficient security privileges (or other reasons), the feature's value field becomes inaccessible.

The bottom portion of the Setup screen provides a list of commands that are used for navigating the Setup utility.

Table 6. Keyboard Commands

Press	Description			
<F1>	Help - Pressing F1 on any menu invokes the general Help window.			
← →	The left and right arrow keys are used to move between the major menu pages. The keys have no affect if a submenu or pick list is displayed.			
↑	Select Item up - The up arrow is used to select the previous value in a menu item's option list, or a value field pick list. Pressing the Enter key activates the selected item.			
↓	Select Item down - The down arrow is used to select the next value in a menu item's option list, or a value field pick list. Pressing the Enter key activates the selected item.			
F5/-	Change Value - The minus key or the F5 function key is used to change the value of the current item to the previous value. This key scrolls through the values in the associated pick list without displaying the full list.			
F6/+	Change Value - The plus key or the F6 function key is used to change the value of the current menu item to the next value. This key scrolls through the values in the associated pick list without displaying the full list. On 106-key Japanese keyboards, the plus key has a different scan code than the plus key on the other keyboard, but it has the same effect.			
<Enter>	Execute Command - The Enter key is used to activate submenus when the selected feature is a submenu, or to display a pick list if a selected feature has a value field, or to select a sub-field for multi-valued features like time and date. If a pick list is displayed, the Enter key will undo the pick list, and allow another selection in the parent menu.			
<Esc>	Exit - The ESC key provides a mechanism for backing out of any field. This key will undo the pressing of the Enter key. When the ESC key is pressed while editing any field or selecting features of a menu, the parent menu is re-entered. When the ESC key is pressed in any submenu, the parent menu is re-entered. When the ESC key is pressed in any major menu, the exit confirmation window is displayed and the user is asked whether changes can be discarded.			
<F9>	Setup Defaults - Pressing F9 causes the following to appear: <div><table><tr><td>Setup Confirmation</td></tr><tr><td>Load default configuration now?</td></tr><tr><td>[Yes] [No]</td></tr></table><p>If "Yes" is selected and the Enter key is pressed, all Setup fields are set to their default values. If "No" is selected and the Enter key is pressed, or if the ESC key is pressed, the user is returned to where they were before F9 was pressed without affecting any existing field values.</p></div>	Setup Confirmation	Load default configuration now?	[Yes] [No]
Setup Confirmation				
Load default configuration now?				
[Yes] [No]				
<F10>	Save and Exit - Pressing F10 causes the following message to appear: <div><table><tr><td>Setup Confirmation</td></tr><tr><td>Save Configuration changes and exit now?</td></tr><tr><td>[Yes] [No]</td></tr></table><p>If "Yes" is selected and the Enter key is pressed, all changes are saved and Setup is exited. If "No" is selected and the Enter key is pressed, or the ESC key is pressed, the user is returned to where they were before F10 was pressed without affecting any existing values.</p></div>	Setup Confirmation	Save Configuration changes and exit now?	[Yes] [No]
Setup Confirmation				
Save Configuration changes and exit now?				
[Yes] [No]				

Table 7. On-Screen Options

When you see this:	What it means:
On screen, an option is shown but you cannot select it or move to that field.	You cannot change or configure the option in that menu screen. Either the option is auto-configured or auto-detected, or you must use a different Setup screen.
On screen, the phrase Press Enter appears next to the option.	Press <Enter> to display a submenu that is either a separate full screen menu or a popup menu with one or more choices.

Menu Selection Bar

The Menu Selection Bar is located at the top of the screen and displays the major menu selections available to the user.

Table 8. Menu Selection Bar

Main	Advanced	Security	Server	Boot	Exit
Allocates resources for hardware components	Configures advanced features available through the chipset	Sets and clears passwords and security features	Information on Vendor, Processor, Memory, Peripherals, and BIOS	Selects boot options and power supply controls	Saves or discards changes to Setup program options

Main Menu

You can make the following selections from the Main Menu. Use the submenus for other selections.

Table 9. Main Menu Selections

Feature	Choices	Description
System Time	HH:MM:SS	Sets the system time (hour, minutes, seconds, on 24 hour clock).
System Date	MM/DD/YYYY	Sets the system date (month, day, year).
Floppy A	Not installed 1.44/1.25 MB, 3.5-inch 2.88 MB	Selects the diskette type.
Hard Disk Pre-delay	Disabled 3 seconds 6 seconds 9 seconds 12 seconds 15 seconds 21 seconds 30 seconds	Provides time to allow drives that spin-up slower to become ready.
Primary IDE Master	<Enter>	Displays the IDE device selection. Enters submenu.

continued

Table 9. Main Menu (continued)

Primary IDE Slave	<Enter>	Displays IDE device selection. Enters submenu.
Secondary IDE Master	<Enter>	Displays IDE device selection. Enters submenu.
Secondary IDE Slave	<Enter>	Displays IDE device selection. Enters submenu.
Processor Settings	<Enter>	Enters submenu.
Language	English (US) Spanish Italian French German	Selects the language displayed by the BIOS. When English (US) or one of the other Latin-based languages is selected, the full 8-bit ASCII character will be redirected in the format selected under the serial console redirection submenu.

Table 10. Primary/Secondary, Master/Slave Submenu

Feature	Choices	Description
Type	None Auto	Auto instructs the system to automatically detect the drive type. None instructs the system to ignore this drive.
LBA Mode Control	Disabled Enabled	This field is informational only. It is disabled if no devices are detected.
Multi-Sector Transfer	Disabled 2 Sectors 4 Sectors 8 Sectors 16 Sectors	This field is informational only and can be seen only if an IDE hard disk drive is detected. This field specifies the number of sectors that are transferred per block during multiple sector transfers.
PIO Mode	Standard 1 2 3 3 / DMA 1 4 4 / DMA 2	This field is informational only. It displays the method of moving data to and from the hard drive.
Ultra DMA Mode	Mode 2 Mode 4	This field is informational only. It displays the method of moving data to and from the hard drive.

Table 11. Processor Settings Submenu

Feature	Choices	Description
Processor POST Speed	Information Only	Displays the measured processor speed.
Processor Retest	Enabled Disabled	When enabled, the BIOS will clear the processor status history and retest all processors at the next boot. This option automatically reverts to Disabled upon booting.
Hyper-Threading Support	Enabled Disabled	When disabled, hyper-threading is disabled.
Processor 1 CPUID	Information Only	Reports the CPU ID for processor 1.
Processor 1 L2 Cache Size	Information Only	Reports the L2 cache size for processor 1.
Processor 2 CPUID	Information Only	Reports the CPU ID for processor 2.
Processor 2 L2 Cache Size	Information Only	Reports the L2 cache size for processor 2.

Advanced Menu

You can make the following selections on the Advanced Menu.

Table 12. Advanced Menu

Feature	Choices	Description
PCI Configuration	<Enter>	Enters submenu.
Peripheral Configuration	<Enter>	Enters submenu.
Memory Configuration	<Enter>	Enters submenu.
Advanced Chipset Control	<Enter>	Enters submenu. This option will not be available if there are no advanced chipset settings that can be controlled by the user.
Boot-time Diag Screen	Enabled Disabled	When enabled, the system displays the normal POST messages. When disabled, the logo screen is displayed. Disabling this option disables serial redirection. This option is not displayed if the BIOS does not detect a valid logo in the flash file.
Reset Configuration Data	No Yes	Select Yes if you want to clear the server configuration data during the next boot. The system automatically resets this field to No during the next boot.
Numlock	On Off	Selects the state of the Numlock key at system power-on.
Sleep Button	Enabled Disabled	When disabled, the sleep button will be disabled.

Table 13. PCI Configuration Submenu

Feature	Choices	Description
USB Function	<Enter>	Enters submenu.
On-board NIC 1 (10/100 MB)	<Enter>	Enters submenu.
On-board NIC 2 (1.0 GB)	<Enter>	Enters submenu.
On-board SCSI	<Enter>	Enters submenu.
On-board Video	<Enter>	Enters submenu.
PCI Slot 1 ROM	Enabled Disabled	Enables or disables the option ROM scan of the device in the selected 64-bit, 100 MHz PCI-X slot.
PCI Slot 2 ROM	Enabled Disabled	Enables or disables the option ROM scan of the device in the selected 64-bit, 100 MHz PCI-X slot.
PCI Slot 3 ROM	Enabled Disabled	Enables or disables the option ROM scan of the device in the selected 64-bit, 100 MHz PCI-X slot.
PCI Slot 4 ROM	Enabled Disabled	Enables or disables the option ROM scan of the device in the selected 64-bit, 100 MHz PCI-X slot. This slot supports M-ROMB.
PCI Slot 5 ROM	Enabled Disabled	Enables or disables the option ROM scan of the device in the selected 32-bit, 33 MHz PCI slot.
PCI Slot 6 ROM	Enabled Disabled	Enables or disables the option ROM scan of the device in the selected 32-bit, 33 MHz PCI slot.

Table 14. PCI Configuration, Embedded Devices Submenu

Feature	Choices	Description
USB Function	Enabled Disabled	When disabled, the USB controller is disabled and the device resources are hidden from the system.
On-board NIC 1	Enabled Disabled	When disabled, the embedded NIC 1 is disabled and the device resources are hidden from the system.
On-board NIC 1 ROM	Enabled Disabled	When enabled, the NIC 1 expansion ROM is initialized.
On-board NIC 2	Enabled Disabled	When disabled, the embedded NIC 2 is disabled and the device resources are hidden from the system.
On-board NIC 2 ROM	Enabled Disabled	When enabled, the NIC 2 expansion ROM is initialized.
On-board SCSI	Enabled Disabled	When disabled, the embedded SCSI device is disabled and the device resources are hidden from the system.
On-board SCSI ROM	Enabled Disabled	When enabled, the SCSI device expansion ROM is initialized.
On-board Video	Enabled Disabled	When disabled, the embedded video is disabled and the device resources are hidden from the system.

Table 15. Peripheral Configuration Submenu

Feature	Choices	Description
Serial Port A Address	Disabled 3F8h 2F8h 3E8h 2E8h	Disables Serial Port A or selects the base I/O address for the port. NOTE: No two devices can share the same IRQ or I/O address. Choosing Disabled makes this port unusable.
Serial Port A IRQ	4 3	Selects the IRQ for Serial Port A.
Serial Port B Address	Disabled 3F8h 2F8h 3E8h 2E8h	Disables Serial Port B or selects the base I/O address for the port. NOTE: No two devices can share the same IRQ or I/O address. Choosing Disabled makes this port unusable.
Serial Port B IRQ	4 3	Selects the IRQ for Serial Port B.
Parallel Port Address	Disabled 378h 278h 2BCh	Disables the onboard parallel port or selects the base I/O address for the port. NOTE: Two devices cannot share the same IRQ. Also, choosing Disabled makes the parallel port unusable.
Parallel Port IRQ	5 7	Selects the IRQ for the parallel port.
Parallel Port Mode	Normal Bi-directional EPP ECP	Parallel Port Modes: Normal – Output only. The standard printer connection. Bi-directional – Standard bi-directional mode. Enhanced parallel port (EPP) – Selection based on which EPP version the printer supports. Only choose a mode that the parallel port device (such as a printer) supports. Check the parallel port device documentation for this information. If this information cannot be located, use the default setting. Extended capabilities port (ECP) – Select only if the printer supports it. ECP uses hardware to generate handshaking signals, similar to EPP. However, it uses DMA channels to move data, a FIFO buffer to send and receive data, and real-time data compression.
ECP Mode DMA Channel	0 1 2 3	Selects the DMA channel for ECP mode.
Diskette Controller	Enabled Disabled	Enables or disables the diskette controller in the Super I/O.
Legacy USB Support	Disabled Keyboard only Auto Keyboard and Mouse	If disabled, legacy USB support is turned off at the end of BIOS POST.
Front Panel USB	Enabled Disabled	If disabled, the front panel USB ports are inactive.

Table 16. Memory Configuration Submenu

Feature	Choices or Display Only	Description
Extended Memory Test	1 MB 1 KB Every Location Disabled	Selects the size of step to use during the extended RAM tests. When disabled is selected, extended memory tests are not run. The Every Location selection will increase the boot time.
Memory Bank #1 (DIMM 1A, 1B)	Installed Not Installed Disabled	Displays the current status of Memory Bank 1. Disabled indicates that a DIMM in the bank has failed and the entire bank has been disabled.
Memory Bank #2 (DIMM 2A, 2B)	Installed Not Installed Disabled	Displays the current status of Memory Bank 2. Disabled indicates that a DIMM in the bank has failed and the entire bank has been disabled.
Memory Retest	Enabled Disabled	When enabled is selected, the BIOS retests all memory on the next boot. This option automatically reverts to disabled upon booting.

Table 17. Advanced Chipset Control Submenu

Feature	Choices or Display Only	Description
Wake On Ring	Enabled Disabled	Controls legacy wake-up source
Wake On LAN	Enabled Disabled	Controls legacy wake-up source
Wake On PME	Enabled Disabled	Controls legacy wake-up source
Wake On RTC Alarm	Enabled Disabled	Controls legacy wake-up source

Security Menu

You can make the following selections from the Security Menu. Enabling the Administrator Password field requires a password for entering Setup. Passwords are not case-sensitive.

Table 18. Security Menu

Feature	Choices	Description
User Password is	Not Installed Installed	Information only; once the password is set, it can be disabled by selecting the Set Administrative Password and then setting the password to a null string, or by using the clear password jumper on the board. NOTE: The clear password jumper clears both the Administrator and User passwords.
Administrator Password is	Not Installed Installed	Information only; once the password is set, it can be disabled by selecting the Set Administrative Password and then setting the password to a null string, or by using the clear password jumper on the board. NOTE: The clear password jumper clears both the Administrator and User passwords.
Set Administrative Password	<Enter>	When the <Enter> key is pressed, you are prompted for a password; press the ESC key to abort. Once set, the password can be disabled by setting the password to a null string, or by using the clear password jumper. NOTE: If the clear password jumper is used, both the User and Administrative passwords will be cleared. Entering Setup with the Administrative Password provides full access to all BIOS Setup utility menus.
Set User Password	<Enter>	When the <Enter> key is pressed, you are prompted for a password; press the ESC key to abort. Once set, the password can be disabled by setting the password to a null string, or by using the clear password jumper. NOTE: If the clear password jumper is used, both the User and Administrative passwords will be cleared.
Password on Boot	Enabled Disabled	Requires password entry before boot. System will remain in secure mode until password is entered. This option is only available if a User Password is configured.
Fixed Disk Boot Sector	None Write Protect	When Write Protect is enabled, the boot sector of the hard drive is protected. This prevents viruses from corrupting the drive.

continued

Table 18. Security Menu (continued)

Feature	Choices	Description
Secure Mode Timer	1 minute 2 minutes 5 minutes 10 minutes 20 minutes 60 minutes 120 minutes	This option sets the number of minutes of PS/2 keyboard or mouse inactivity that are allowed before Secure Mode is activated. This option is only available if a User Password is configured.
Secure Mode Hot Key (Ctrl-Alt-)	[L] [Z]	Select the key combination (Ctrl-Alt-L or Ctrl-Alt-Z) to instantly put the system into Secure Mode instead of waiting for the Secure Mode Timer to time-out. This option is only available if a User Password is configured.
Secure Mode Boot	Enabled Disabled	When this option is enabled, the system will always boot directly into Secure Mode and the user must enter a password to unlock the system. This option is only available if a User Password is configured.
Video Blanking	Enabled Disabled	When enabled, the video is blank when the system is in Secure Mode. A password is required to take the system out of Secure Mode and restore the video. This option is only available if a User Password is configured.
Power Switch Inhibit	Enabled Disabled	This option disables the power button on the front panel. When enabled, pressing the power button has no effect.
NMI Control	Enabled Disabled	This option enables or disables NMI control through the Baseboard Management Controller. The NMI button is located on the front panel.

Server Menu

You can make the following selections from the Server Menu.

Table 19. Server Menu

Boot Priority	Device	Description
System Management	<Enter>	Enters submenu.
Console Redirection	<Enter>	Enters submenu.
Event Log Configuration	<Enter>	Enters submenu.
Fault Resilient Booting	<Enter>	Enters submenu.
Assert NMI on PERR	Enabled Disabled	When enabled, PCI bus parity errors (PERR) cause a system NMI.
Assert NMI on SERR	Enabled Disabled	When enabled, PCI bus system errors (SERR) cause a system NMI.
FRB-2 Policy	Disable BSP Do Not Disable BSP Retry 3 Times Disable FRB2 Timer	This option determines when the Boot Strap Processor should be disabled if an FRB-2 error occurs.

continued

Table 19. Server Menu (continued)

POST Error Pause	Enabled Disabled	When enabled, the system will wait for user intervention if a critical POST error is encountered. When disabled, the system will boot without user intervention when possible.
Boot Monitoring	Disabled 5 Minutes 10 Minutes 15 Minutes 20 Minutes 25 Minutes 30 Minutes 35 Minutes 40 Minutes 45 Minutes 50 Minutes 55 Minutes 60 Minutes	This option sets the amount of time that the OS Watchdog Timer is programmed to. When disabled, the OS Watchdog Timer is not used. This option is not available if either the Hard Disk OS Boot Timeout option or the PXE OS Boot Timeout option on the Fault Resilient Booting Menu is not set to Disabled.
Boot Monitoring Policy	Retry 3 Times Retry Service Boot Always Reset	This option configures the system response to the expiration of the Watchdog Timer. This option is not available if either the Hard Disk OS Boot Timeout option or the PXE OS Boot Timeout option on the Fault Resilient Booting Menu is not set to Disabled.
PXE OS Boot Timeout	Disable 5 minutes 10 minutes 15 minutes 20 minutes	Controls the amount of time allowed to load the operating system from a device that is compliant with the PXE specification.

Table 20. System Management Submenu

Boot Priority	Device	Description
Board Part Number	N/A	Information only
Board Serial Number	N/A	Information only
System Part Number	N/A	Information only
System Serial Number	N/A	Information only
Chassis Part Number	N/A	Information only
Chassis Serial Number	N/A	Information only
BIOS Revision	N/A	Information only displaying the revision of the BIOS installed
BMC Device ID	N/A	Information only
BMC Firmware Revision	N/A	Information only

continued

Table 20. System Management Submenu (continued)

Boot Priority	Device	Description
BMC Device Revision	N/A	Information only
PIA Revision	N/A	Information only
SDR Revision	N/A	Information only
Primary HSBP Revision	N/A	Information only, displaying the revision of the Hot-swap backplane. This information is not available if the HSBP is not detected.
Secondary HSBP Revision	N/A	Information only, displaying the revision of the Hot-swap backplane. This information is not available if the HSBP is not detected.

Table 21. Console Redirection Submenu

Feature	Choices	Description
BIOS Redirection Port	Serial Port A Serial Port B Disabled	When a serial port is selected, BIOS Console Redirection is enabled and uses the I/O port specified. Enabling this option disables Quiet Boot.
ACPI Redirection Port	Serial Port A Serial Port B Disabled	This option enables ACPI OS Headless Console Redirection.
Baud Rate	9600 19.2k 38.4k 57.6K 115.2k	This specifies the baud rate to be used when console redirection is enabled. When the Emergency Management Port shares the COM port for console redirection, the baud rate must be set to 19.2k to match the baud rate for the Emergency Management Port baud rate, unless the auto-baud feature is used.
Flow Control	None, CTS/RTS XON/XOFF CTS/RTS +CD	None disallows flow control. CTS/RTS is hardware-based flow control. XON/XOFF is software-based flow control. CTS/RTS +CD is hardware-based with carrier detection flow control. When the Emergency Management Port shares the COM port for console redirection, the flow control must be set to CTS/RTS or to CTS/RTS +CD, depending on whether a modem is used.
Terminal Type	PC-ANSI VT100+ VT-UTF8	This option selects the character set to send through the serial port when console redirection is enabled. VT-UTF8 uses Unicode characters. VT100+ works only with English. PC-ANSI is the standard PC-type terminal.

Table 22. Event Log Configuration Submenu

Feature	Choices	Description
Clear All Event Logs	Yes No	When Yes is selected, the BIOS will clear the System Event Log at the next boot.
Event Logging	Enabled Disabled	When enabled, system events are stored in the System Event Log.
Critical Event Logging	Enabled Disabled	When enabled, critical events, such as PERR, SERR, ECC memory errors, and NMI are stored in the System Event Log.

Table 23. Fault Resilient Booting Submenu

Boot Priority	Device	Description
Late POST Timer	5 minutes 10 minutes 15 minutes 20 minutes Disabled	This option controls the time allowed for add-in card option ROM initialization. The system reboots if the timer runs down to zero.
Fault Resilient Booting	Stay On Reset Power Off	This option controls the policy on FRB timeouts. If stay on is selected, the server remains powered on if the FRB timer runs down to zero. If reset is selected, the server reboots. If power off is selected, the server is powered down.
Hard Disk OS Boot Timeout	5 minutes 10 minutes 15 minutes 20 minutes Disabled	This option controls the amount of time the system is allowed to boot an operating system from a hard disk drive. This option is not available if the Boot Monitoring option on the Server Menu is not set to Disabled.
PXE OS Boot Timeout	5 minutes 10 minutes 15 minutes 20 minutes Disabled	This option controls the amount of time permitted to load the operating system from a device that is compliant with the PXE specification. This option is not available if the Boot Monitoring option on the Server Menu is not set to Disabled.

Boot Menu

You can make the following selections from the Boot Menu.

Table 24. Boot Menu

Boot Priority	Device	Description
Boot Device Priority	<Enter>	Enters submenu
Hard Disk Drives	<Enter>	Enters submenu
Removable Devices	<Enter>	Enters submenu
ATAPI CD-ROM Drives	<Enter>	Enters submenu

Table 25. Boot Device Priority Submenu

Boot Priority	Device	Description
1	Removable Devices	The server attempts to boot from the diskette drive or removable device such as the LS-120.
2	Hard Drive	The server attempts to boot from a hard drive device.
3	ATAPI CD-ROM Drive	The server attempts to boot from an ATAPI CD-ROM drive containing bootable media.
4	Any SCSI CD-ROM Drive	The server attempts to boot from a SCSI CD-ROM drive containing bootable media. This option is available only if a bootable CD-ROM is present. The device needs to be controlled by a BIOS Boot Specification-compliant SCSI option ROM.
5	PXE UNDI	The system attempts to boot from the network. This entry will appear if there is a network device in the system that is controlled by a PXE-compliant option ROM.

Table 26. Hard Drive Selection Submenu

Feature	Choices	Description
Device list: Drive #1 (or the drive string) Other bootable cards Each drive with a PnP header	Plus (+) key Minus (-) key	Select the boot drive with the up and down arrows to highlight the device. Use the plus (+) key to move the selected device up in the list. Use the minus (-) key to move the device down in the list. "Other bootable cards" indicates boot devices that are not reported to the system BIOS through the BIOS boot specification mechanism. These devices may or may not be bootable.

Table 27. Removable Devices Submenu

Feature	Choices	Description
Device list: Bootable, removable devices	Plus (+) key Minus (-) key	Use the plus (+) key to move the selected device up in the list. Use the minus (-) key to move the device down in the list.

Table 28. ATAPI CD-ROM Devices Submenu

Feature	Choices	Description
Device list: ATAPI CD-ROM drives	Plus (+) key Minus (-) key	Use the plus (+) key to move the selected device up in the list. Use the minus (-) key to move the device down in the list.

Exit Menu

You can make the following selections on the Exit Menu. Select an option using the up or down arrow keys, then press <Enter> to execute the option. Pressing <Esc> does not exit this menu. You must select one of the items from the menu or from the menu bar to exit.

Table 29. Exit Menu

Choices	Description
Exit Saving Changes	Exit after writing all modified Setup item values to CMOS.
Exit Discarding Changes	Exit leaving CMOS unmodified. User is prompted if any of the setup fields were modified.
Load Setup Defaults	Load default values for all SETUP items.
Load Custom Defaults	Load values from previously saved custom defaults. This option is not available if no custom defaults are detected.
Save Custom Defaults	Stores custom defaults in NVRAM.
Discard Changes	Read previous values from NVRAM.

Upgrading the BIOS

The BIOS can be upgraded in-band (operating system up) or out-of-band (operating system down). The following instructions reflect the out-of-band upgrade steps. For in-band upgrade instructions, refer to the Intel® Server Management Installation and User's Guide.

Preparing for the Upgrade

Before you upgrade the BIOS, prepare for the upgrade by recording the current BIOS settings and obtain the upgrade utility.

Recording the Current BIOS Settings

1. Boot the computer and press <F2> when you see the message:
`Press <F2> Key if you want to run SETUP`
2. Write down the current settings in the BIOS Setup program.

⇒ NOTE

Do not skip step 2 above. You will need these settings to configure your computer at the end of the procedure.

Obtaining the Upgrade Utility

You can upgrade to a new version of the BIOS using the new BIOS files and the BIOS upgrade utility, iFLASH.EXE. You can obtain the BIOS upgrade file and the iFLASH.EXE utility through your computer supplier or from the Intel Customer Support website:

<http://support.intel.com/support/motherboards/server/SE7501BR2>

⇒ NOTE

Review the instructions distributed with the upgrade utility before performing a BIOS upgrade.

This upgrade utility allows you to upgrade the BIOS in flash memory. The following steps explain how to upgrade the BIOS.

Creating a Bootable Diskette

1. Use a DOS system to create the diskette.
2. Insert a diskette in diskette drive A.
3. At the C:\ prompt, for an unformatted diskette, type:
`format a: /s`
or, for a formatted diskette, type:
`sys a:`
4. Press <Enter>.

Creating the BIOS Upgrade Diskette

The BIOS upgrade file is a compressed self-extracting archive that contains the files you need to upgrade the BIOS.

1. Insert the bootable diskette into the diskette drive.
2. Extract the contents of the BIOS.EXE file onto the bootable diskette. To do this, type:

```
BIOS.EXE A:
```

3. The BIOS upgrade image files are extracted directly into the floppy disk.

Performing the BIOS Upgrade

1. Place the bootable diskette containing the BIOS update files into the diskette drive of your system. Boot the system with the diskette in the drive.
2. At this point you have a choice of two options. Press 1 and <Enter> to automatically update the system BIOS. This will update the system BIOS and reset the system. Press 2 and <Enter> to update the User Binary and reset the system.
3. Wait while the BIOS files are updated. Do **not** power down the system during the BIOS update process! The system will reset automatically when the BIOS update process is completed. Remove the diskette from the diskette drive.
4. Verify that the BIOS version displayed during POST is the new version as the system reboots.
5. Enter Setup by pressing the F2 key during boot. Once in Setup, press the F9 and <Enter> to set the parameters back to default values.
6. Re-enter the values you wrote down at the beginning of this process. Press F10 and <Enter> to exit BIOS Setup and Save Changes.
7. If you do not set the CMOS values back to defaults using the F9 key, the system may function erratically.

⇒ NOTE

You may encounter a CMOS Checksum error or other problem after reboot. Try shutting down the system and booting up again. CMOS checksum errors require that you enter Setup, check your settings, save your settings, and exit Setup.

It is unlikely that anything will interrupt the BIOS upgrade; however, if an interruption occurs, the BIOS could be damaged. See “Recovering the BIOS” on page 112 for instructions.

Changing the BIOS Language

You can use the BIOS upgrade utility to change the language that the BIOS uses for messages and for the Setup program. Use a bootable diskette containing the Intel flash utility and language files.

1. Boot the computer with the bootable diskette in drive A. The BIOS upgrade utility screen appears.
2. Select Update Flash Memory From a File.
3. Select Update Language Set. Press <Enter>.
4. Select drive A and use the arrow keys to select the correct .lng file. Press <Enter>.
5. When the utility asks for confirmation that you want to flash the new language into memory, select Continue with Programming. Press <Enter>.
6. When the utility displays the message upgrade is complete, remove the diskette. Press <Enter>.
7. The computer will reboot and the changes will take effect.

Hot Keys

Use the numeric pad of the keyboard to enter numbers and symbols.

Table 30. Hot Keys

To Do This:	Press These Keys
Secure your system immediately.	<Ctrl+Alt>+hot key (Set your hot key combination with the SSU or BIOS Setup)
Enter BIOS Setup during POST.	<F2>
Abort memory test during POST.	<ESC> (Press while BIOS is updating memory size on screen)
Display a menu for selecting the boot device.	<ESC> (Press anytime after memory check)
To remove the splash screen.	<ESC>

4 Configuration Software and Utilities

System Software Update Sequence

When you update the system software, you should do it in the following order.

1. Update firmware (BMC & HSC)
2. Update FRU/SDR
3. Unplug system for 30 seconds
4. Update BIOS
5. Clear CMOS

Table 31. Configuration Utilities

Utility	Description and brief procedure	Page
Server Configuration Wizard	Use to configure the server, including creating and modifying the service partition, setting the system date and time, load FRU and SDR information, set server management information, create diskettes.	78
Direct Platform Control (DPC) Console	Use to access and monitor the server remotely.	78
System Setup Utility (SSU) and Client System Setup Utility (CSSU)	Use for viewing and configuring server management options, viewing the system event log (SEL), setting boot device priority, or setting system security options. The SSU can run either from the configuration software CD or from a set of bootable diskettes. You can create the diskettes from the CD. The CSSU is run from the service partition via the DPC console. It provides the same functionality as the SSU, but is used from a remote console. Information entered via the SSU or /CSSU overrides information entered via BIOS Setup.	81
BIOS Update Utility	Use to update the BIOS or recover from a corrupted BIOS update.	86
Firmware Update Utility	Use to update BMC flash ROM or other firmware.	91
FRU/SDR Load Utility	Use to update the Field Replaceable Unit (FRU) and Sensor Data Record (SDR) flash components. NOTE: You must run the FRU/SDR Load utility whenever the BMC is updated or if you change your processors.	95

Server Configuration Wizard

The Server Configuration Wizard (SCW) is a utility that is provided to help you configure your server. The Server Configuration Wizard is located on the System Resource CD-ROM shipped with the server and it runs automatically when you boot your server to this CD-ROM. The Server Configuration Wizard includes a help system that can be accessed by clicking the Help button.

Run the Configuration to:

- Create or update a Service Partition and install service partition files, including files that are necessary to run the System Setup Utility
- Load FRUs and SDRs
- Set the System Asset Tag
- Set Server Management settings, including an IP address, emergency management port (EMP) settings, platform event paging (PEP) settings, and LAN/Alert settings
- Execution utility applications that can be used to manually configure the server
- Create startup or installation diskettes for hardware device drivers and server configuration utility applications

When it is first executed, the SCW probes the server for installed devices, firmware, chassis information, hard disks, and other relevant data. This information is used to determine the questions the application needs to ask you to complete the configuration.

When you select the options Server Configuration Wizard > Run Wizard, you will be shown a selection window allowing you to choose the items you want to configure. You can select one or more options to configure at the same time. Some options have dependencies that make you select multiple options. These are:

- If you select Configure this server for LAN Alerting, the option for Configure this server for remote Server Management over a LAN connection will automatically be selected.
- If you select Configure this server for Serial/Modem alerting, the option for Configure this server for remote Server Management over a Serial/Modem connection will automatically be selected.

In addition, you can select only one of the following at a time:

- Load SDRs only onto this server
OR
- Load FRUs and SDRs onto this server

If you select multiple options, the Server Configuration Wizard will run each option to completion.

To use the Server Configuration utility to	Description of procedure	Page
Configure the server for remote LAN management	Enable a connection to the server from a workstation on the LAN to allow remote management functions, such as powering the server on or off, or running diagnostic utilities.	87
Configure for Remote Serial / Modem management	Enable a connection to the server from a serial or Modem connection to allow remote management functions, such as powering the server on or off, or running diagnostic utilities.	88
Configure for Serial / Modem alerting	Configure the server to send a telephone page in the event that a hardware or firmware error occurs at the server.	91
Configure for LAN alerting	Configure the server to send a notification message to a workstation segment of the network in the event that a hardware or firmware error occurs at the server.	92
Run the FRU/SDR Load Utility	Use to update the Field Replaceable Unit (FRU) and Sensor Data Record (SDR) flash components. NOTE: You must run the FRU/SDR Load utility whenever the BMC is updated or if you change your processors.	95
Configure an Asset Tag	Assign an identification number or serial number to the server.	98
Create / modify the service partition	If a service partition does not already exist, create one. If a service partition has been created earlier, update it.	99
Create System or Utility / Device Diskettes	Create diskettes by operating system, utility, or device driver.	98
Save / load configuration data	Save the configuration data to a file. Use this saved file to configure other servers identically.	100

Direct Platform Control (DPC) Console

Direct Platform Control (DPC) Console is part of Intel Server Management. Direct Platform Control is a server management application that supports remote system management via LAN, or an RS-232 serial connection to the server Serial B port over a modem or a direct serial cable. The Direct Platform Control Console provides the ability for remote management of Intel servers via modem or LAN with a capability to run DOS-based programs.

DPC console runs on a client workstation and is independent of the server operating system. It communicates with a server by:

- Accessing the server management capabilities of the on-board NIC
- A Windows[†] 2000 compatible modem
- An RS-232 connection to the server's Serial B port

Even when the server is off, you can use DPC Console to verify the state of a server or diagnose a problem with the server hardware. DPC console features allows you to:

- Establish connection to remote servers
- Server Control: power on, power off, and reset operations
- Retrieve and display entries in the System Event Log (SEL)
- Retrieve and display Sensor Data Records (SDR)
- Retrieve and display Field Replaceable Unit (FRU) information
- Retrieve and display current Remote Sensor Access (RSA) information
- Access a phonebook for remote connection management
- Remote control of the service partition
- File transfer from / to the server

DPC Console Modes of Operation

There are four DPC console modes of operation:

- EMP mode. Access the DPC console features using the DPC console window menus and/or toolbar. Active when a connection is established through the EMP port (Serial B).
- DPC over LAN mode. Access the DPC console features using the DPC console window menus and/or toolbar. Active when a connection is established through the LAN.
- Re-direct mode. Active when the server is running BIOS console redirection. In this mode, the DPC console launches a separate window. The window operates as an ANSI terminal and communicates with the server through the port. Character-based commands you type in the DPC Console go directly to the server, and the DPC Console displays the text that you would normally see on the server console.

To use this mode, you must configure the Console Redirection option of BIOS Setup for Re-direct mode. Enabling Console Redirection requires that the Boot Time Diagnostics Screen be Enabled in BIOS Setup. If the redirection window does not display information, the Console Redirection is either incorrectly configured or disabled, the EMP is disabled in BIOS Setup, or the server is in protected mode. For DPC to function in this mode, the server must NOT be in graphics mode.

If the DPC console fails to connect in EMP within 10 seconds and the server can operate in Re-direct mode, a prompt is displayed with the option to switch to Re-direct mode.

- Service Partition mode. Entered when the server reboots from the service partition and the DPC Console has successfully connected to the server. This mode allows running of DOS-based programs that are stored on the service partition of the local hard drive and transferring of files.

Running the DPC Console

For more information about setting up and running the DPC Console, see the *ISM Installation User's Guide*. This document is in the ISM\DOCS\[language] directory on the ISM CD accompanying the SE7501BR2 server board.

Using the System Setup Utility

The System Setup Utility (SSU) is located on the System Resource CD-ROM that is shipped with the server.

Run the System Setup Utility to:

- Set boot device priority
- Set passwords and security options
- View system events
- View FRU information
- View sensor data records
- Update system firmware and BIOS
- Save and restore the system configuration
- Set up the server to send alerts for platform events
- Set up the server for remote management

Using either the System Setup Utility or BIOS Setup, you can specify the boot device sequence and set up system passwords and security options. Both utilities access the same stored configuration data for these items, and the result of making a change to these settings using either utility is identical.

The SSU consists of a collection of task-oriented modules plugged into a common framework called the Application Framework (AF). The Application Framework provides a launching point for individual tasks and a location for setting customization information.

Creating SSU Diskettes

You can run the SSU from the Server Configuration Utilities menu of the Server Configuration Wizard, from a set of DOS diskettes, or from the service partition of the hard disk.

If you choose to run the SSU from a set of DOS diskettes, you must create the SSU diskettes from the Resource CD-ROM as follows:

1. Boot the System Resource CD-ROM to the Server Configuration Wizard.
2. Choose Create Diskettes > Create Diskettes by Device/Function > System Setup Utility.
3. Follow the instructions displayed.

Alternatively, if you have a workstation with the Microsoft Windows operating system, you can insert the CD into that system and create the diskettes on that system.

Running the SSU

When the SSU starts in the default local execution mode, it accepts input from the keyboard or mouse. The SSU presents a VGA-based GUI on the primary monitor.

If you run the SSU from read-only media you cannot save user preference settings (such as screen colors).

The SSU supports ROM-DOS version 6.22. The SSU will not operate from a “DOS box” running under an operating system such as Windows.

Start the SSU using one of the following methods:

- From diskettes: Insert the first SSU diskette in drive A and boot the server from the diskette. You are prompted to insert the second diskette. After loading completes the SSU starts automatically.
- From the System Resource CD: Boot the server to the Server Configuration Wizard and start the SSU from the Server Configuration Utilities menu.
- From the Service Partition: Boot the server to the Service Partition and execute the following DOS commands:

```
C:\> cd ssu
```

```
C:\SSU> ssu.bat
```

The mouse driver loads if it is available; press <Enter> to continue.

When the SSU title appears on the screen, press <Enter> to continue.

Working with the SSU Interface

You can access features of the SSU interface using the mouse or keyboard:

- **Mouse:** Click once to choose menu items and buttons or to select items in a list, such as the Available Tasks list. To run a list item, such as one of from the Available Tasks list, select the item and click OK or double-click the item.
- **Keyboard:** Use the tab and arrow keys to highlight buttons and press the spacebar or <Enter> to execute. You can also execute a menu or button by using the <Alt> key in combination with the underlined letter in the name of the menu or button.


You can have more than one task open at the same time, although some tasks might require complete control to avoid possible conflicts. The tasks achieve complete control by keeping the task as the center of operation until you close the task window.

The SSU has a build-in help system, which you access by clicking a Help button or choosing the Help menu.

Customizing the SSU Interface

The SSU lets you customize your interface using the Preferences section of the main window. The AF sets these preferences and saves them in the AF.INI file so that they take effect the next time you start the SSU. There are four user customizable settings:

- **Color:** lets you change the default colors associated with different items on the screen using predefined color combinations. The color changes take effect immediately.
- **Mode:** lets you set the desired expertise level: novice, intermediate, or expert. The expertise level determines which tasks are visible in the Available Tasks section and which actions each task performs. For a new mode setting to take effect, you must exit the SSU and restart it.
- **Language:** lets you change the text in the SSU to the appropriate language. For a new language setting to take effect, you must exit the SSU and restart it.
- **Other:** lets you show or hide the status bar at the bottom of the SSU main window. The change takes effect immediately.

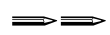

NOTE

If you run the SSU from read-only media (CD-ROM, for example), these preferences are lost when you exit the SSU.

Exiting the SSU

Exiting the SSU closes all SSU windows.

Setting Boot Device Priority

To change the boot priority of a device:

1. From the SSU Main window, choose Boot Devices.
2. In the Multiboot Options Add-in window, select a device.
3. Click the Move Up button to move it up in the list. Click the Move Down button to move it down.

Setting Passwords and Security Options

You can set a user password and an administrator password for the server. You must set an administrator password before you can set a user password. On other systems, the passwords are independent. You can set the same passwords and security options by using BIOS Setup.

Setting the Administrator Password

The Admin Password button lets you set or change the administrator password used by both the SSU and the system BIOS. This option is not available if both an administrator and a user password are set and you entered only the user password when you started the SSU. All changes to the administrator password take effect immediately.

To change or clear the administrator password:

1. From the SSU Main window, choose Security.
2. Click the Admin Password button.
3. If you are changing passwords, enter the old password.
4. Enter the new password (or leave blank to clear).
5. Confirm the password by entering it again (or leave blank to clear).
6. Click OK to save the password and return to the Security window.

Setting the User Password

The User Password button lets you set or change the user password used by both the SSU and the system BIOS. All changes to the user password take effect immediately.

To change or clear the user password:

1. From the SSU Main window, choose Security.
2. Click the User Password button.
3. If you are changing passwords, enter the old password in the first box.
4. Enter the new password (or leave blank to clear).
5. Confirm the password by entering it again (or leave blank to clear).
6. Click OK to save the password and return to the Security window.

Setting Security Options

For a description of security features, see “Security” on page 25.

To set the security options:

1. In the Security window, click the Options button.
2. For each option, select the desired setting from the list. The options are:
 - **Security Hot Key:** The key combination that can be used to put the server into secure mode.
 - **Secure Mode Timer:** If no keyboard or mouse activity occurs during the chosen time interval, the server enters secure mode.
 - **Secure Mode Boot:** Enable forces the server to boot directly into secure mode.
 - **Video Blanking:** Enable turns off the video when the server is in secure mode.
 - **Floppy Write:** Enable prevents writing to the diskette drive while the server is in secure mode.
 - **Power Switch Inhibit:** Enable prevents the power and reset buttons from functioning when the server is in secure mode. Disable allows the power and reset buttons to function normally when the server is in secure mode.
3. Click Save to save the settings and return to the Security window.

Viewing the System Event Log

To view the System Event Log (SEL):

1. From the SSU Main window, choose SEL Manager.
When you start the SEL Manager, it automatically loads the current list of events from non-volatile memory.
2. Use the <F4> and <F5> keys to scroll the window contents to the left and right to view all of the columns.
3. Use the File and SEL menu items to work with the SEL information:
 - **Open:** Views data from a previously saved SEL file.
 - **Save As:** Saves the currently loaded SEL data to a file.
 - **Properties:** Displays information about the SEL.
 - **Clear SEL:** Clears the SEL data from the nonvolatile storage area.
 - **Reload:** Refreshes the display by reading the current SEL entries from the server.
 - **Sort By:** Sorts the displayed events by event number, time stamp, sensor type and number, event description, or event generator ID.

Viewing FRU Information

To view the Field Replaceable Unit (FRU) information:

1. From the SSU Main window, choose FRU Manager.
When you start the FRU Manager, it automatically loads the current list of events from non-volatile memory.
The FRU Manager window has a navigation pane on the left that displays, in a tree format, the inventory of components in the server. The tree has three categories: Chassis, Board, and Product. Clicking on a category expands or collapses a list of components for that category. Clicking on an individual component displays the FRU information for that component in the presentation pane in the upper right. The description pane in the lower right displays a description of the currently selected FRU area.
2. Use the <F4> and <F5> keys to scroll the window contents to the left and right to view all of the columns.
3. Use the File and FRU menu items to work with the FRU information:
 - **Open:** Views data from a previously saved FRU file.
 - **Save As:** Saves the currently loaded FRU data to a file.
 - **Properties:** Displays the number of FRU devices in the system and the number being displayed. Only FRU devices with valid FRU areas are displayed.
 - **Reload:** Refreshes the display by reading the current FRU entries from the server.

Viewing Sensor Data Records

To view the Sensor Data Records (SDR):

1. From the SSU Main window, choose SDR Manager.

When you start the SDR Manager, it automatically loads the SDR entries from non-volatile memory.

The SDR Manager window has a navigation pane on the left that displays, in a tree format, the sensor data records. The tree has categories for each type of record. Clicking on a category expands or collapses a list of SDRs for that category. Clicking on an individual SDR displays the information for that SDR in the presentation pane in the upper right. The description pane in the lower right displays a description of the currently selected SDR type.

2. Use the <F4> and <F5> keys to scroll the window contents to the left and right to view all of the columns.
3. Use the File and SDR menu items to work with the SDR information:
 - **Open:** Views data from a previously saved SDR file.
 - **Save As:** Saves the currently loaded SDR data to a file.
 - **Properties:** Displays information about the SDR, including IPMI version, number of SDR entries, time stamps for changes to the SDR information, and free space remaining.
 - **Reload:** Refreshes the display by reading the SDR data from the server.

Updating System Firmware and BIOS

Using the SSU, you can update the BIOS, update the firmware, and verify the firmware. Procedures for each are given below. You can also update the BIOS and firmware without using the SSU. You can download the updates from the Intel support website:

<http://support.intel.com/support/motherboards/server>

Updating the BIOS

To update the BIOS:

1. Download the update from the Intel support website.
2. From the SSU Main window, choose System Update. (System Update is available only in Expert mode.)

When you start System Update, it automatically displays the current revision information for the system firmware and BIOS.

3. From the File menu, choose Load and choose a .uif or .bio file to use for the update.
4. Click the Update button to update the BIOS.

Updating the Firmware

To update the system firmware:

1. Download the update from the Intel support website.
2. From the SSU Main window, choose System Update. (System Update is available only in Expert mode.)

When you start System Update, it automatically displays the current revision information for the system firmware and BIOS.

3. From the File menu, choose Load and choose a .uif or .hex file to use for the update.
4. Click the Update button to perform the update.

Verifying the Firmware

To compare the system firmware in nonvolatile memory with a firmware file:

1. Download the update from the Intel support website.
2. From the SSU Main window, choose System Update. (System Update is available only in Expert mode.)

When you start System Update, it automatically displays the current revision information for the system firmware and BIOS.

3. From the File menu, choose Load and choose a .hex file to use for the update.
4. Click the Verify button to compare the firmware code in nonvolatile storage with the selected file.

Managing the Server Remotely

You can set up the server so that you can connect to it from a remote client system to perform management tasks and so that the server can contact you if a system error occurs. You can make the connection over a LAN or by using a modem or direct serial cable to the Emergency Management Port (EMP). You can set up the server to notify you when various events occur. Alerts can be delivered either as telephone pages or over the LAN.

Instructions for setting up the server for remote LAN and serial/modem access and for setting up the server to proactively alert or page you are given below.

How to Set Up Remote LAN Access

To set up the server so you can access it from a remote workstation, you can use either the Server Configuration Wizard or the System Setup Utility.

To use the Server Configuration Wizard to configure remote LAN access:

1. Use the Resource CD to boot the server to the Server Configuration Wizard.
2. Select Server Configuration Wizard and Continue.
3. Select Run Wizard and Continue.
4. Select the box that says "Configure this server for remote Server Management over a LAN connection".
5. Review the system date and time for accuracy and Continue.

6. In the IP Setup screen, choose either:
 - **DHCP:** the IP address for the server is automatically assigned by the DHCP (dynamic host control protocol) server on the network. The Host, Gateway, and Subnet Mask boxes in the dialog are ignored.
 - **Static:** assign the IP address for the server using the Host, Gateway, and Subnet Mask boxes in the dialog.
7. If you chose Static IP Setup in the previous step, fill in the IP addressing boxes:
 - **Host IP Address:** the IP address of this server.
 - **Gateway IP Address:** the IP address of the router for this server.
 - **Subnet Mask:** the IP address for the server's subnet. The server uses this to decide if the alert destination is on the same subnet.
 - **Backup Gateway IP Address:** (optional). The IP address of the alternate router for this server.
8. Click Continue. Click the LAN Password button (optional) to require that a password be entered before a user can perform server management functions on this server from a workstation on the LAN.
9. Select the LAN Access Mode to set the points at which LAN connectivity can be activated:
 - **Always Available:** a remote system can initiate a LAN connection, regardless of the server's state or health
 - **Restricted:** power control functions, such as power down, front panel NMI, and system reset cannot be performed remotely
 - **Disabled:** remote LAN connections cannot be initiated
10. Select the SOL Access Mode to set the user access level that is required for connecting to the server using Serial over LAN
 - **Always Available:** an individual can access the server through Serial over LAN if that user knows the server User password
 - **Restricted:** an individual can access the server through Serial over LAN if that user knows the server Administrator password
 - **Disabled:** Serial over LAN cannot be used.
11. Select the baud rate and then Continue.

To use the System Setup Utility to configure remote LAN access:

1. From the SSU Main window, choose Platform Event Manager (PEM).
2. In the PEM window, click Configure LAN and fill in the boxes described in the following steps (boxes that aren't listed here are not required for remote access).
3. To require a password for remote access, enter the password in the Enter New Password box and in the Verify New Password box. Passwords can be from 1 to 16 characters long, using any ASCII character in the range [32-126]. To clear the passwords, leave both boxes blank. (You can also clear the password by choose the menu Options > Clear LAN Password.)

4. From the LAN Access Mode list, select the remote access mode:
 - **Always Available:** a remote system can initiate a LAN connection regardless of the state or health of the server.
 - **Restricted:** a remote system can initiate a LAN connection, but cannot perform control operations such as power down, reset, or front panel NMI.
 - **Disabled:** remote systems are not allowed to initiate LAN connections.
5. In the IP Setup box, choose either:
 - **DHCP:** the IP address for the server is automatically assigned by the DHCP (dynamic host control protocol) server on the network. The Host, Gateway, and Subnet Mask boxes in the dialog are ignored.
 - **Static:** assign the IP address for the server using the Host, Gateway, and Subnet Mask boxes in the dialog.
6. If you chose Static IP Setup in the previous step, fill in the IP addressing boxes:
 - **Host IP Address:** the IP address of this server.
 - **Gateway IP Address:** the IP address of the router for this server.
 - **Subnet Mask:** the IP address for the server's subnet. The server uses this to decide if the alert destination is on the same subnet.
7. Click Save to save the changes.
8. Click Close to return to the PEM window.

How to Set Up Remote Modem or Serial Access

To set up the server so you can access it through a modem or a serial connection, you can use either the Server Configuration Wizard or the System Setup Utility.

To use the Server Configuration Wizard to configure remote modem or serial access:

1. Use the Resource CD to boot the server to the Server Configuration Wizard.
2. Select Server Configuration Wizard and Continue.
3. Select Run Wizard and Continue.
4. Select the box that says "Configure this server for remote Server Management over a Serial/Modem connection".
5. Review the system date and time for accuracy and Continue.
6. Enter the appropriate Serial / Modem parameters and Continue.
7. Click Continue. Click the Serial/Modem Password button (optional) to require that a password be entered before a user can perform server management functions on this server from a serial or Modem connection.
8. Select the Access Mode to set the points at which serial / Modem connectivity can be activated:
 - **Preboot Only:** the EMP is available only when the server is powered down or is running POST during startup. Once the operating system is loaded, a connection cannot be made.
 - **Always Active:** the EMP is available at any time.
 - **Disabled:** a connection cannot be made to the server using serial / Modem access.

9. Select the Restricted Mode to set the restrict power control operations:
 - **Enable:** enable restrictions. A user cannot use Serial / Modem access to affect the power state of the system, such as powering the server on or off.
 - **Disable:** disables restrictions. A user can choose to power the server on or off through a Serial / Modem connection.
10. Select the Connection Mode.
 - **Direct Connect:** Use direct connect when a system is connected directly to the server through the Serial port, without using an external modem.
 - **Modem Mode:** use Modem Mode when the Serial port is connected to an external modem.
11. System Phone Number: enter the telephone number that is used to connect to this server.
12. Click Continue.

To use the System Setup Utility to configure remote modem or serial access:

1. From the SSU Main window, choose Platform Event Manager (PEM).
2. In the PEM window, click Configure EMP and fill in the boxes described in the following steps (boxes that aren't listed here are not required for remote access).
3. To require a password for remote access, enter the password in the Enter New Password box and in the Verify New Password box. Passwords can be from 1 to 16 characters long, using any ASCII character in the range [32-126]. To clear the passwords, leave both boxes blank. (You can also clear the password by choose the menu Options > Clear LAN Password.)
4. In the Modem Ring Time box, enter the number of 500ms intervals that the BMC should wait before taking control of the serial 2 port and answering an incoming call. A value greater than zero gives the BIOS time to answer before the BMC takes control. A value of zero causes the BMC to answer immediately. The maximum value, 63, tells the BMC to ignore the call. Modem Ring Time applies only to Preboot access mode and is ignored for other access modes.
5. In the System Phone Number box, enter the number for the phone line connected to the modem on the EMP.
6. From the Access Mode list, choose the remote access mode:
 - **Always Active:** the EMP is available at any time.
 - **Preboot:** the EMP is available only when the server is powered down or is running POST during startup. Once the operating system is loaded, a connection cannot be made.
 - **Disabled:** remote systems are not allowed to initiate connections.
7. From the Restricted Mode list, choose either:
 - **Enabled:** a remote system can initiate a connection, but cannot perform control operations such as power down, reset, or front panel NMI.
 - **Disabled:** the remote system has full control of the server.
8. From the Connection Mode list, choose either:
 - **Direct Connect:** the Serial B port on the server is connected by a serial cable to the remote system.
 - **Modem Connect:** the Serial B port on the server is connected to a modem.
9. Click Save to save the changes.
10. Click Close to return to the PEM window.

How to Set Up Paging Alerts

To set up the server so it pages you in the event of an alert, you can use either the Server Configuration Wizard or the System Setup Utility.

To use the Server Configuration Wizard to configure the server to send alerts as telephone pages:

1. Use the Resource CD to boot the server to the Server Configuration Wizard.
2. Select Server Configuration Wizard and Continue.
3. Select Run Wizard and Continue.
4. Select the box that says “Configure this server for Serial/Modem Alerting” The box that says “Configure this server for remote Server Management over a Serial/Modem connection” will be automatically selected as a dependency.
5. Review the system date and time for accuracy and Continue.
6. Enter the appropriate Serial / Modem parameters and Continue.
7. Click the Serial/Modem Password button (optional) to require that a password be entered before a user can perform server management functions on this server from a serial or Modem connection.
8. Select the Access Mode to set the points at which serial / Modem connectivity can be activated:
 - **Preboot Only:** a serial or Modem connection can be made when the server is powered down or hard reset. Once the operating system is loaded, a connection cannot be made.
 - **Always Active:** a connection to the server can be established at any time.
 - **Disabled:** a connection cannot be made to the server using serial / Modem access.
9. Select the Restricted Mode to set the restrict power control operations:
 - **Enable:** enable restrictions. A user cannot use Serial / Modem access to affect the power state of the system, such as powering the server on or off.
 - **Disable:** disables restrictions. A user can choose to power the server on or off through a Serial / Modem connection.
10. Select the Connection Mode:
 - **Direct Connect:** Use direct connect when a system is connected directly to the server through the Serial port, without using an external modem.
 - **Modem Mode:** use modem mode when the Serial port is connected to an external modem.
11. System Phone Number: enter the telephone number that is used to connect to this server.
12. Click Continue.
13. Select the Enable Serial/Modem Paging option
14. Enter the telephone number the system should send the page if an event happens.
15. Enter the paging string the server should send after a phone connection is made.
16. Enter the Blackout Period: the time in minutes that should be allowed between pages. The valid range is [0 - 255] where 0 disables the blackout period. Setting a blackout period can save you from being flooded with repeat pages. After you receive a PEP page, no additional pages are sent by PEP for the duration of the blackout period.
17. Click the Alert Paging Filters button. Click the boxes enable / disable filters. Click OK when you are done, and then click Continue.

To use the System Setup Utility to set up the server to send alerts as telephone pages:

1. Install an external modem on the Emergency Management Port (Serial B).
2. From the SSU Main window, choose Platform Event Manager (PEM).
3. In the PEM window, click Configure EMP.
4. In the corresponding boxes, enter the following command strings for the modem attached to the EMP port (boxes that aren't listed here are not required for paging alerts):
 - **ESC Sequence:** the escape sequence. This string is sent to the modem before sending command strings. The maximum length for the string is five characters; longer strings are truncated.
 - **Hangup String:** hang up or drop the connection. The EMP automatically sends an <ENTER> character following this string. The maximum length for the string is eight characters; longer strings are truncated.
 - **Modem Dial Command:** the command to dial a phone number. This string is sent to the modem before sending the paging string.
 - **Modem Init String:** the initialization string for the modem. This string is sent every time the EMP initializes. The maximum length for the string is determined at run-time from firmware. You will be notified if the string is truncated. Following a save, the actual string saved is displayed in the edit box.
5. Click Save to save the changes.
6. Click Close to return to the PEM window.
7. In the PEM window, click Configure PEP.
8. Select the Enable PEP check box.
9. In the Blackout Period box, enter the minimum time, in minutes, between successive pages. The valid range is [0 - 255] where 0 disables the blackout period. Setting a blackout period can save you from being flooded with repeat pages. After you receive a PEP page, no additional pages are sent by PEP for the duration of the blackout period.
10. In the Paging String box, enter the phone number to dial for the page and the message you want sent with the page. The maximum length for the paging string is determined at run-time from firmware. You will be notified if the string is truncated. Following a save, the actual string saved is displayed in the edit box.
11. From the Options menu, choose Configure Event Actions.
12. In the Platform Event Paging Actions window, move the events that you want to generate an alert to the Enabled column and move all other events to the disabled column using the following buttons:
 - >>: Moves all events from the enabled list to the disabled list.
 - >: Moves the selected event from the enabled list to the disabled list.
 - <: Moves the selected event from the disabled list to enabled the list.
 - <<: Moves all events from the disabled list to the enabled list.
13. Click Save to save the changes.
14. Click Close to return to the PEP Configuration window.
15. To send a test page to verify that you have correctly configured PEP, from the Options menu, choose Send Alert.
16. Click Save to save the configuration.
17. Click Close to return to the Platform Event Manager window.

How Set Up LAN Alerts

To set up the server to send alerts over the LAN you can use either the SSU or the SCW. For more information about LAN alerts, see the documentation for Intel Server Management software.

To use the Server Configuration Wizard to configure the server to send alerts over the LAN:

1. Use the Resource CD to boot the server to the Server Configuration Wizard.
2. Select Server Configuration Wizard and Continue.
3. Select Run Wizard and Continue.
4. Select the “Configure this server for LAN Alerting” box. The box that says “Configure this server for remote Server Management over a LAN connection” will be automatically selected as a dependency.
5. Review the system date and time for accuracy and Continue.
6. In the IP Setup screen, choose either:
 - **DHCP:** the IP address for the server is automatically assigned by the DHCP (dynamic host control protocol) server on the network. The Host, Gateway, and Subnet Mask boxes in the dialog are ignored.
 - **Static:** assign the IP address for the server using the Host, Gateway, and Subnet Mask boxes in the dialog.
7. If you chose Static IP Setup in the previous step, fill in the IP addressing boxes:
 - **Host IP Address:** the IP address of this server.
 - **Gateway IP Address:** the IP address of the router for this server.
 - **Subnet Mask:** the IP address for the server’s subnet. The server uses this to decide if the alert destination is on the same subnet.
 - **Backup Gateway IP Address:** (optional). The IP address of the alternate router for this server.
8. Click Continue. Click the LAN Password button (optional) to require that a password be entered before a user can perform server management functions on this server from a workstation on the LAN.
9. Select the LAN Access Mode to set the points at which LAN connectivity can be activated:
 - **Always Available:** a remote system can initiate a LAN connection, regardless of the server’s state or health
 - **Restricted:** power control functions, such as power down, front panel NMI, and system reset cannot be performed remotely
 - **Disabled:** remote LAN connections cannot be initiated
10. Select the SOL Access Mode to set the user access level that is required for connecting to the server using Serial over LAN
 - **Always Available:** an individual can access the server through Serial over LAN if that user knows the server User password
 - **Restricted:** an individual can access the server through Serial over LAN if that user knows the server Administrator password
 - **Disabled:** Serial over LAN cannot be used
11. Select the baud rate and then Continue.
12. Select the Enable LAN Alerting option.

13. Enter the IP address for the system that should receive notifications if an event happens.
14. Enter the SNMP Community String. The default is public.
15. Check the box to resolve the Gateway MAC address (optional).
16. Click the LAN Alert Filters button. Click the boxes enable / disable filters. Click OK when you are done, and then click Continue.

To use the System Setup Utility to configure the server to send alerts over the LAN:

1. From the SSU Main window, choose Platform Event Manager (PEM).
2. In the PEM window, click Configure LAN and fill in the boxes described in the following steps (boxes that aren't listed here are not required for LAN alerts).
3. Select the Enable LAN Alerts check box.
4. (Optional) In the SNMP Community String box, enter a string for the community field in the Header section of the SNMP trap sent for an alert. The string must be from 5 to 16 characters. The default string is public.
5. In the IP Setup box, choose either:
 - **DHCP:** the IP address for the server is automatically assigned by the DHCP (dynamic host control protocol) server on the network. The Host, Gateway, and Subnet Mask boxes in the dialog are ignored.
 - **Static:** assign the IP address for the server using the Host, Gateway, and Subnet Mask boxes in the dialog.
6. If you chose Static IP Setup in the previous step, fill in the IP addressing boxes:
 - **Host IP Address:** the IP address of this server.
 - **Gateway IP Address:** the IP address of the router for this server.
 - **Subnet Mask:** the IP address for the server's subnet. The server uses this to decide if the alert destination is on the same subnet.
7. In the Alert IP Address box, fill in the IP address of the system you want to receive alerts from this server. If you want the alert to be broadcast to an entire subnet, enter the IP address for the subnet.
8. From the Options menu, choose Configure Event Actions.
9. In the BMC LAN Alerting Actions window, move the events that you want to generate an alert to the Enabled column and move all other events to the disabled column using the following buttons:
 - >>: Moves all events from the enabled list to the disabled list.
 - >: Moves the selected event from the enabled list to the disabled list.
 - <: Moves the selected event from the disabled list to enabled the list.
 - <<: Moves all events from the disabled list to the enabled list.
10. Click Save to save the changes.
11. Click Close to return to the BMC LAN Configuration window.
12. Click Save to save the changes.
13. Click Close to return to the PEM window.

Firmware Update Utility Description

The firmware can be updated in-band (operating system up) or out-of-band (operating system down); the following instructions reflect the out-of-band update steps. For in-band update instructions, refer to the Intel® Server Management Installation and User's Guide.

The Firmware Update Utility is a DOS-based program used to update the BMCs firmware code. You need to run the utility only if new firmware code is necessary.

How to Run the Firmware Update Utility

Review the release notes before proceeding.

1. Create a DOS-bootable diskette. The version of DOS must be 6.22 or higher.
2. Place the firmware update utility (FWUPDATE.EXE) and the *.hex file on the diskette. Make a note of the *.hex file name, because you will need it later.
3. Insert the diskette into the drive and boot to it.
4. At the DOS prompt, run the executable file (FWUPDATE.EXE).
5. The utility displays a menu screen. Select "Upload Flash."
6. The utility asks for a file name. Enter the name of the *.hex file.
7. The program will load the file and then ask if it should upload boot code. Press "N" to continue unless otherwise directed by the release notes or an Intel support professional.
8. The program next asks if it should upload operational code. Press "Y" to continue. The process of uploading operational code takes a few minutes.
9. Once the operational code updates and verifies, press any key to continue. Then press <ESC> to exit the program.
10. Proceed with the next section to load the FRU/SDR data.

FRU/SDR Load Utility Description

The Field Replaceable Unit (FRU) and Sensor Data Record (SDR) load utility is a DOS-based program that is used to update the server management subsystem's product level FRU and SDR nonvolatile storage components (EEPROMs). The utility:

- Discovers the product configuration based on instructions in a master configuration file
- Displays the FRU information
- Updates the EEPROM associated with the Baseboard Management Controller (BMC) that holds the SDR and FRU area
- Generically handles FRU devices that might not be associated with the BMC

The utility can be run directly from the Resource CD or from diskettes created from the CD.

If you run the FRU/SDR Load Utility from a diskette, copy the utility from the CD. Follow the instructions in the included README.TXT file.

If the diskette drive is disabled, or improperly configured, use BIOS Setup to enable it. If necessary, disable the drive after you are done with the FRU/SDR Load Utility.

How to Use the FRU/SDR Load Utility

The Server Configuration Wizard offers two routes to load the FRU/SDR records. One method is through the Server Configuration Wizard > Run Wizard menu. The other is through the Server Configuration Utilities menu. Instructions for each method follow.

To use the Server Configuration Wizard > Run Wizard menu to load the FRU/SDR records:

1. Use the Resource CD to boot the server to the Server Configuration Wizard.
2. Select Run Wizard and Continue.
3. Select Server Configuration Wizard and Continue.
4. To load only SDRs, select the option for Load SDRs only onto this server and Continue. To load both SDR records and FRU records, select the option for Load FRUs and SDRs onto this server and Continue.
5. Review the system date and time for accuracy and Continue.
6. Select the appropriate chassis type (SC5200 or Other) and Continue.
7. If you selected Load SDRs only onto this server in step 3, you have completed the SDR load. If you chose to load both SDR and FRU records, you are prompted to type in the chassis serial number and chassis part number. These entries are optional.

To use the Server Configuration Wizard > Server Configuration Utilities menu to load the FRU/SDR records:

1. Use the Resource CD to boot the server to the Server Configuration Wizard.
2. Select Server Configuration Utilities and Continue.
3. Select FRUSDR Load Utility and Continue.
4. You will see a black screen with a numbered prompt. Select the appropriate chassis type (SC5200 or Other).
5. Choose to load both FRU and SDR records, only SDR records, to modify the system asset tag, or to exit the application and return to the Server Configuration Wizard.

Command Line Format

You can also update the FRU/SDR files from a command-line prompt, separately from the Server Configuration Wizard. This utility:

- Is compatible with ROM-DOS Ver. 6.22, MS-DOS[†] Ver. 6.22 (and later versions), Windows[†] 95 DOS, and Windows 98 DOS
- Accepts CFG, SDR, and FRU load files (the executable file for the utility is FRU/SDR.exe)
- Requires the following supporting files:
 - One or more .fru files describing the system's field replaceable units
 - A .cfg file describing the system configuration
 - An .sdr file describing the sensors in the system

The command line format to do this is:

```
FRU/SDR [-?] [-h] [-d {fru, sdr}] [-cfg filename.cfg] [-fru filename.fru]
```


Table 32. Command Line Format

Command	Description
-? or -h	Displays usage information.
-d {fru, sdr}	Displays requested area only.
-cfg filename.cfg	Uses custom CFG file.
-p	Pause between blocks of data.

Parsing the Command Line

The FRU/SDR load utility allows only one command line function at a time. A command line function can consist of two parameters. Example: -cfg filename.cfg. Invalid parameters cause an error message and exit the program. You can use either a slash (/) or a minus sign (-) to specify command line options. Use the -p and flags with any of the other options.

Displaying a Given Area

When the utility is run with the -d FRU or -d SDR command line flag, information about each area is read from memory and printed on the screen. Each area represents one sensor for each instrumented device in the server. If the given display function fails because of an inability to parse the data present or a hardware failure, the utility displays an error message and exits.

Using Specified CFG File

Run the utility with the command line parameter of -cfg filename.cfg. The filename can be any DOS-accepted, eight-character filename string. The utility loads the specified CFG file and uses the entries in that file to probe the hardware and to select the proper SDRs to load into nonvolatile storage.

Displaying Utility Title and Version

The utility displays its title:

FRU & SDR Load Utility, Version Y.Y, Revision X.XX where Y.Y is the version number and X.XX is the revision number for the utility.

Configuration File

The configuration file is in ASCII text. The utility executes commands formed by the strings present in the configuration file. These commands cause the utility to run tasks needed to load the proper SDRs into the nonvolatile storage of the BMC and possibly generic FRU devices. Some of the commands may be interactive and require you to make a choice.

Prompting for Product Level FRU Information

With a configuration file, the utility might prompt you for FRU information.

Filtering Records from the SDR File

The MASTER.SDR file has all the possible SDRs for the system. You might need to filter these records based on the current product configuration. The configuration file directs the filtering of the SDRs.

Updating the SDR Nonvolatile Storage Area

After the utility validates the header area of the supplied SDR file, it updates the SDR repository area. Before programming, the utility clears the SDR repository area. The utility filters all tagged SDRs depending on the product configuration set in the configuration file. Untagged SDRs come automatically programmed. The utility also copies all written SDRs to the SDR.TMP file; it contains an image of what was loaded. The TMP file is also useful for debugging the server.

Updating FRU Nonvolatile Storage Area

After the configuration is determined, the utility updates the FRU nonvolatile storage area. First, it verifies the common header area and checksum from the specified FRU file. The internal use area reads out of the specified .FRU file then programmed into the nonvolatile storage. The chassis area reads out of the specified .FRU file. Finally, it reads the product area out of the specified FRU file, then the area programs into the FRU nonvolatile storage. All areas write to the FRU.TMP file.

Setting a System Asset Tag

You can use the Server Configuration Wizard to set an asset tag on the server. An asset tag is a user-defined identification number or serial number and can contain both letters and numbers. Use the steps below to set an asset tag using the Server Configuration Wizard.

1. Use the Resource CD to boot the server to the Server Configuration Wizard.
2. Select the Server Configuration Wizard option and Continue.
3. Select the Run Wizard option and Continue.
4. Select the option for Configure this server with a System Asset Tag and Continue.
5. Type in the asset tag and Continue.

Creating Diskettes


You can use the Resource CD to create diskettes for device drivers or for server management utilities. You can create diskettes for the NIC drivers, video drivers or SCSI drivers. You can also create diskettes to use for running the System Setup Utility and the FRU/SDR Load Utility. To create these diskettes, use the following steps:

1. Use the Resource CD to boot the server to the Server Configuration Wizard.
2. Select the Server Configuration Wizard option and Continue.
3. Select the Create Diskettes option and Continue.
4. Choose to create diskettes either by operating system or by utility/device driver and Continue.
5. If you chose operating system, you will be presented with a list of operating systems from which to select. If you selected utility / device driver, you will see a list of drivers and utilities from which to select. Select the appropriate operating system(s), utilities, and device driver(s) and Continue.

Installing a Service Partition (Optional)

When you are setting up your server system, you can install a service partition onto your hard drive. The service partition includes utilities, and other software that can be run locally or remotely to assist in server management. The service partition uses approximately 40 MB of hard disk space.

The service partition can be installed either with the Server Configuration Wizard or with the Intel Server Management CD.

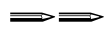

NOTE

It is highly recommended that you install the service partition **before** installing an operating system. For more information, see the Service Partition section in the *Installation and User's Guide for Intel Server Management*. This document is included on the ISM CD shipped with your server board.

To install the service partition use the Server Configuration Wizard

1. Use the Resource CD to boot the server to the Server Configuration Wizard.
2. Select the Server Configuration Wizard option and Continue.
3. Select the Run Wizard option and Continue.
4. Select the option for Install/Update a Service Partition and Continue.
5. Review the system date and time for accuracy and Continue.
6. If a service partition does not exist, you will see a screen listing the drives that the Server Configuration Wizard has identified. The fields are as follows:
 - Drive#: The order in which the drives were reported by the BIOS. Drive 1 is always the CD-ROM Drive and cannot have a service partition installed on it.
 - Size: the size of the drive in megabytes.
 - Formatted?: whether or not the drive has already been formatted for data storage.
 - Unused Space: the amount of space on the drive that has not been used.
 - SP Capable: whether or not a service partition can be created on the drive. The drive must be a minimum of 32 MB. Drives over 8 gigabytes must be empty, and the service partition can only be created on one of the first 8 drives reported.
7. Click Continue. The service partition will be created or updated.



NOTE

After the service partition is installed, you can boot to it by pressing F4 during POST. The service partition operating system is ROM-DOS. Once you have booted to the service partition, you will be at a DOS prompt. From the prompt, you can access utilities and perform server management functions by running batch files and executables. Example of these utilities include the System Setup Utility and FRU/SDR Load Utilities.

Saving and Restoring the System Configuration

Using the System Setup Utility, you can save the following configuration information to a file:

- Platform type, BIOS revision, and firmware revision
- CMOS settings
- Extended system configuration data (ESCD)
- Settings for the emergency management port (EMP), platform event paging (PEP), and BMC LAN alerts

Data is saved from all sources. You cannot choose only certain pieces of configuration data to save. You can also restore the information from a saved configuration file.

⇒ NOTE

BIOS passwords are stored in the file. Restoring a configuration can change passwords on a server. EMP and LAN passwords are not stored in the file. Passwords cannot be saved or restored.

Using the Server Configuration Wizard, you can save the following configuration information to a file:

- Serial / Modem data
- Paging data
- LAN configuration data
- LAN Alert data
- Service Partition configuration
- System asset tag

⇒⇒ NOTE

LAN passwords are not stored in the file. Passwords cannot be saved or restored.

Saving a Configuration

To save the system configuration from the System Setup Utility:

1. From the SSU Main window, choose Config Save/Restore. (Configuration Save/Restore is available only in Expert mode.)
2. Click Save To File and specify a filename and location.


To save the system configuration from the Server Configuration Wizard:

1. Follow the configuration prompts until you see “Save Server Configuration.”
2. Select the “Save Server Configuration” checkbox and click Continue.
3. Specify a filename and location as prompted.

Loading a Saved Configuration

To load a previously saved system configuration from a file using the System Setup Utility:

1. From the SSU Main window, choose Config Save/Restore. (Configuration Save/Restore is available only in Expert mode.)
2. Click Restore from File and specify a filename and location.

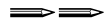


NOTE

You can load only a configuration that had been previously saved with the SSU.

To restore the system configuration from a file using the Server Configuration Utility:

1. Boot from the Resource CD into the Server Configuration Wizard.
2. Select the Server Configuration Wizard > Load from Diskette. Click continue.

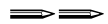

NOTE

You can load only a configuration that had been previously saved with the Server Configuration Wizard.

The utility reads the platform type, BIOS revision, and firmware revision from the file and compares that information with the same information retrieved from the server. If the two do not match, an error message is displayed and the load operation aborts. If they do match, the utility saves the configuration data to the server. You will need to reboot your server for the changes to take effect.

Using the Intel Server Management and Intel® SMaRT Tool (Optional)

Intel Server Management and the hard drive Service Partition provide real-time monitoring and alerting for your SE7501BR2 server hardware, emergency remote management, and remote server setup. Intel Server Management is implemented by installing it within client-server architecture.


The Service Partition provides you with the ability to remotely access a local partition on the server and to identify and diagnose server health issues. Remote access is provided through either a modem or network connection.

To get started with Intel Server Management, install the Service Partition first. See “Installing a Service Partition (Optional)”, page 99. After the service partition is installed, install operating system, and then Intel Server Management and the Intel SmaRT Tool. The information here describes installation on a system running a Microsoft Windows operating system.

The Intel Server Maintenance and Reference Training (SMaRT) Tool is an interactive software tool providing support information to assist with the maintenance and repair of Intel-based server systems and accessories. SMaRT Tool features visual, step-by-step instructions for replacing parts; a complete Field Replaceable Unit (FRU) database containing part numbers and images; product spares lists, and worldwide Intel support information.

Intel Server Management provides an interface to the Intel® SMaRT Tool, combining remote error detection and alerting with interactive maintenance and repair assistance. When Intel Server Management detects a hardware error and a part needs replacing, SMaRT Tool can be launched directly from Intel Server Management to locate the correct part information and corresponding “How to Replace” steps required to quickly get the server back up and running.

To activate Intel Server Management’s interface with the Intel SMaRT Tool, both software programs need to be installed. You can install the software on a server or on a workstation used to manage the server. The information here describes installation on a system running a Microsoft Windows operating system. For other operating systems, see the Installation Guide & User Guide located in the ISM/DOCS folder on the Intel Server Management CD-ROM. SMaRT Tool and ISM Console may only be installed on a system running a Microsoft Windows operating system.

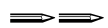

NOTE

Prior to installation, uninstall any previous version of Intel Server Management.

Installing Intel Server Management

You can install Intel Server Management on a local server or on a remote workstation that is used to manage a LAN/WAN.

1. Insert the Intel Server Management CD into the system's CD-ROM.
2. Click Install Server Management.
3. Select the applicable system option.
4. Review the Intel Software License Agreement and click Accept.
5. If installing to a local server, click Install Now. If this is a multiple system installation, click Add to compile a list of systems and then click Install Now.
6. Select Reboot Now or Reboot Later.
7. Remove the Intel Server Management CD.

Installing Intel SMaRT Tool

Follow the instructions below to install the Intel Server Maintenance and Reference Training Tool (SMaRT Tool) on your system.



NOTE

SMaRT Tool may only be installed on a system running a Microsoft Windows operating system.

To download the SE7501BR2 SR5200 system module for SMaRT Tool, you must have Internet access.

1. Insert the System Resource CD into the system's CD-ROM drive.
2. Click on Intel SMaRT Tool in the menu on the left side of the screen.
3. In the green Make a Selection drop-down menu, select SMaRT Tool Install Guide. Print the Guide, and keep it on hand for reference.
4. Review the SMaRT Tool Install Guide prior to proceeding.
5. In the Make a Selection drop-down menu, select Install SMaRT Tool.
6. Click on the Run Installer icon to launch the SMaRT Tool Setup program.
7. Follow the on-screen installation instructions. Review the Intel Software License Agreement and click Accept. When installation is complete, launch SMaRT Tool.
8. In SMaRT Tool's Welcome page, click on Systems.
9. Select Select System > Servers > Xeon > SE7501BR2 SR5200 and follow the on-screen instructions to download the module. When the download is complete, SMaRT Tool will restart.
10. Select Systems > Select System > Servers > Xeon > SE7501BR2 SR52 to access information on your new server system.

You can invoke SMaRT Tool directly from Intel Server Management's Platform Instrumentation Control application by clicking on the SMaRT Tool icon, or by selecting Launch SMaRT Tool from the SMaRT Tool menu. The interface between the two programs is context-sensitive. To find out more about the integration between Intel SMaRT Tool and Intel Server Management, please select SMaRT Tool and Server Management in the Make a Selection drop-down menu.

5 Solving Problems

This chapter helps you identify and solve problems that might occur while you are using the system.

Resetting the System

To do this:	Press:
Soft boot reset, which clears system memory and reloads the operating system.	<Ctrl+Alt+Del>
Clear system memory, restart POST, and reload the operating system.	Reset button
Cold boot reset. Turn the system power off and then on. This halts power to all peripherals, clears system memory, restarts POST, and reloads the operating system.	Power off/on

Initial System Startup

Problems that occur at initial system startup are usually caused by incorrect installation or configuration. Hardware failure is a less frequent cause.

Checklist

- ☐ Is AC power available at the wall outlet?
- ☐ Are the power supplies plugged in? Check the AC cable on the back of the chassis and at the AC source.
- ☐ Are all cables correctly connected and secured?
- ☐ Are the processors fully seated in their sockets on the server board?
- ☐ Are all add-in PCI boards fully seated in their slots on the server board?
- ☐ Are all jumper settings on the server board correct?
- ☐ Are all jumper and switch settings on add-in boards and peripheral devices correct? To check these settings, refer to the manufacturer's documentation that comes with them. If applicable, ensure that there are no conflicts—for example, two add-in boards sharing the same interrupt.
- ☐ Are all peripheral devices installed correctly?
- ☐ If the system has a hard disk drive, is it properly formatted or configured?
- ☐ Are all device drivers properly installed?
- ☐ Are the configuration settings made in Setup correct?
- ☐ Is the operating system properly loaded? Refer to the operating system documentation.
- ☐ Did you press the system power on/off switch on the front panel to turn the server on (power on light should be lit)?
- ☐ Is the system power cord properly connected to the system and plugged into a NEMA 5-15R outlet for 100-120 V~ or a NEMA 6-15R outlet for 200-240 V~?
- ☐ Are all integrated components from the tested components lists? Check the tested memory, and chassis lists, as well as the supported hardware and operating system list on the Intel Customer Support website.

Running New Application Software

Problems that occur when you run new application software are usually related to the software. Faulty equipment is much less likely, especially if other software runs correctly.

Checklist

- ☐ Does the system meet the minimum hardware requirements for the software? See the software documentation.
- ☐ Is the software an authorized copy? If not, get one; unauthorized copies often do not work.
- ☐ If you are running the software from a diskette, is it a good copy?
- ☐ If you are running the software from a CD-ROM disk, is the disk scratched or dirty?
- ☐ If you are running the software from a hard disk drive, is the software correctly installed? Were all necessary procedures followed and files installed?
- ☐ Are the correct device drivers installed?
- ☐ Is the software correctly configured for the system?
- ☐ Are you using the software correctly?

If the problems persist, contact the software vendor's customer service representative.

After the System Has Been Running Correctly

Problems that occur after the system hardware and software have been running correctly often indicate equipment failure. Many situations that are easy to correct, however, can also cause such problems.

Checklist

- ☐ If you are running the software from a diskette, try a new copy of the software.
- ☐ If you are running the software from a CD-ROM disk, try a different disk to see if the problem occurs on all disks.
- ☐ If you are running the software from a hard disk drive, try running it from a diskette. If the software runs correctly, there may be a problem with the copy on the hard disk drive. Reinstall the software on the hard disk, and try running it again. Make sure all necessary files are installed.
- ☐ If the problems are intermittent, there may be a loose cable, dirt in the keyboard (if keyboard input is incorrect), a marginal power supply, or other random component failures.
- ☐ If you suspect that a transient voltage spike, power outage, or brownout might have occurred, reload the software and try running it again. (Symptoms of voltage spikes include a flickering video display, unexpected system reboots, and the system not responding to user commands.)

➡ NOTE

Random errors in data files: If you are getting random errors in your data files, they may be getting corrupted by voltage spikes on your power line. If you are experiencing any of the above symptoms that might indicate voltage spikes on the power line, you may want to install a surge suppressor between the power outlet and the system power cord.

More Problem Solving Procedures

This section provides a more detailed approach to identifying a problem and locating its source.

Preparing the System for Diagnostic Testing



CAUTION

Turn off devices before disconnecting cables: Before disconnecting any peripheral cables from the system, turn off the system and any external peripheral devices. Failure to do so can cause permanent damage to the system and/or the peripheral devices.

1. Turn off the system and all external peripheral devices. Disconnect all of them from the system, except the keyboard and video monitor.
2. Make sure the system power cord is plugged into a properly grounded AC outlet.
3. Make sure your video display monitor and keyboard are correctly connected to the system. Turn on the video monitor. Set its brightness and contrast controls to at least two thirds of their maximum ranges (see the documentation supplied with your video display monitor).
4. If the operating system normally loads from the hard disk drive, make sure there is no diskette in drive A. Otherwise, place a diskette containing the operating system files in drive A.
5. Turn on the system. If the power LED does not light, see “Power Light Does Not Light” on page 110.

Monitoring POST

See Chapter 3.

Verifying Proper Operation of Key System Lights

As POST determines the system configuration, it tests for the presence of each mass storage device installed in the system. As each device is checked, its activity light should turn on briefly. Check for the following:

- ☐ Does the diskette drive activity light turn on briefly? If not, see “Diskette Drive Activity Light Does Not Light” on page 110.
- ☐ If a second diskette drive is installed, does its activity light turn on briefly? If not, see “Diskette Drive Activity Light Does Not Light” on page 110.

Confirming Loading of the Operating System

Once the system boots up, the operating system prompt appears on the screen. The prompt varies according to the operating system. If the operating system prompt does not appear, see “No Characters Appear on the Screen” on page 108.

Specific Problems and Corrective Actions

This section provides possible solutions for these specific problems:

- Power light does not light.
- No characters appear on screen.
- Characters on the screen appear distorted or incorrect.
- System cooling fans do not rotate.
- Diskette drive activity light does not light.
- Hard disk drive activity light does not light.
- CD-ROM drive activity light does not light.
- There are problems with application software.
- The bootable CD-ROM is not detected.

Try the solutions in the order given. If you cannot correct the problem, contact your service representative or authorized dealer for help.

Power Light Does Not Light

Check the following:

- ☐ Is the system operating normally? If so, the power LED is probably defective or the cable from the front panel to the server board is loose.
- ☐ Are there other problems with the system? If so, check the items listed under ‘system Cooling Fans Do Not Rotate Properly.’

If all items are correct and problems persist, contact your service representative or authorized dealer for help.

No Characters Appear on Screen

Check the following:

- ☐ Is the keyboard functioning? Check to see that the “Num Lock” light is functioning.
- ☐ Is the video monitor plugged in and turned on?
- ☐ Are the brightness and contrast controls on the video monitor properly adjusted?
- ☐ Are the video monitor switch settings correct?
- ☐ Is the video monitor signal cable properly installed?
- ☐ Is the onboard video controller enabled?

If you are using an add-in video controller board, do the following:

1. Verify that the video controller board is fully seated in the server board connector.
2. Reboot the system for changes to take effect.
3. If there are still no characters on the screen after you reboot the system and POST emits a beep code, write down the beep code you hear. This information is useful for your service representative.
4. If you do not receive a beep code and characters do not appear, the video display monitor or video controller may have failed. Contact your service representative or authorized dealer for help.

Characters Are Distorted or Incorrect

Check the following:

- ☐ Are the brightness and contrast controls properly adjusted on the video monitor? See the manufacturer's documentation.
- ☐ Are the video monitor's signal and power cables properly installed?

If the problem persists, the video monitor may be faulty or it may be the incorrect type. Contact your service representative or authorized dealer for help.

System Cooling Fans Do Not Rotate Properly

If the system cooling fans are not operating properly, system components could be damaged.

Check the following:

- ☐ Is AC power available at the wall outlet?
- ☐ Is the system power cord properly connected to the system and the wall outlet?
- ☐ Did you press the power button?
- ☐ Is the power on light lit?
- ☐ Have any of the fan motors stopped (use the server management subsystem to check the fan status)?
- ☐ Are the fan power connectors properly connected to the server board?
- ☐ Is the cable from the front panel board connected to the server board?
- ☐ Are the power supply cables properly connected to the server board?
- ☐ Are there any shorted wires caused by pinched-cables or power connector plugs forced into power connector sockets the wrong way?

If the switches and connections are correct and AC power is available at the wall outlet, contact your service representative or authorized dealer for help.

Diskette Drive Activity Light Does Not Light

Check the following:

- ☐ Are the diskette drive's power and signal cables properly installed?
- ☐ Are all relevant switches and jumpers on the diskette drive set correctly?
- ☐ Is the diskette drive properly configured?
- ☐ Is the diskette drive activity light always on? If so, the signal cable may be plugged in incorrectly.

If you are using the onboard diskette controller, use the BIOS setup to make sure that "Onboard Floppy" is set to "Enabled." If you are using an add-in diskette controller, make sure that "Onboard Floppy" is set to "Disabled."

If the problem persists, there may be a problem with the diskette drive, server board, or drive signal cable. Contact your service representative or authorized dealer for help.

Hard Disk Drive Activity Light Does Not Light

The hard disk drive activity LED is not connected to the SE7501BR2 server board front panel.

CD-ROM Drive Activity Light Does Not Light

Check the following:

- ☐ Are the CD-ROM drive's power and signal cables properly installed?
- ☐ Are all relevant switches and jumpers on the drive set correctly?
- ☐ Is the drive properly configured?

Cannot Connect to a Server

- ☐ Make sure you are using the drivers that are shipped on the system Configuration Software CD for the onboard network controller.
- ☐ Make sure the driver is loaded and the protocols are bound.
- ☐ Make sure the network cable is securely attached to the connector at the system back panel. If the cable is attached but the problem persists, try a different cable.
- ☐ Make sure the hub port is configured for the same duplex mode as the network controller.
- ☐ Check with your LAN administrator about the correct networking software that needs to be installed.
- ☐ If you are directly connecting two servers (no hub), you will need a crossover cable (see your hub documentation for more information on crossover cables).
- ☐ Check the network controller LEDs that are visible through an opening at the system back panel.

Problems with Network

Diagnostics pass, but the connection fails.

- ☐ Make sure the network cable is securely attached.
- ☐ Make sure you specify the correct frame type in your NET.CFG file.

The Front Panel Activity LED doesn't light.

The network activity LED is not connected to the SE7501BR2 server board front panel.

The controller stopped working when an add-in adapter was installed.

- ☐ Make sure the cable is connected to the port from the onboard network controller.
- ☐ Make sure your PCI BIOS is current. Try the "PCI Installation Tips" below.
- ☐ Make sure the other adapter supports shared interrupts. Also, make sure your operating system supports shared interrupts.
- ☐ Try reseating the add-in adapter.

The add-in adapter stopped working without apparent cause.

- ☐ Try reseating the adapter first; then try a different slot if necessary.
- ☐ The network driver files may be corrupt or deleted. Delete and then reinstall the drivers.
- ☐ Run the diagnostics.

PCI Installation Tips

Some common PCI tips are listed here.

- ☐ Certain drivers may require interrupts that are not shared with other PCI drivers. For certain drivers, it may be necessary to alter settings so that interrupts are not shared.

Problems with Application Software

If you have problems with application software, do the following:

- ☐ Verify that the software is properly configured for the system. See the software installation and operation documentation for instructions on setting up and using the software.
- ☐ Try a different copy of the software to see if the problem is with the copy you are using.
- ☐ Make sure all cables are installed correctly.
- ☐ If other software runs correctly on the system, contact your vendor about the failing software.

If the problem persists, contact the software vendor's customer service representative for help.

Bootable CD-ROM Is Not Detected

Check the following:

- ☐ Is the BIOS configured to allow the CD-ROM to be the first bootable device?

Recovering the BIOS

In the rare event that the BIOS becomes damaged a recovery process needs to be followed to return the system to serviceability. The steps below explain the BIOS recovery procedure.

⇒ NOTE

This is the mode of last resort, used only when the main system BIOS will not come up.

Recovery mode requires at least 4 MB of RAM, and drive A: must be configured to support and boot from a 3.5" 1.44 MB floppy drive.

Because of the small amount of code available in the non-erasable boot block area, there is no video support; you will not see anything on the screen during the procedure. Monitor the procedure by listening to the speaker. One high-pitched beep announces the start of the recovery process. The entire process takes two to four minutes. A successful update ends with two high-pitched beeps. Failure is indicated by a long series of short beeps.

1. Create a bootable diskette that contains the BIOS update file and the iFLASH.EXE utility. This is available from:
<http://support.intel.com/support/motherboards/server/SE7501BR2>
2. Turn off the system power and disconnect the AC power.
3. Open the server chassis.
4. Move the BIOS recovery jumper to the recovery state, covering pins 10 and 11 with the jumper. In the figure below, the recovery jumper is labeled "Recovery Boot."

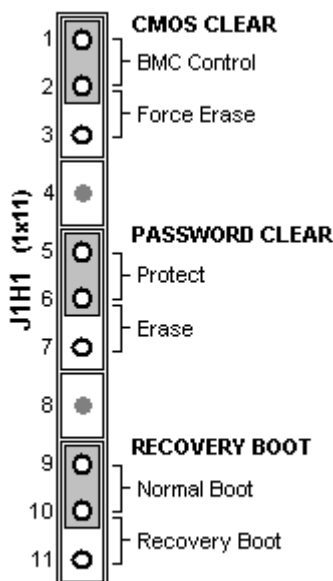


Figure 29. BIOS Recovery Jumper

5. Insert the bootable BIOS recovery diskette that contains the BIOS update files.
6. Replace the AC power cord and turn on the system power.

The recovery BIOS boots from the recovery diskette and emits one beep when it passes control to DOS. DOS then executes a special AUTOEXEC.BAT that contains “iFLASH” on the first line. If it is determined that the system is in recovery mode, iFLASH will start the flash update without user intervention.

iFLASH reads the flash image and programs the necessary blocks. It emits one beep to indicate the beginning of the flash operation. After two to four minutes, the BIOS emits two beeps to indicate that the flash procedure was completed successfully. If the flash procedure fails, the BIOS emits a continuous series of beeps.

When the flash update completes:

1. Turn off the system power and remove the AC power.
2. Remove the recovery diskette.
3. Restore the BIOS recovery jumper to its original position, covering pins 9 and 10.
4. Close the server chassis.
5. Replace the AC power and turn on the system power.
6. Re-flash any custom blocks, such as user binary or language blocks.

The system should now boot normally using the updated system BIOS.

Clearing the Password with the Password Jumper

If the user or administrator password(s) is lost or forgotten, moving the password clear jumper into the “clear” position clears both passwords. The password clear jumper must be restored to its original position before a new password(s) can be set. The password clear jumper is located on jumper block J1H1 on the SE7501BR2 board.

1. Power down the system and disconnect the AC power.
2. Open the server chassis.
3. Move the Password Clear jumper to the Erase position, covering pins 6 and 7 as indicated in the following diagram.

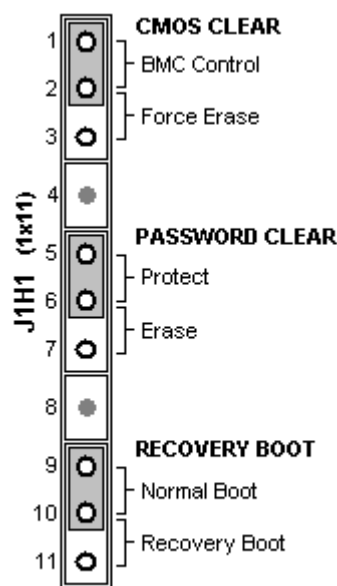


Figure 30. Password Recovery Jumper

4. Reconnect the AC power, power up the system.
5. Power down the system and disconnect the AC power.
6. Return the Password Clear jumper to its original position, covering pins 5 and 6.
7. Close the server chassis.

Clearing CMOS with the CMOS Jumper

If you are not able to access the BIOS setup screens, the CMOS Clear jumper will need to be used to reset the configuration RAM. The CMOS Clear jumper is located on jumper block J1H1 on the SE7501BR2 board.

1. Power down the system and disconnect the AC power.
2. Open the server.
3. Move the CMOS Clear jumper to the Force Erase position, covering pins 2 and 3 as indicated in the following diagram.

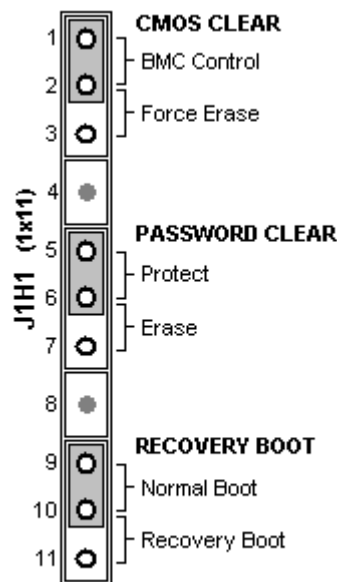


Figure 31. CMOS Recovery Jumper

4. Reconnect the AC power, power up the system.
5. Press F2 and enter the BIOS Setup Utility. When BIOS Setup is loaded, press the F9 key and Enter to return the parameters to the default values.
6. Modify any BIOS Setup values according to the desired system configuration.
7. Press F10 and Enter to exit BIOS Setup and save changes.
8. Power down the system and disconnect the AC power.
9. Return the CMOS Clear jumper to its original position, covering pins 1 and 2.
10. Close the server chassis.

6 Getting Help

World Wide Web

<http://support.intel.com/support/motherboards/server/SE7501BR2>

Telephone

All calls are billed US \$25.00 per incident, levied in local currency at the applicable credit card exchange rate plus applicable taxes. (Intel reserves the right to change the pricing for telephone support at any time without notice.)

In U.S. and Canada		1-800-404-2284	
In Europe			
UK	0870 6072439	Finland	9 693 79297
France	01 41 918529	Denmark	38 487077
Germany	069 9509 6099	Norway	23 1620 50
Italy	02 696 33276	Sweden	08 445 1251
Spain	91 377 8166	Holland	020 487 4562
In Asia-Pacific region			
Australia	1800 649931	Indonesian	001-803 65 7249
Hong Kong	852 2 844 4456	Malaysia	1-800 80 1390
Korea	822 767 2595	New Zealand	0800 444 365
PRC	800 820 1100	Pakistan	632 6368415 (IDD via Philippines)
Singapore	65 213-1311	Philippines	1-800 1 651 0117
Taiwan	2 2545-1640	Thailand	1-800 6310003
India	0006517-830 3634	Vietnam	632 6368416 (IDD via Philippines)
In Japan			
0120-868686 (Domestic)		81-298-47-0800 (outside country)	
In Latin America			
Brazil	0021-0811-408-5540	Ecuador	999-119, 800-628-8686 (via AT&T)
Mexico	001-800-628-8686	Guatemala	99-99-190, 800-628-8686 (via AT&T)
Colombia	980-9-122-118	Venezuela	800-11-120, 800-628-8686 (via AT&T)
Costa Rica	0-800-011-0395	Argentina	001-800-222-1001, 800-628-8686 (via AT&T)
Panama	001-800-628-8686	Paraguay	008-11, 800-628-8686 (via AT&T)
Chile	800-532-992	Peru	0-800-50000, 800-628-8686 (via AT&T)
Miami	1-800-621-8423	Uruguay	000-410, 800-628-8686 (via AT&T)

For an updated support contact list, please see <http://www.intel.com/support/9089.htm>

7 Technical Reference

Configuration Jumpers

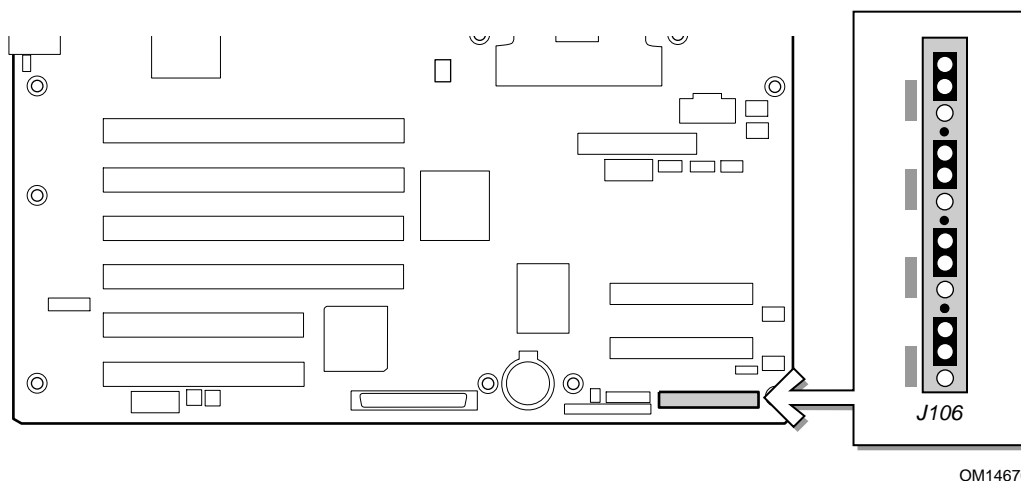



Figure 32. Configuration Jumper Location

Table 33. Configuration Jumper (J1H1)

Jumper Name	Pins	What happens at system reset
CMOS normal operation	1-2	These pins are for normal operation.
CMOS clear	2-3	If these pins are jumpered, the CMOS settings will be cleared on the next reset. These pins should not be jumpered for normal operation.
Password normal operation	5-6	These pins are for normal operation.
Password Clear	6-7	If these pins are jumpered, the password will be cleared on the next reset. These pins should not be jumpered for normal operation.
BIOS normal operation	9-10	These pins are for normal operation.
BIOS Recovery	10-11	If these pins are jumpered, the system will attempt BIOS recovery. These pins should not be jumpered for normal operation.
BMC normal operation	1-2	These pins are for normal operation.
BMC Flash EN	2-3	If these pins are jumpered, the system will allow the BMC Flash to be overwritten by the firmware update utility.

Front Panel Header

The front panel header provides connection to the front panel for power switching and LED operation.

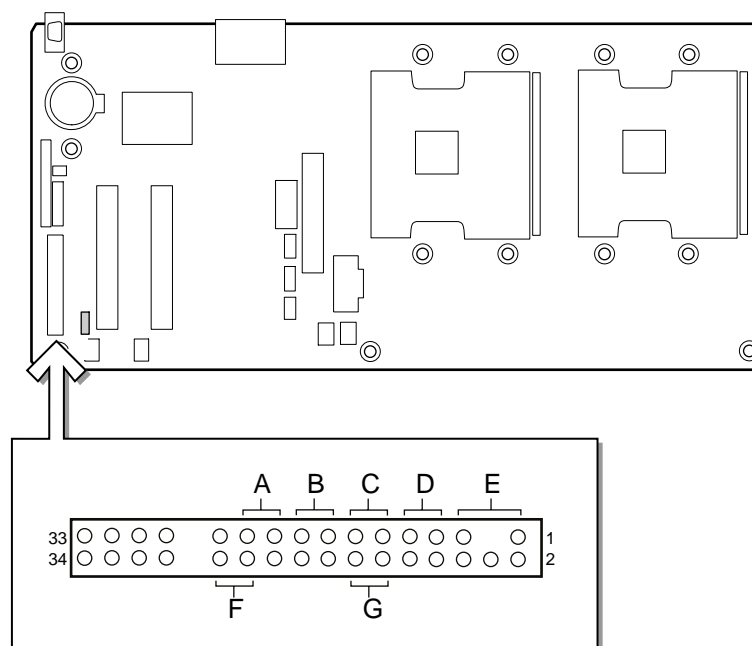

OM14668

- A. Sleep Switch
- B. Reset Switch
- C. Power Switch
- D. HDD LED
- E. Power LED
- F. NIC 2 LED
- G. NIC 1 LED

Figure 33. Front Panel Header Connection Location

Table 34. Front Panel Header Connection Descriptions

Location	Pins	Description
A	19 & 21	Pressing the sleep button immediately puts the server board into the sleep mode
B	15 & 17	Pressing the reset button restarts the boot process
C	11 & 13	Pressing the power switch removes all by standby power from the board
D	7 & 9	LED show hard disk drive activity
E	1 & 5	LED shows power on
F	22 & 24	LED shows network interface controller activity
G	12 & 14	LED shows network interface controller activity

8 Regulatory and Integration Information

Product Regulatory Compliance

Product Safety Compliance

The SE7501BR2 complies with the following safety requirements:

- UL 1950 - CSA 950 (US/Canada)
- EN 60 950 (European Union)
- IEC60 950 (International)
- CE – Low Voltage Directive (73/23/EEC) (European Union)
- EMKO-TSE (74-SEC) 207/94 (Nordics)
- GOST R 50377-92 (Russia)

Product EMC Compliance

The SE7501BR2 has been tested and verified to comply with the following electromagnetic compatibility (EMC) regulations when installed a compatible Intel® host system. For information on compatible host system(s) refer to Intel's Server Builder website or contact your local Intel representative.

- FCC (Class A Verification) – Radiated & Conducted Emissions (USA)
- ICES-003 (Class A) – Radiated & Conducted Emissions (Canada)
- CISPR 22, 3rd Edition (Class A) – Radiated & Conducted Emissions (International)
- EN55022 (Class A) – Radiated & Conducted Emissions (European Union)
- EN55024 (Immunity) (European Union)
- CE – EMC Directive (89/336/EEC) (European Union)
- VCCI (Class A) – Radiated & Conducted Emissions (Japan)
- AS/NZS 3548 (Class A) – Radiated & Conducted Emissions (Australia / New Zealand)
- RRL (Class A) Radiated & Conducted Emissions (Korea)
- BSMI CNS13438 (Class A) Radiated & Conducted Emissions (Taiwan)
- GOST R 29216-91 (Class A) Radiated & Conducted Emissions (Russia)
- GOST R 50628-95 (Immunity) (Russia)

Product Regulatory Compliance Markings

This product is marked with the following Product Certification Markings:

Table 35. Product Certification Markings

UL Recognition Mark	
CE Mark	
Russian GOST Mark	
Australian C-Tick Mark	
BSMI DOC Marking	
BSMI EMC Warning	警告使用者： 這是甲類的資訊產品，在居住的環境中使用時， 可能會造成射頻干擾，在這種情況下，使用者會 被要求採取某些適當的對策
RRL MIC Mark	

Electromagnetic Compatibility Notices

FCC (USA)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For questions related to the EMC performance of this product, contact:

Intel Corporation
5200 N.E. Elam Young Parkway
Hillsboro, OR 97124
1-800-628-8686

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit other than the one to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment. The customer is responsible for ensuring compliance of the modified product.

Only peripherals (computer input/output devices, terminals, printers, etc.) that comply with FCC Class A or B limits may be attached to this computer product. Operation with noncompliant peripherals is likely to result in interference to radio and TV reception.

All cables used to connect to peripherals must be shielded and grounded. Operation with cables, connected to peripherals, that are not shielded and grounded may result in interference to radio and TV reception.

Industry Canada (ICES-003)

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the interference-causing equipment standard entitled: “Digital Apparatus,” ICES-003 of the Canadian Department of Communications.

Cet appareil numérique respecte les limites bruits radioélectriques applicables aux appareils numériques de Classe A prescrites dans la norme sur le matériel brouilleur: “Appareils Numériques”, NMB-003 édictée par le Ministre Canadien des Communications.

Europe (CE Declaration of Conformity)

This product has been tested in accordance too, and complies with the Low Voltage Directive (73/23/EEC) and EMC Directive (89/336/EEC). The product has been marked with the CE Mark to illustrate its compliance.

Taiwan Declaration of Conformity

This product has been tested and complies with CNS13438. The product has been marked with the BSMI DOC mark to illustrate compliance.

Korean RRL Compliance

This product has been tested and complies with MIC Notices No. 1997-41 and 1997-42. The product has been marked with the MIC logo to illustrate compliance.



1. 기기의 명칭(모델명) :
2. 인증번호 :
3. 인증받은 자의 상호 :
4. 제조년월일 :
5. 제조자/제조국가 :

The English translation for the above is as follows:

1. Type of Equipment (Model Name): SE7501BR2
2. Certification No.: Contact Intel Representative
3. Name of Certification Recipient: Intel
4. Date of Manufacturer: Marked on Product
5. Manufacturer / Nation : Intel

Australia / New Zealand

This product has been tested and complies with AS/NZS 3548. The product has been marked with the C-Tick mark to illustrate compliance.

Index

A

- ACPI, see Advanced Configuration and Power Interface
- Adaptec AIC-7901, 9, 13, 16
- Administrator password, 84
- Advanced Configuration and Power Interface, 20
- AIC-7901, 9
- air flow, 38
- Alerting, 23
- Alerts, 23
 - configuring, 23
- APIC, 13
- asset tag, how to load, 98

B

- Back Panel Connectors, 12
- Baseboard Management Controller, 21, 22, 77, 79
 - updating, 77
- battery
 - disposing of safely, 54
 - installing, 55
 - removing, 54
- beep codes, 57
- BIOS, 20, 75, 77
 - changing the language, 75
 - recovery, 113
 - update, 86
 - upgrading, 73, 74, 77, 95
- BIOS Redirection, configuring, 69
- BIOS Setup, 58
 - Advanced Menu, 62
 - Boot Menu, 71
 - exiting, 72
 - Main Menu, 60
 - menu, 60
 - navigation, 59
 - saving changes, 72
 - Security Menu, 66
 - Server Menu, 67

- BIOS upgrade file, 74
- BMC, 22. see Baseboard Management Controller
- board, how to install, 36
- boot monitoring, configuring, 68
- boot priority, 71, 81
 - one-time change, 57
- Boot sequence, selecting, 83
- booting
 - cold, 105
 - warm, 105
- bumper, how to install, 35

C

- cable
 - CPU fan, 45, 51
 - floppy drive, 38
 - SCSI, 38
- cable routing, 38
- Caution
 - avoid damaging jumpers when changing, 30
 - avoid touching processor pins, 39
 - handle boards carefully, 30
 - power button does not turn off system AC power, 29
 - selecting correct processor, 39
- chassis cover, install, 53
- Chassis intrusion, 28
- chipset, 9
- Client System Setup Utility, 77
- CMOS, 58, 77
 - corrupted, 58
 - jumper, 58
- cold boot, 105
- Configuration
 - how to restore, 101
 - how to save, 100
 - reseting, 62
 - save and restore, 81, 100
- connector
 - back panel, 12
 - floppy disk, 14

- keyboard, 14
- mouse, 14
- NIC, 19
- parallel port, 13
- RJ45, 19
- serial port, 13
- USB, 10
- VGA, 17
- Console Redirection, 80
- controller
 - diskette, 64
 - Ethernet, 10
 - floppy disk, 13
 - keyboard, 13
 - memory, 12
 - mouse, 13
 - network, 9, 18
 - SCSI, 16
 - video, 9, 17, 67
- CPU fan cable
 - install, 45
 - removing, 51
- CRT displays, 17
- CSSU, 77

D

- device driver, how to create diskettes, 98
- diagnostics, preparing system for testing, 107
- DIMM
 - sizes, 9, 15
 - sockets, 9, 15
- Direct Platform Control, 23, 77, 79, 80
 - failure to connect, 80
 - redirect mode, 80
 - service partition mode, 80
- diskette controller, 64
- diskettes, how to create, 98
- DPC, see Direct Platform Control
- DPC Console, 80
 - modes, 80
- DPC over LAN, 80
- Drive type, select, 61

E

- E7501 chipset, 9
- ECC, 15

- Embedded devices, 9, 16, 17
- embedded NIC, disabling, 18
- EMC compliance, 18, 121
- emergency management, 24
- Emergency Management Port, 21, 23, 80, 87, 92
 - configuring, 23
- EMP, see Emergency Management Port
- ESD
 - add-in boards, 30
 - avoiding damage to product, 30
 - do not touch processor pins, 39
- Ethernet, 9, 10, 17
- Ethernet controllers, 10
- event log, configuring, 70
- Events, 22
 - alerts, 23

F

- fan heat sink, disconnecting, 51
- Fast Ethernet, 9, 10, 18
- FCC compliance, 123
- FC-mPGA2, 9
- Field Replaceable Unit, 21, 22, 77, 79, 80, 81
 - viewing, 85
- firmware, update, 86
- Firmware Update Utility, 77, 95
 - how to run, 95
- fixed disk write protect, 28
- Flip-chip-micro Pin Grid Array2, 9
- Floppy A
 - select type, 60
- floppy disk connector, 14
- floppy disk controller, 13
- floppy drive cable, 38
- floppy write-protect, 10
- form factor, 10
- front panel header, location on server board, 120
- Front Panel reset, 25
- FRU, see Field Replaceable Unit
- FRU/SDR Load Utility, 22, 77, 79, 95
 - how to create diskettes, 98
- FRU/SDR records, how to load, 96

G

getting help, 117
gigabit ethernet controller, 18

H

Hard Disk Pre-delay, configuring, 60
hardware requirements, 31
heat sink
 clearance, 14
 fan, 51
 installation, 42, 50
 retention clips, 51
HI 2.0 bus interface, 12
Hot Key, 84
Hot keys, 26
Hot Keys, 75

I

I/O
 PCI expansion slots, 9
 ports provided, 10
I/O shield, 31, 32, 45
 attaching gasket, 32
 attaching label, 33
 installing, 33
I/O subsystem core, 12
ICH3
 features, 13
 role, 13
ICH3 I/O controller, 9
ICH3-S, 12
IDE, configuring, 60
IDE interface, 13
iFLASH, 73, 113
Intel® Server Management, 21, 24, 79, 99, 102
 how to install, 103
 running with SmaRT Tool, 102
Intel® 82540, 9, 10, 17, 18
 features, 18
Intel® 82550, 9, 10, 17, 18
 features, 18
Intel® E7501 chipset, 9
Intel® SmaRT Tool, 102
Interrupt controller, 13
ISM, see Intel® Server Management

J

JEDEC DDR266, 15
jumpers
 configuring, 119
 do not damage when changing, 30
 location, 119

K

keyboard connector, 14
keyboard controller, 13
keyboard port, 10

L

label, 30, 33
LAN alerts
 configuring, 93, 94
language, 113
 select, 61, 83
 selecting, 75
LBA Mode Control, configuring, 61
lithium backup battery
 disposing of safely, 54
 installing, 55
 removing, 54
LPC, 13

M

MCH memory controller, 9
MCH, features, 12
memory, 15
 capacity, 9
 maximum, 15, 52
 minimum, 15, 31, 52
 test, 65
 video amount, 9
 what type to install, 9
memory bank, status, 65
memory controller, 12
mouse connector, 14
mouse controller, 13
mouse port, 10
M-ROMB, 17
Multi-Sector Transfer
 select, 61

N

National Semiconductor[†] PC87417 Super I/O Controller, 10
network, 19
 controller, 9, 18
NIC LED, 19
North Bridge, 9, 12
NVRAM, corrupted, 58

O

On-board NIC, configuring, 63
On-board SCSI, configuring, 63
On-board video, configuring, 63
Option ROM Menu Mask, 26

P

P64H2, 13
P64H2 64-bit I/O hub, 9
paging alerts, configuring, 91, 92
parallel port, 10, 13, 64
parallel port address, 13
parallel port connector, 13
parallel port interrupt, 13
password, 10, 25
 administrator password permissions, 27
 boot, 66
 clearing, 27
 configure, 66, 81
 configuring, 83
 configuring administrator, 66, 84
 configuring user, 84
 forgotten, 114
 invalid password entered, 27
 user password permissions, 27
password clear jumper, 114
PCI
 32-bit / 33MHz, 15
 32-bit/33MHz, 13
 configuring, 62, 63
 embedded devices, 9
 expansion slots, 9
 speed, 17
PCI Bus Master Interface, 18
PCI bus segments, 15
PCI Riser, 16

PCI-X, 9, 15, 16
 add-in card, 16
 features, 16
 speed, 16
PCI-X 64-bit / 100MHz, 15
Platform Event Management, 22
Platform Event Paging, 23
Plug-and-Play, 13, 16, 17
POST, 57, 58, 75
 beep codes, 57
 diagnostic messages, 57
Power, 10
Power management, 13
Power supply, minimum, 31
Power Switch inhibit, 67, 84
power switch mask, 28
problems
 after running new application software, 106
 after system has been running correctly, 106
 application software, 111
 BIOS recovery, 112
 bootable CD-ROM not detected, 111, 115
 cannot connect to network server, 110
 CD-ROM drive activity light, 110
 confirm OS loading, 107
 diagnosing, 80
 diskette drive light, 110
 front panel LED, 111
 hard drive light, 110
 initial system startup, 105
 network, 111
 network LED, 111
 no characters on screen, 108
 PCI installation, 111
 power light, 108
 preparing system for diagnostic testing, 107
 random error in data files, 106
 screen characters incorrect, 109
 system cooling fans do not rotate, 109
 system lights, 107
processor
 adding second processor, 39
 apply thermal grease, 41, 49
 heat sink, 42, 50

- installing, 39
- replacing, 51
- retention clips, 42, 51
- test, 62
- processor airflow, 14
- processor speed, 14
- processor wind tunnel, 14, 40
 - alignment, 45
 - installation, 45
 - installing, 40, 41
 - retention clips, 42, 51
 - retention device, 41, 51
- Processor Wind Tunnel fan
 - installation, 43
- processor(s), what type to install, 9, 14, 31, 39
- PWT, see processor wind tunnel

R

- real time clock, configure settings, 55
- recover BIOS, 113
- Recovery, 112
 - diskette, 113
 - jumper, 112
 - mode, 112, 113
- regulatory information, 121
- remote access, 87
- remote LAN access, configuring, 87, 88
- remote management, 24, 87
- remote serial / modem access, configuring, 89, 90
- reset system, 105
- RJ-45 Serial Port, 23
- RTC, 20, 54, 55
- rubber bumper, how to install, 35

S

- SCSI cables, 38
- SCSI controller, 9
- SCSI Controller, 16
- SDR, 21, 22
- SDRAM, 17
- Secure Boot, 25
 - unattended start, 26
- secure mode, 25, 26, 27, 66
 - booting into, 67

- effect of, 26
- floppy write protection, 28
- hot key, 67
- immediate activation, 26
- power switch, 67
- timer, 67
- video blanking, 67
- Secure mode, 26
- Secure mode boot, 84
- Secure mode timer, 84
- security, 10
 - features, 25, 60
- Security, 28, 81
 - configuring, 83
- Security menu, Option ROM Menu Mask, 26
- Security options, configuring, 84
- SEL, see System Event Log
- Sensor Data Record, 21, 22, 77, 79, 80, 86, 97
- Sensor Data Records, 81
 - viewing, 86
- Serial A port, 13
- Serial B port, 13
 - accessibility, 23
- Serial over LAN, configuring, 23
- serial port, 10
 - configuring, 64, 69
- serial port connector, 13
- server board
 - component locations, figure, 11
 - how to install, 36
- server board jumpers, location, 119
- Server Configuration Wizard, 77, 78
- Server management, configuring, 67
- Service Partition, 24, 99
 - how to create, 99
- Setup, 58
 - Advanced Menu, 62
 - Boot Menu, 71
 - Exit menu, 72
 - exiting, 72
 - Main Menu, 60
 - menu, 60
 - navigation, 59
 - saving changes, 72
 - Security Menu, 66
 - Server Menu, 67

- sleep states, 20
- SMaRT Tool, 102
 - how to install, 103
 - how to launch, 103
- soft boot, 105
- South Bridge, 9, 12
- SSU, see System Setup Utility
- standoff, placement, 34
- Super I/O Controller, 10
- Super I/O Plug-and-Play Compatible with ACPI-Compliant Controller/Extender, 13
- Switches
 - DC power, 105
 - reset, 105
- system asset tag, how to load, 98
- System Date, setting, 60
- System Event Log, 21, 22, 77, 80
 - clearing, 85
 - viewing, 85
- System Setup Utility, 22, 75, 77, 81, 82, 83, 92
 - accessing help, 82
 - customizing interface, 83
 - how to create diskettes, 81, 98
 - how to run, 82
 - mode, 83
 - navigation, 82
 - run options, 81
- System Time, setting, 60

T

- TFT displays, 17
- Transfer Mode, 61

U

- Ultra320, 9
- Ultra DMA Mode, configuring, 61

- upgrade Flash utility, 73
- USB, 13
 - configuring, 63, 64
- USB connector, 10
- USB ports, 10, 64
- User binary, 113
- User password, 84
 - configuring, 84
- User Password on boot, 25
- utility diskettes, how to create, 98

V

- VGA connector, 17
- video, memory, 9
- Video blanking, 67, 84
- video controller, 9, 17, 67
- video port, 9
- video subsystem, 17
- voltage regulator, 14

W

- Wake on LAN, 10, 18, 20
 - configuring, 65
- Wake on PME, configuring, 65
- Wake on Ring, 10, 21
 - configuring, 65
- Wake on RTC alarm, 21
 - configuring, 65
- Warning
 - components may be hot, 29
 - dispose of lithium battery safely, 54
 - ESD can damage product, 30
 - hazardous electrical conditions, 29
- WOL, see Wake on LAN18